



13x
4265c
Black



4x
41677
Black



8x
60483
Black



3x
3700
Black



5x
32184
Black



8x
42003
Black



10x
2825
Black



2x
2431
Black



2x
3024
Black



4x
3704
Black




4x
3023
Black



3x
32291
Black



2x
32523
Black

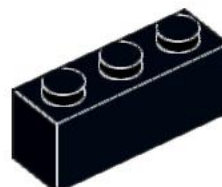

1x
3622
Black



4x
32056
Black



5x
3701
Black



2x
54200
Black



13x
43093
Black



3x
32039
Black



3x
41678
Black




3x
3623
Black



1x
32016
Black



20x
3710
Black

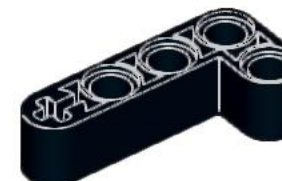

12x
32140
Black



9x
4274
Black



46x
2780
Black



1x
62462
Black



15x
6632
Black



46x
6558
Black



3x
3021
Black



7x
32249
Black



7x
3713
Black



34x
6536
Black



2x
32013
Black



28x
4519
Black



3x
6541
Black



2x
4460b
Black



1x
2905
Black



23x
3666
Black



10x
3460
Black



27x
32073
Black



8x
32526
Black



7x
3894
Black



5x
3702
Black



8x
32316
Black



2x
32063
Black



2x
32524
Black



2x
3035
Black



3x
3706
Black



4x
40490
Black



5x
32525
Black



6x
2730
Black



2x
3895
Black



1x
32009
Black



4x
41239
Black




4x
3703
Black



10x
32278
Black





5x
4459
Dark Bluish Gray

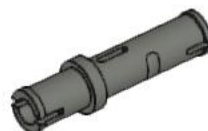

1x
32556
Dark Bluish Gray

+ 2 x shock absorber
(731c01/07/05...)


1

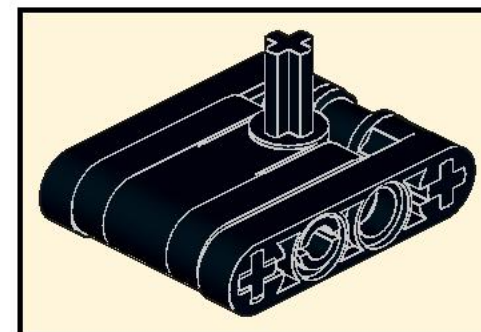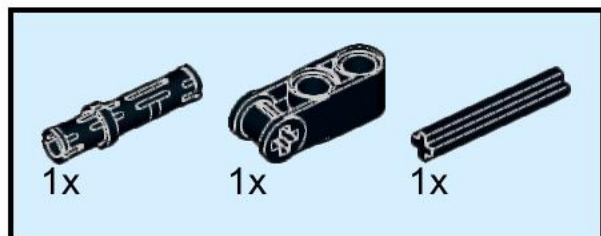


2






3

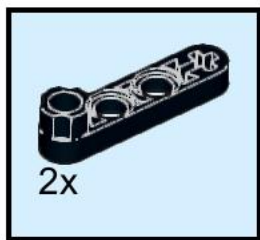


4

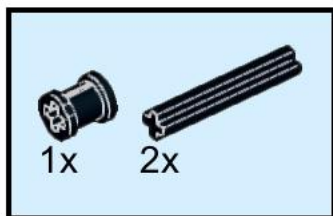



5

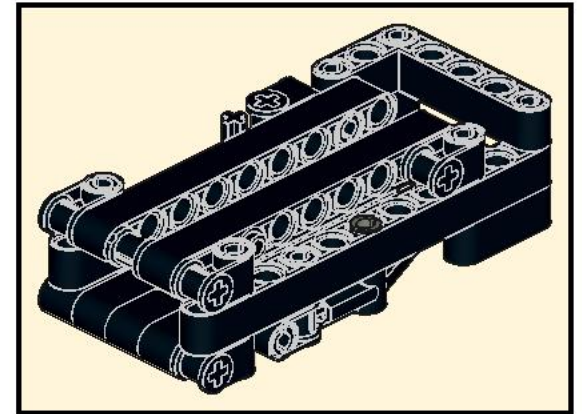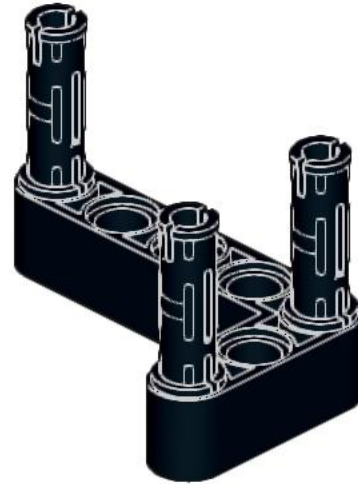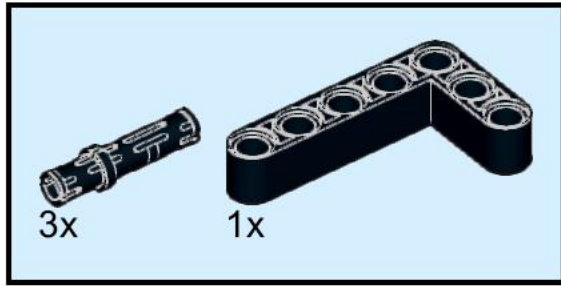



6

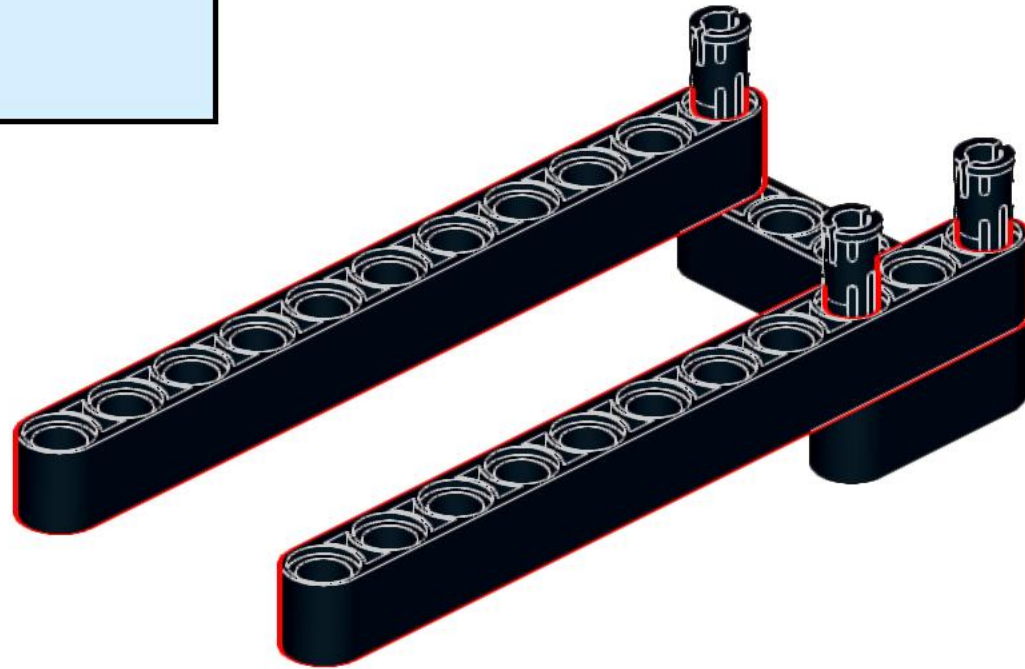



7

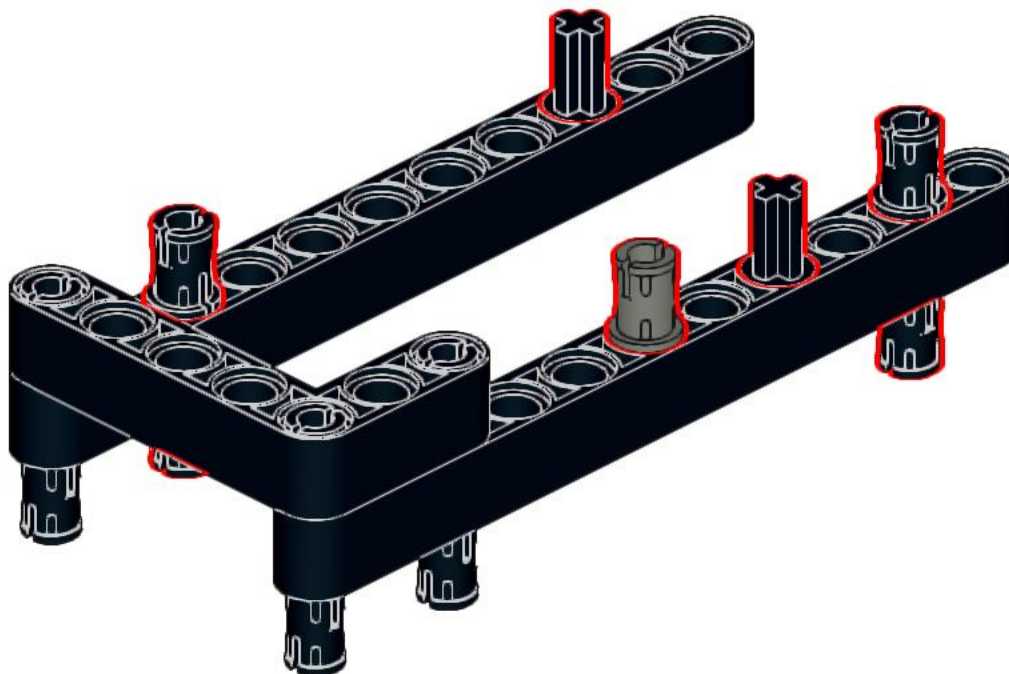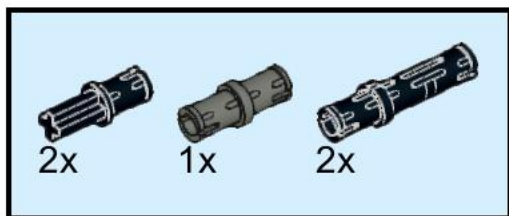



8

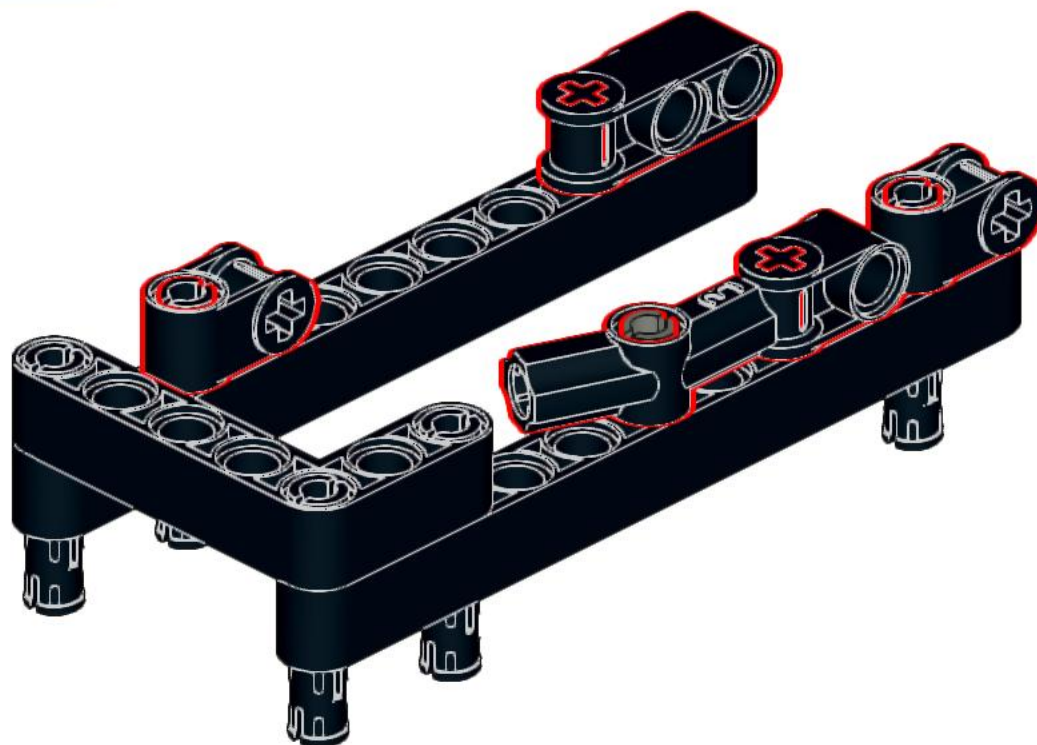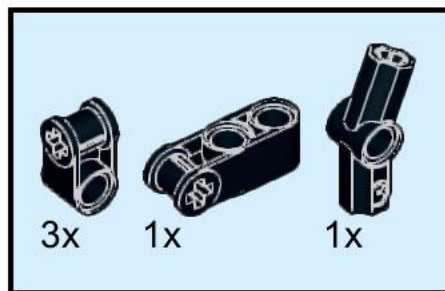



9

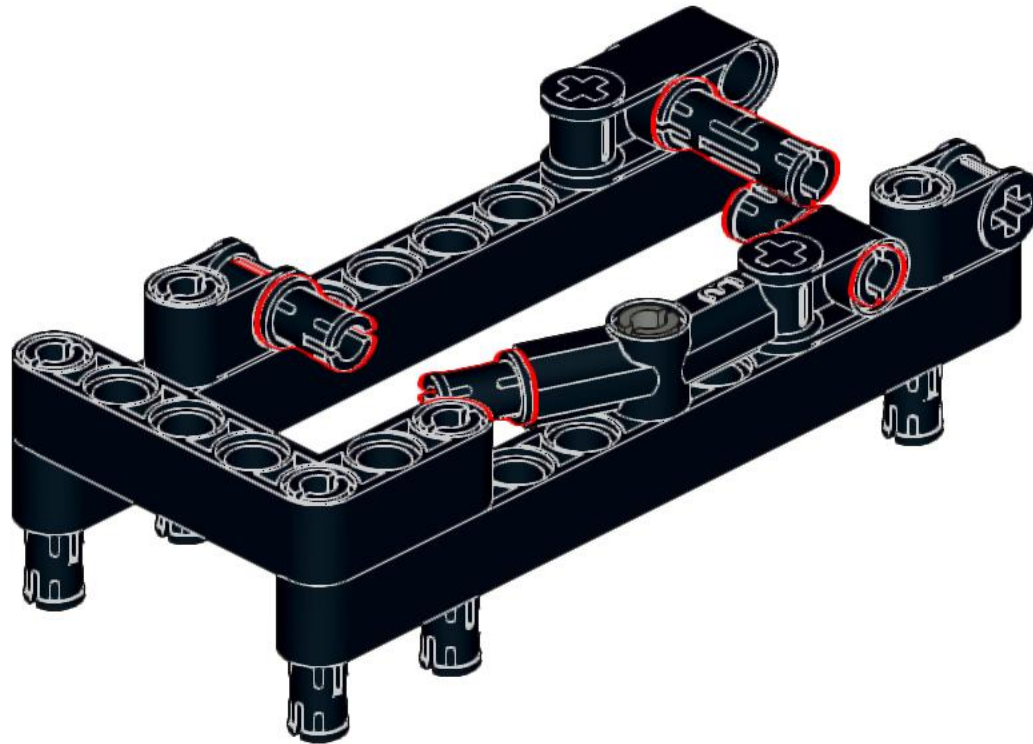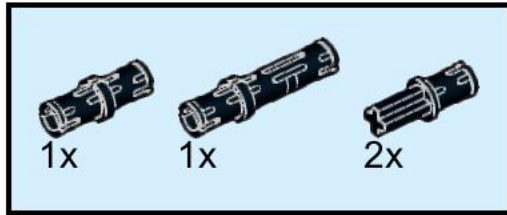



10

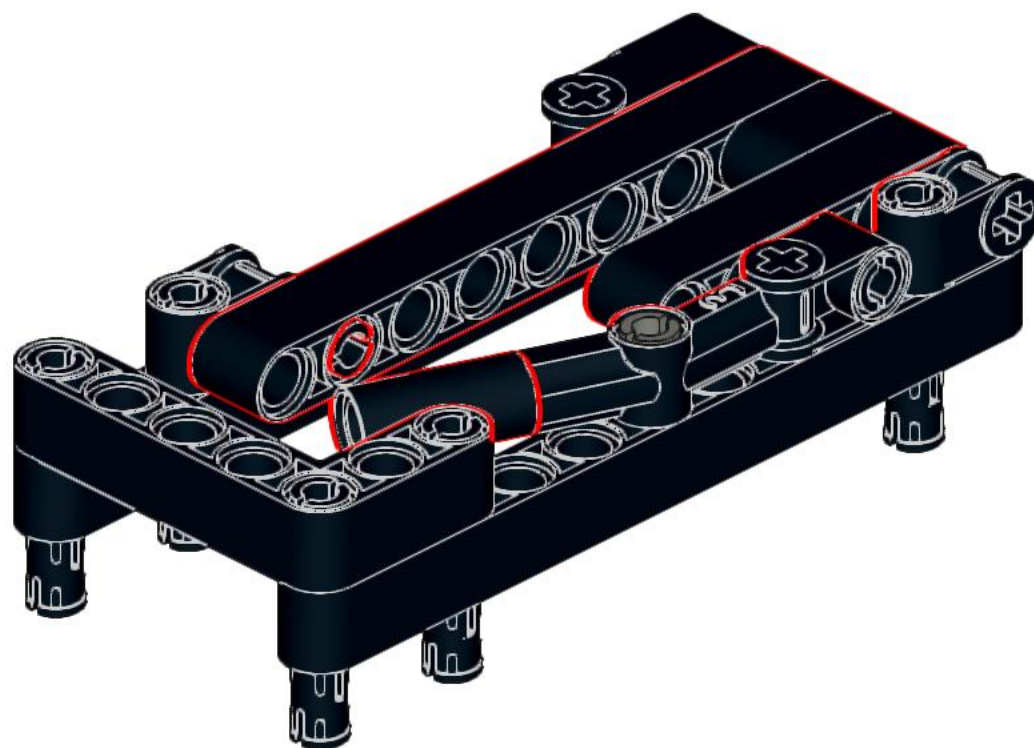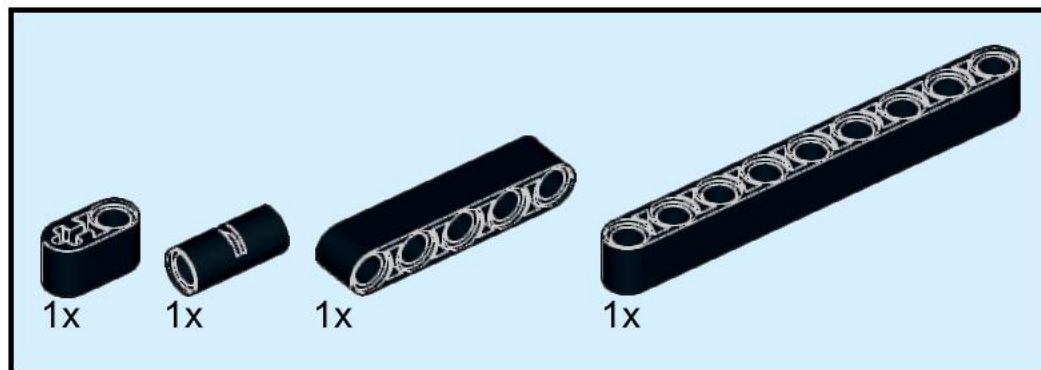



11

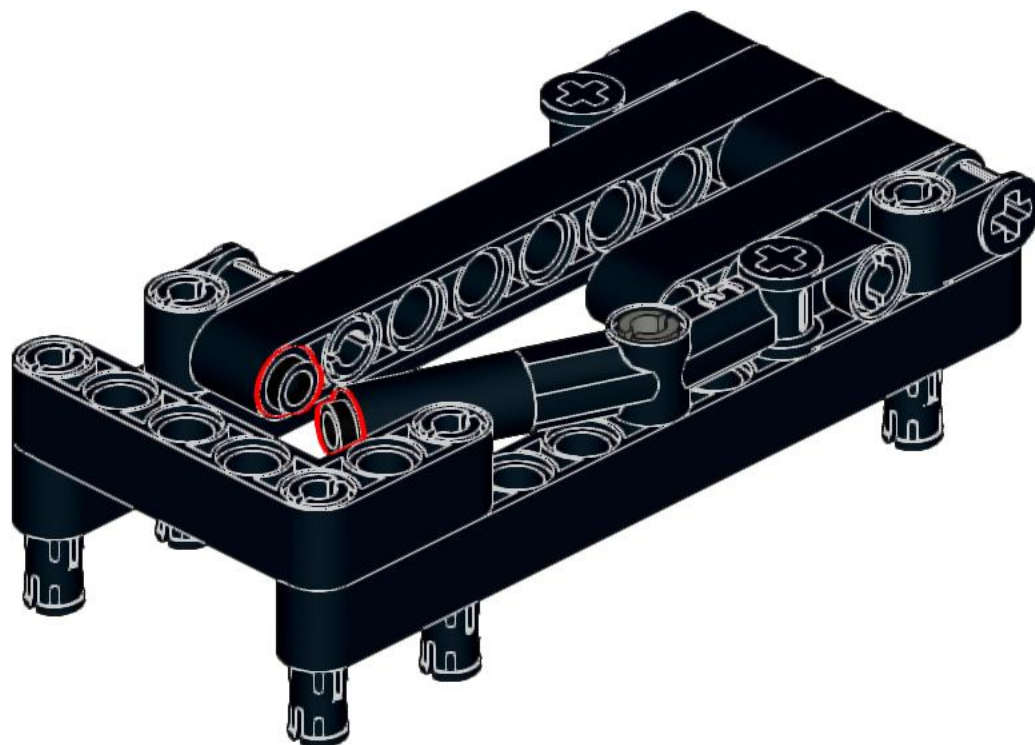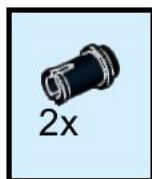



12

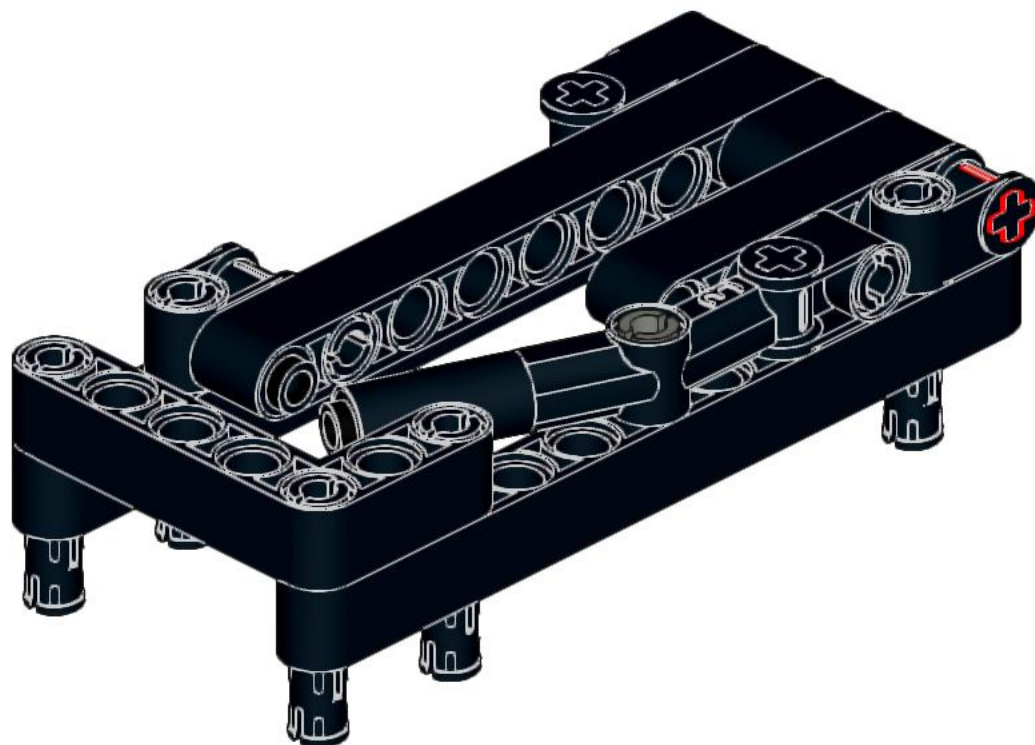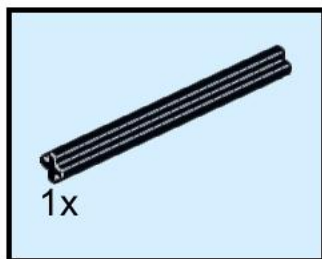



13

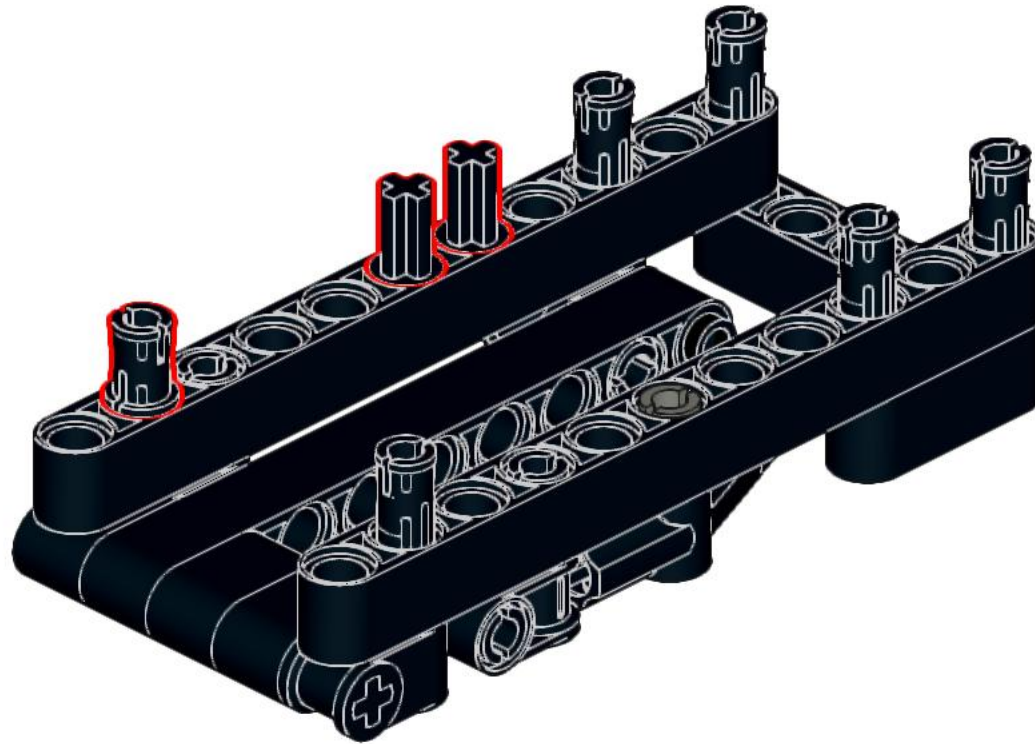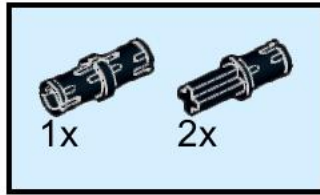



14

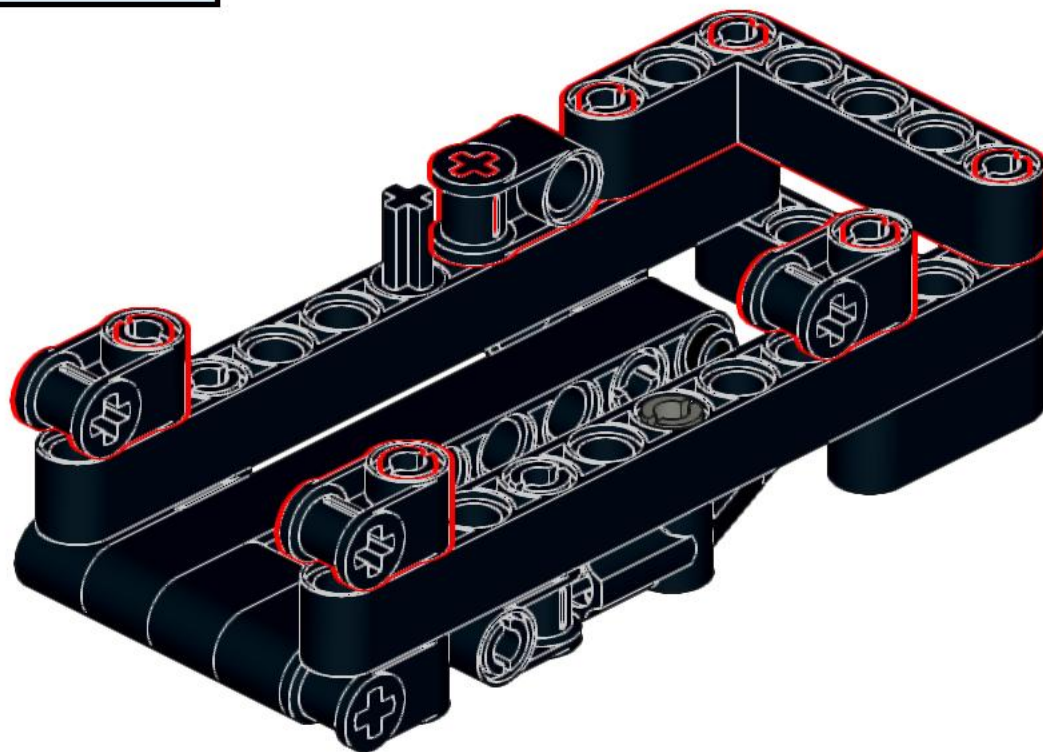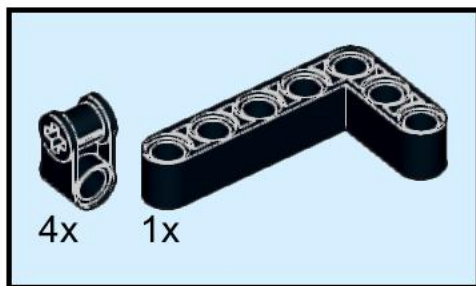


15

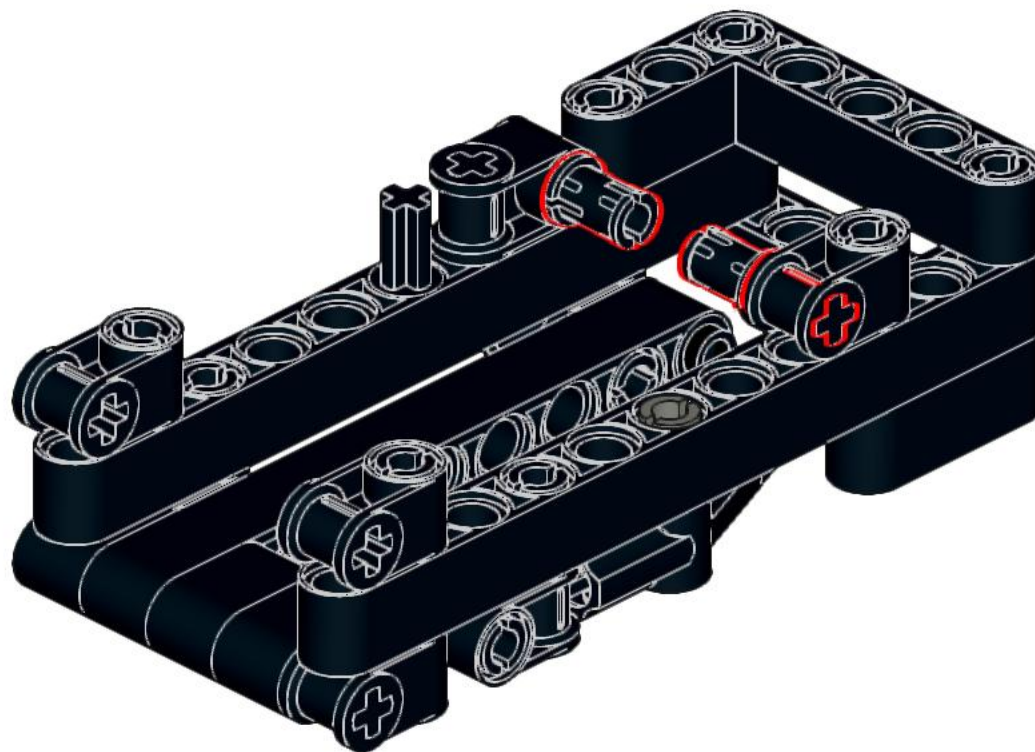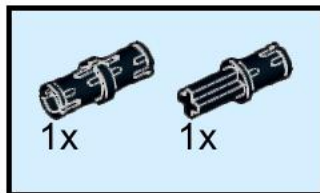



16

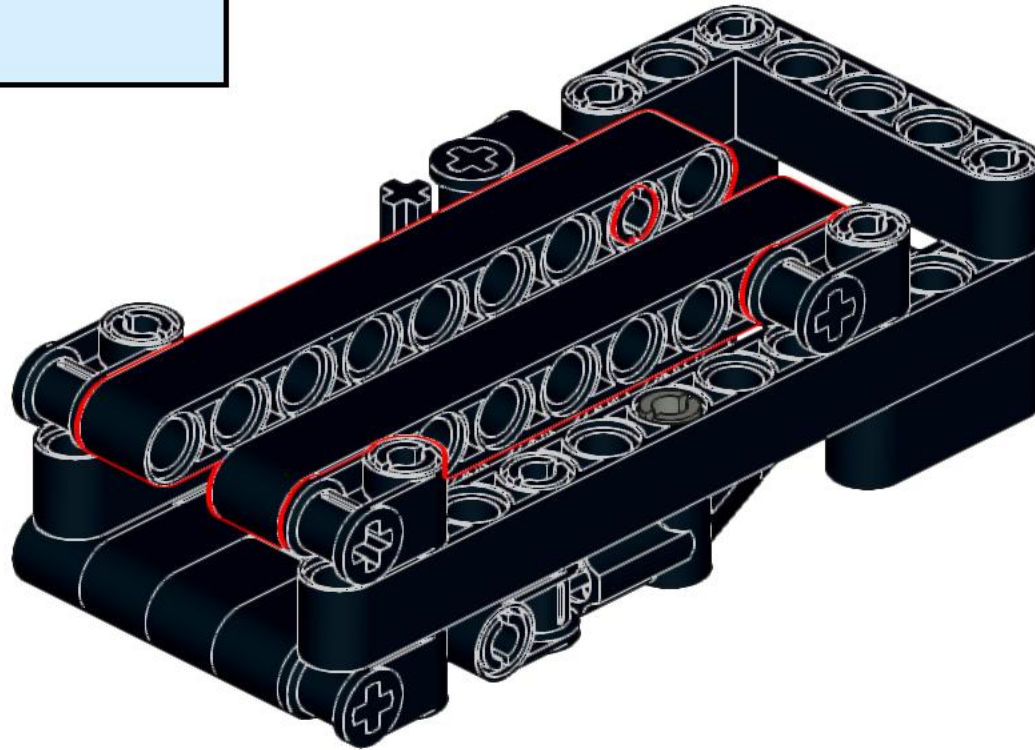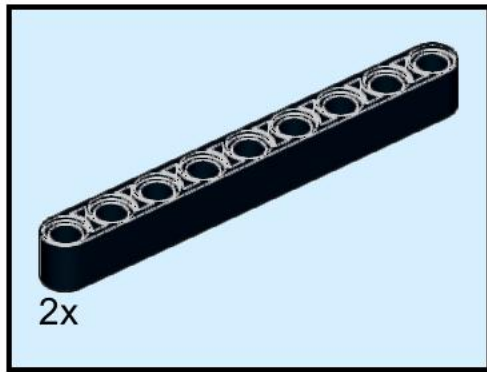


17

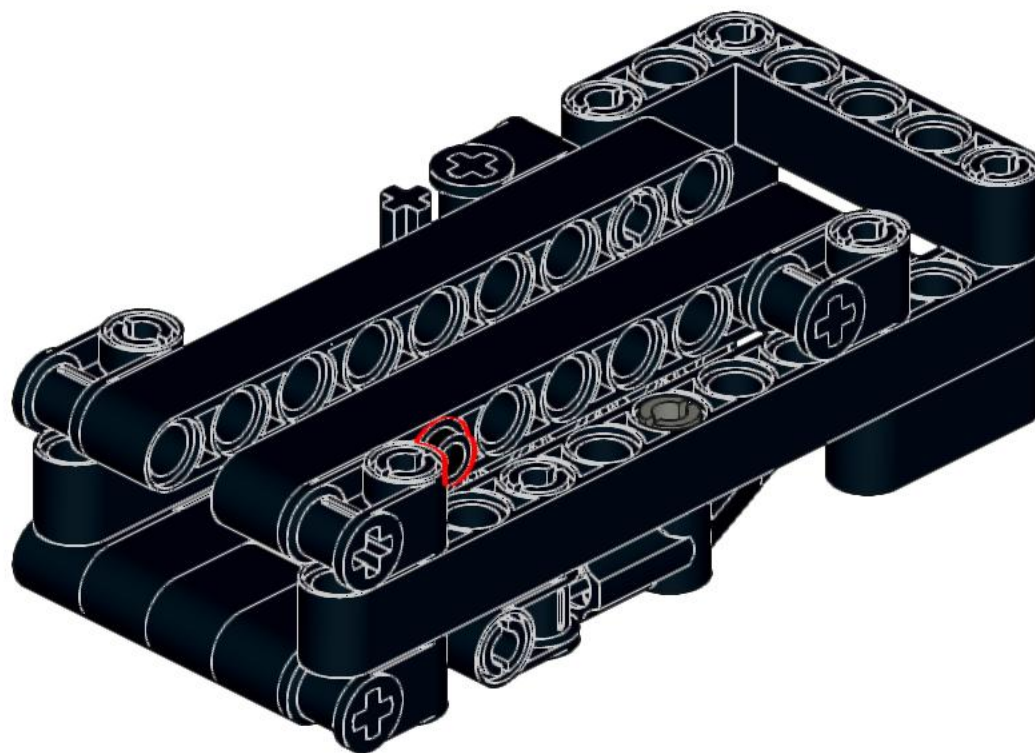




18

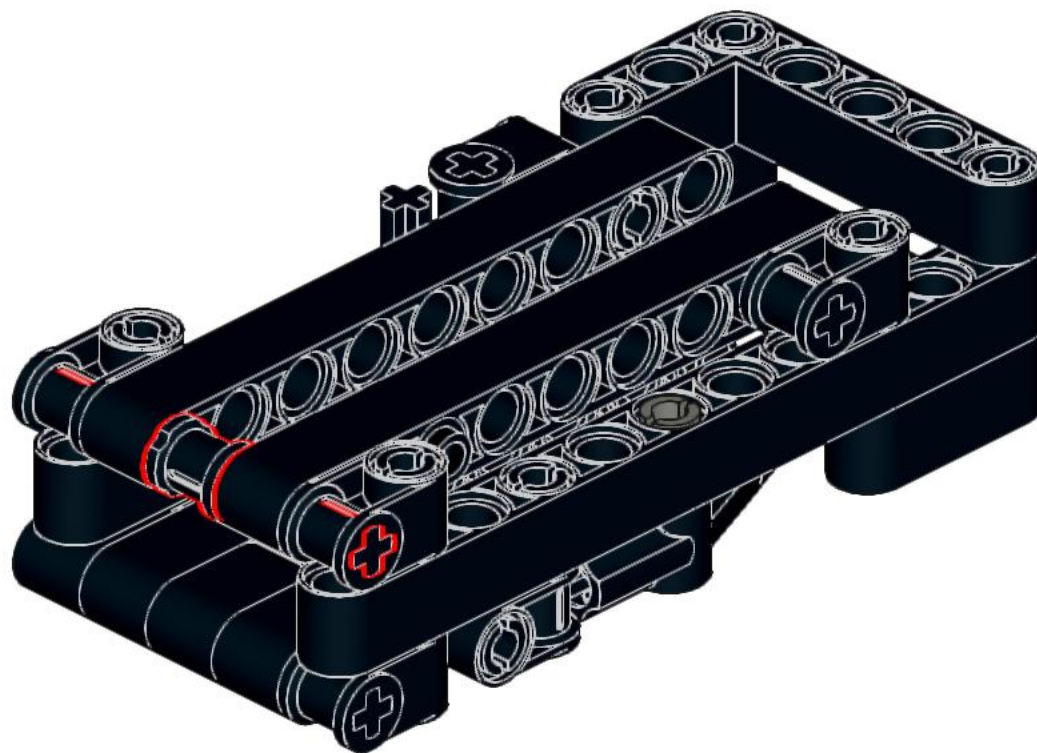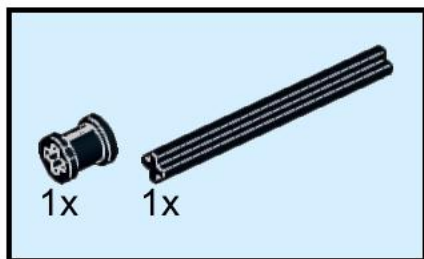



19

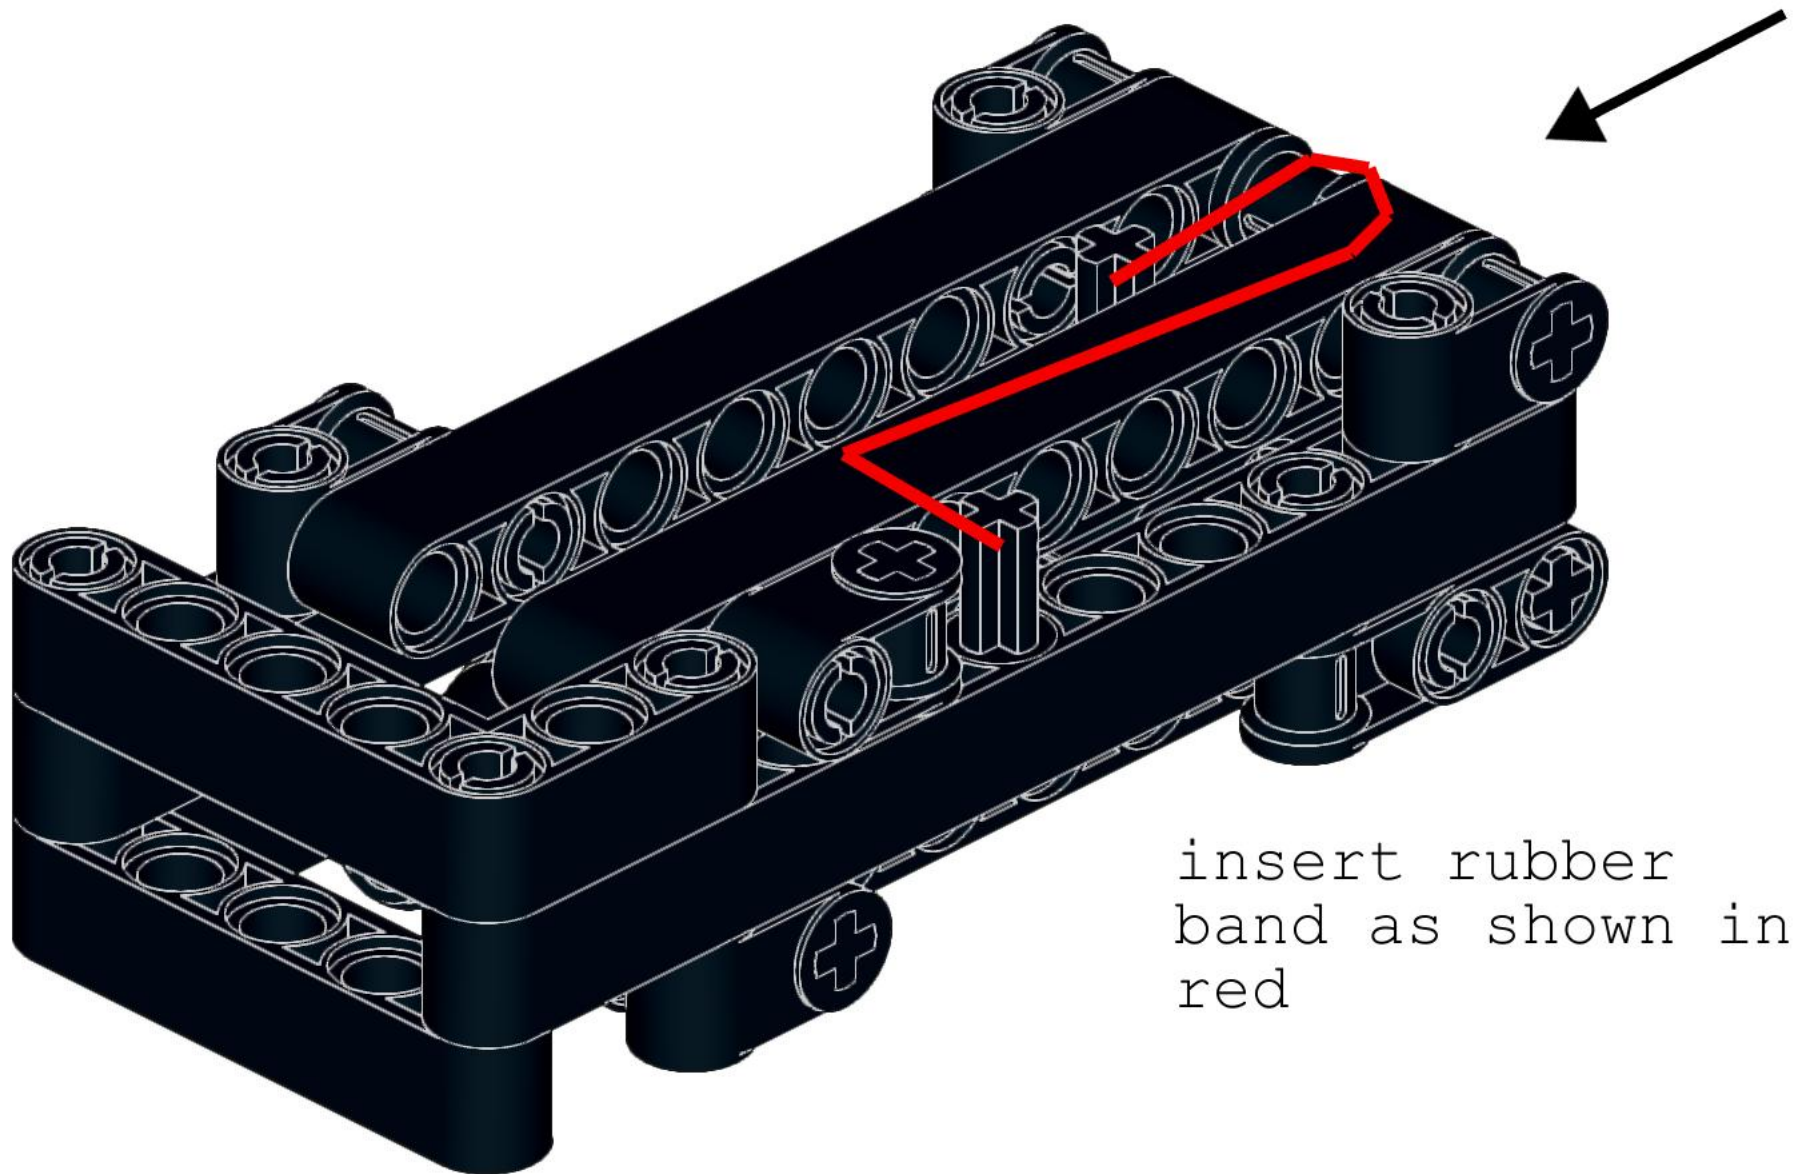



20

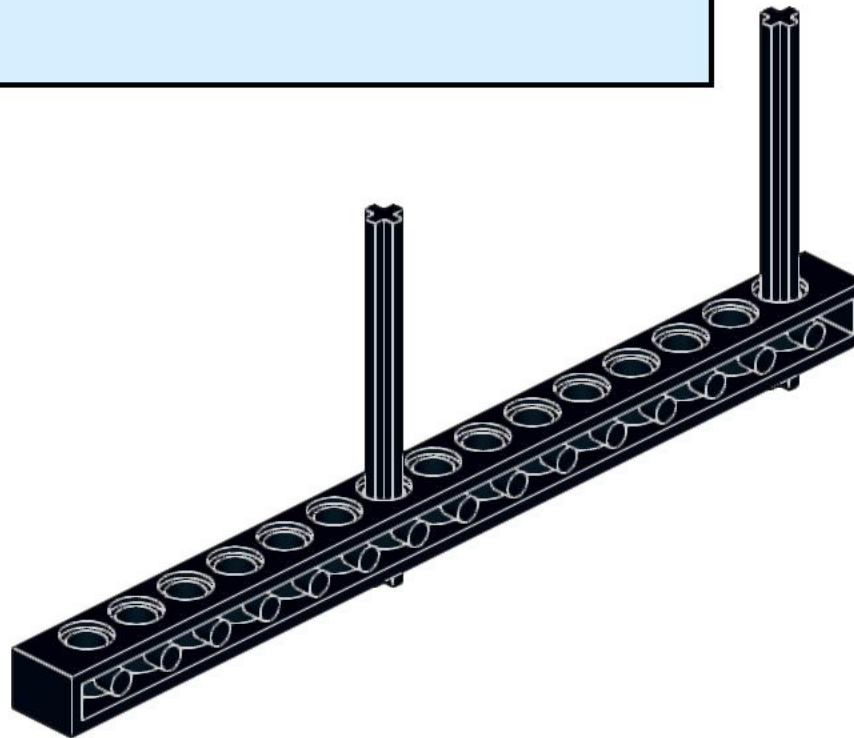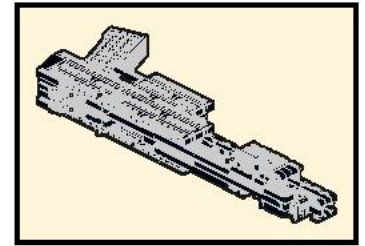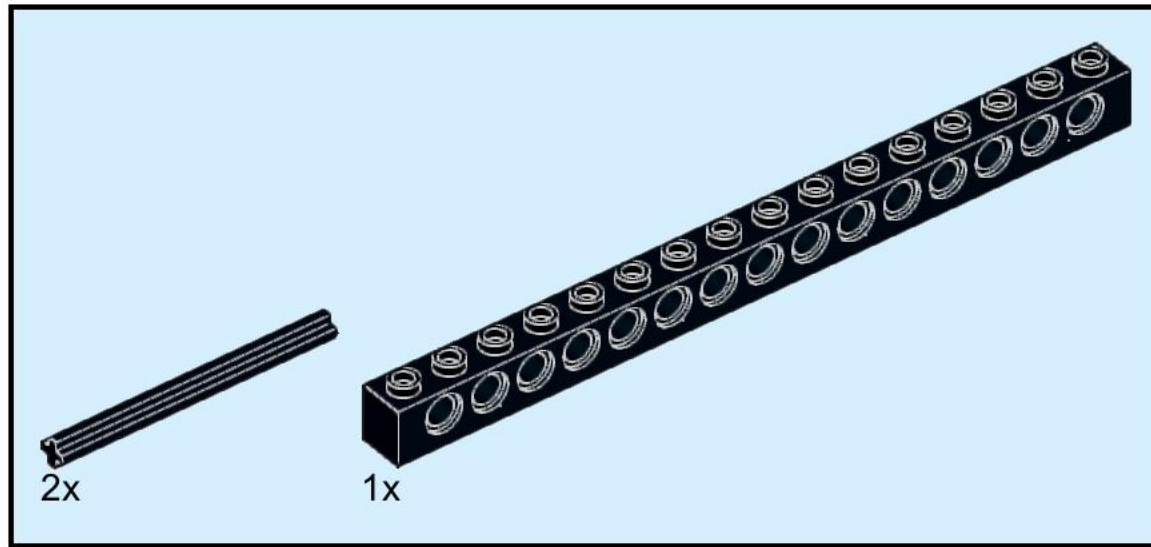



21

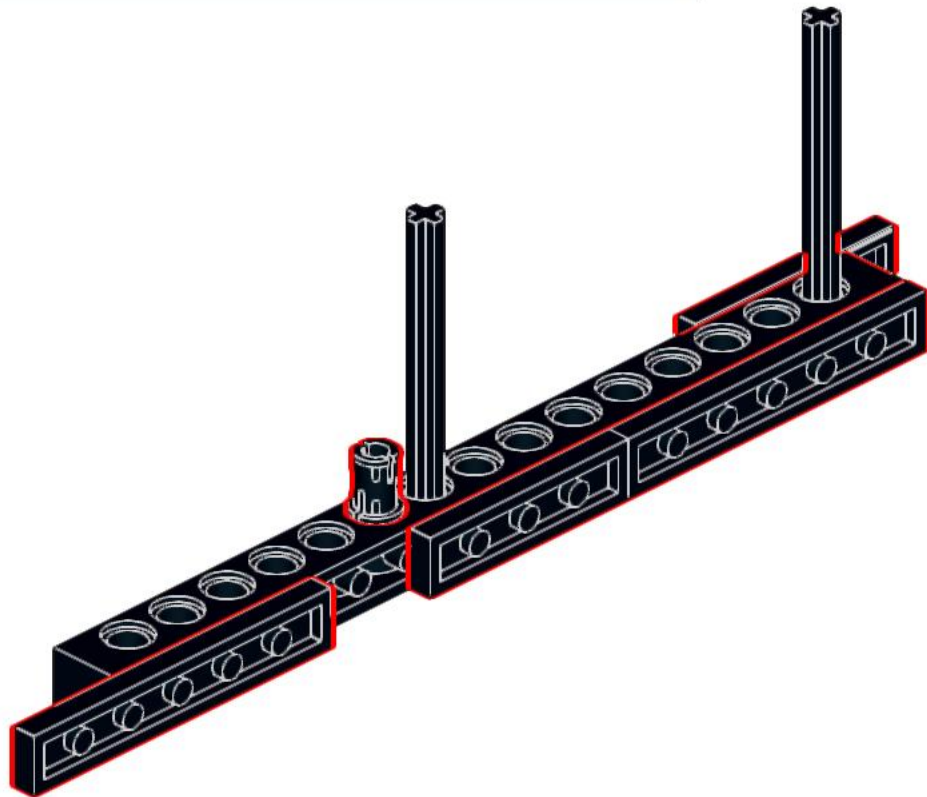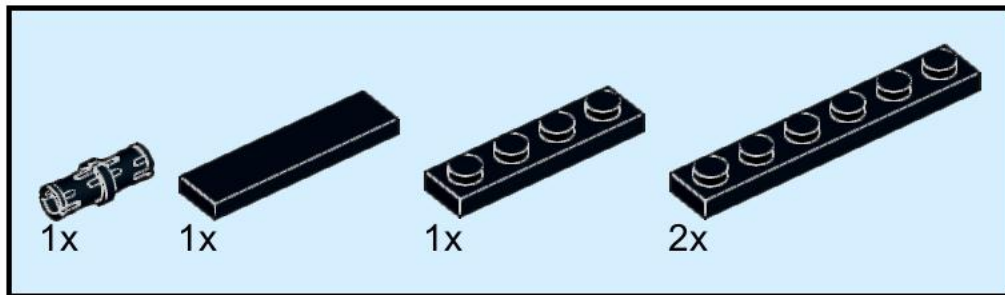



22

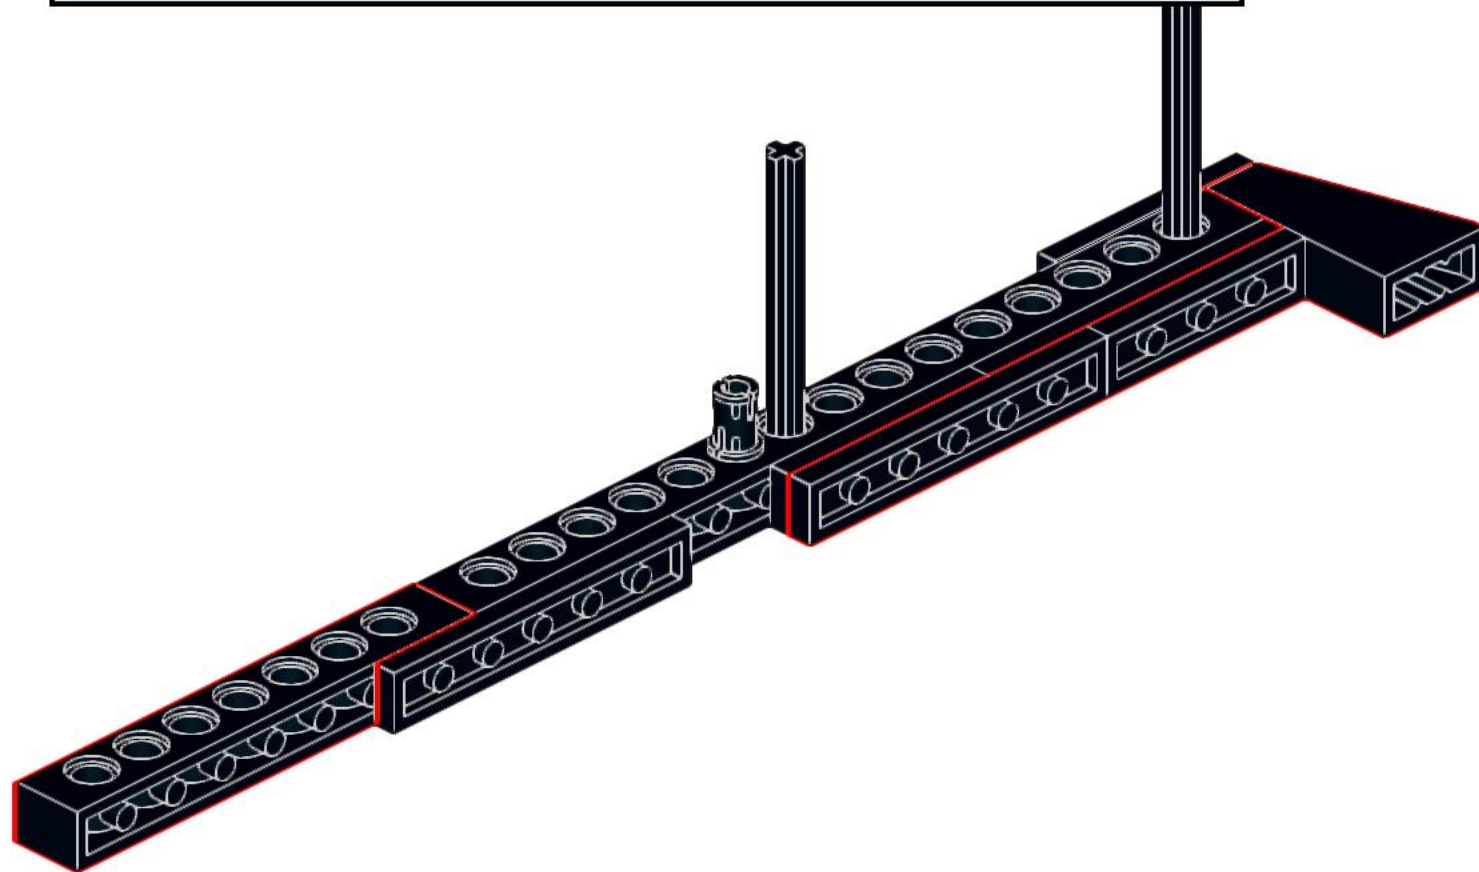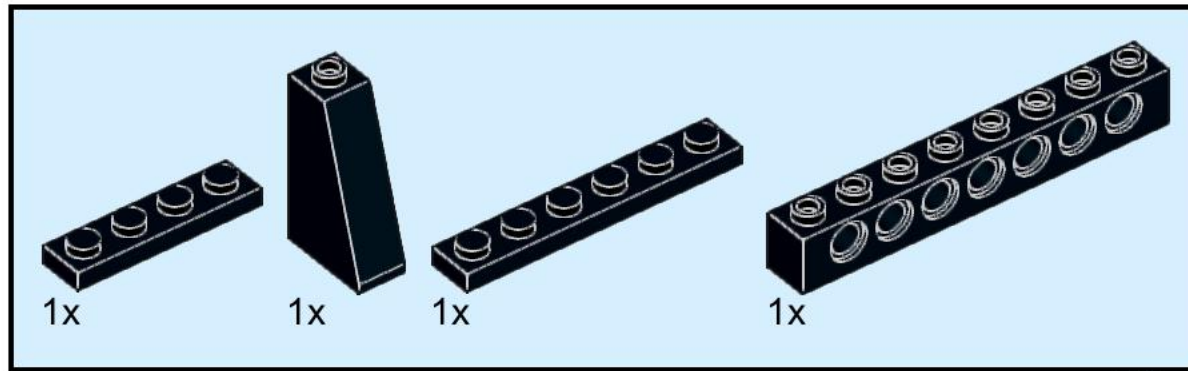



23

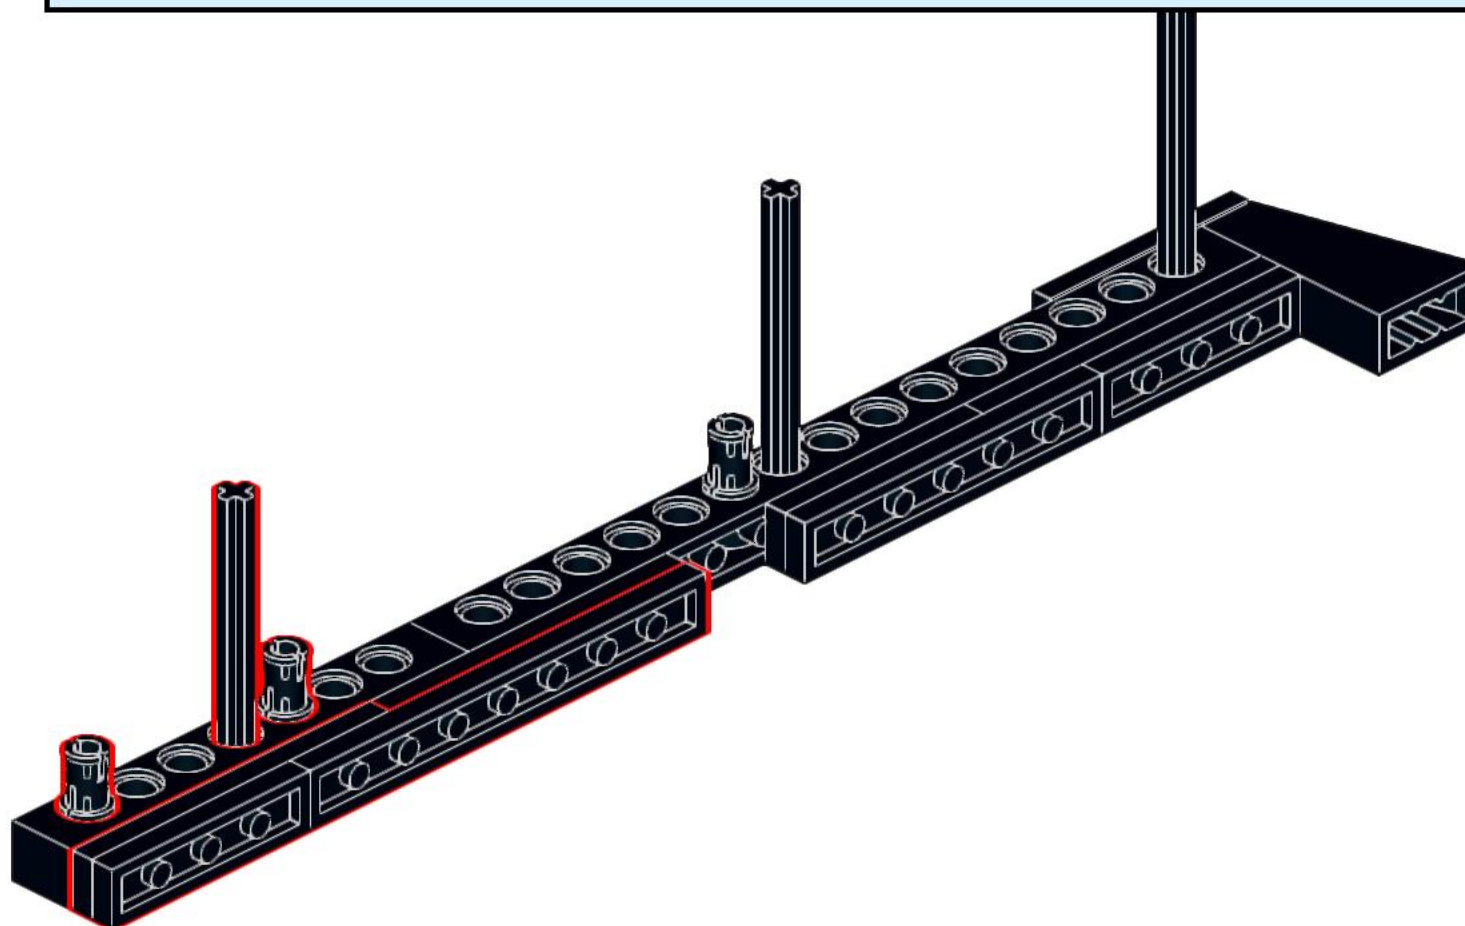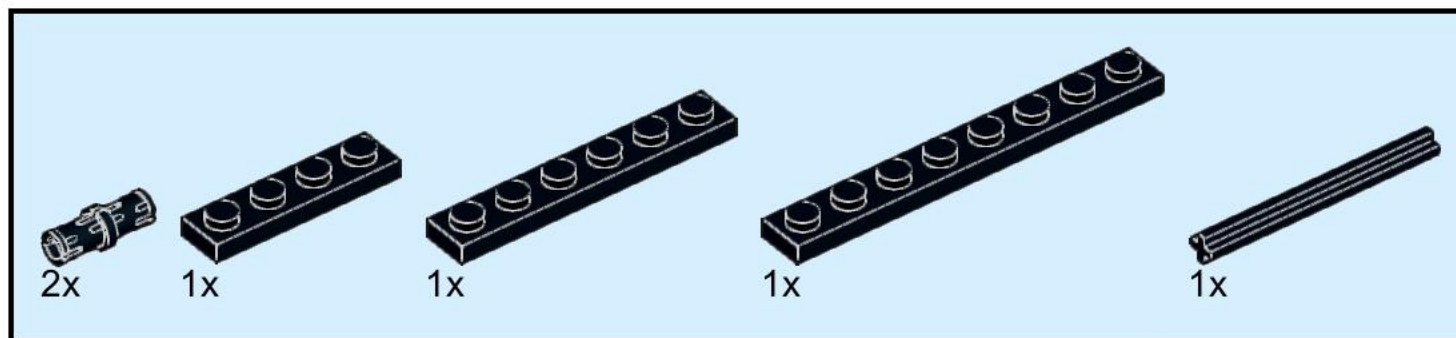



24

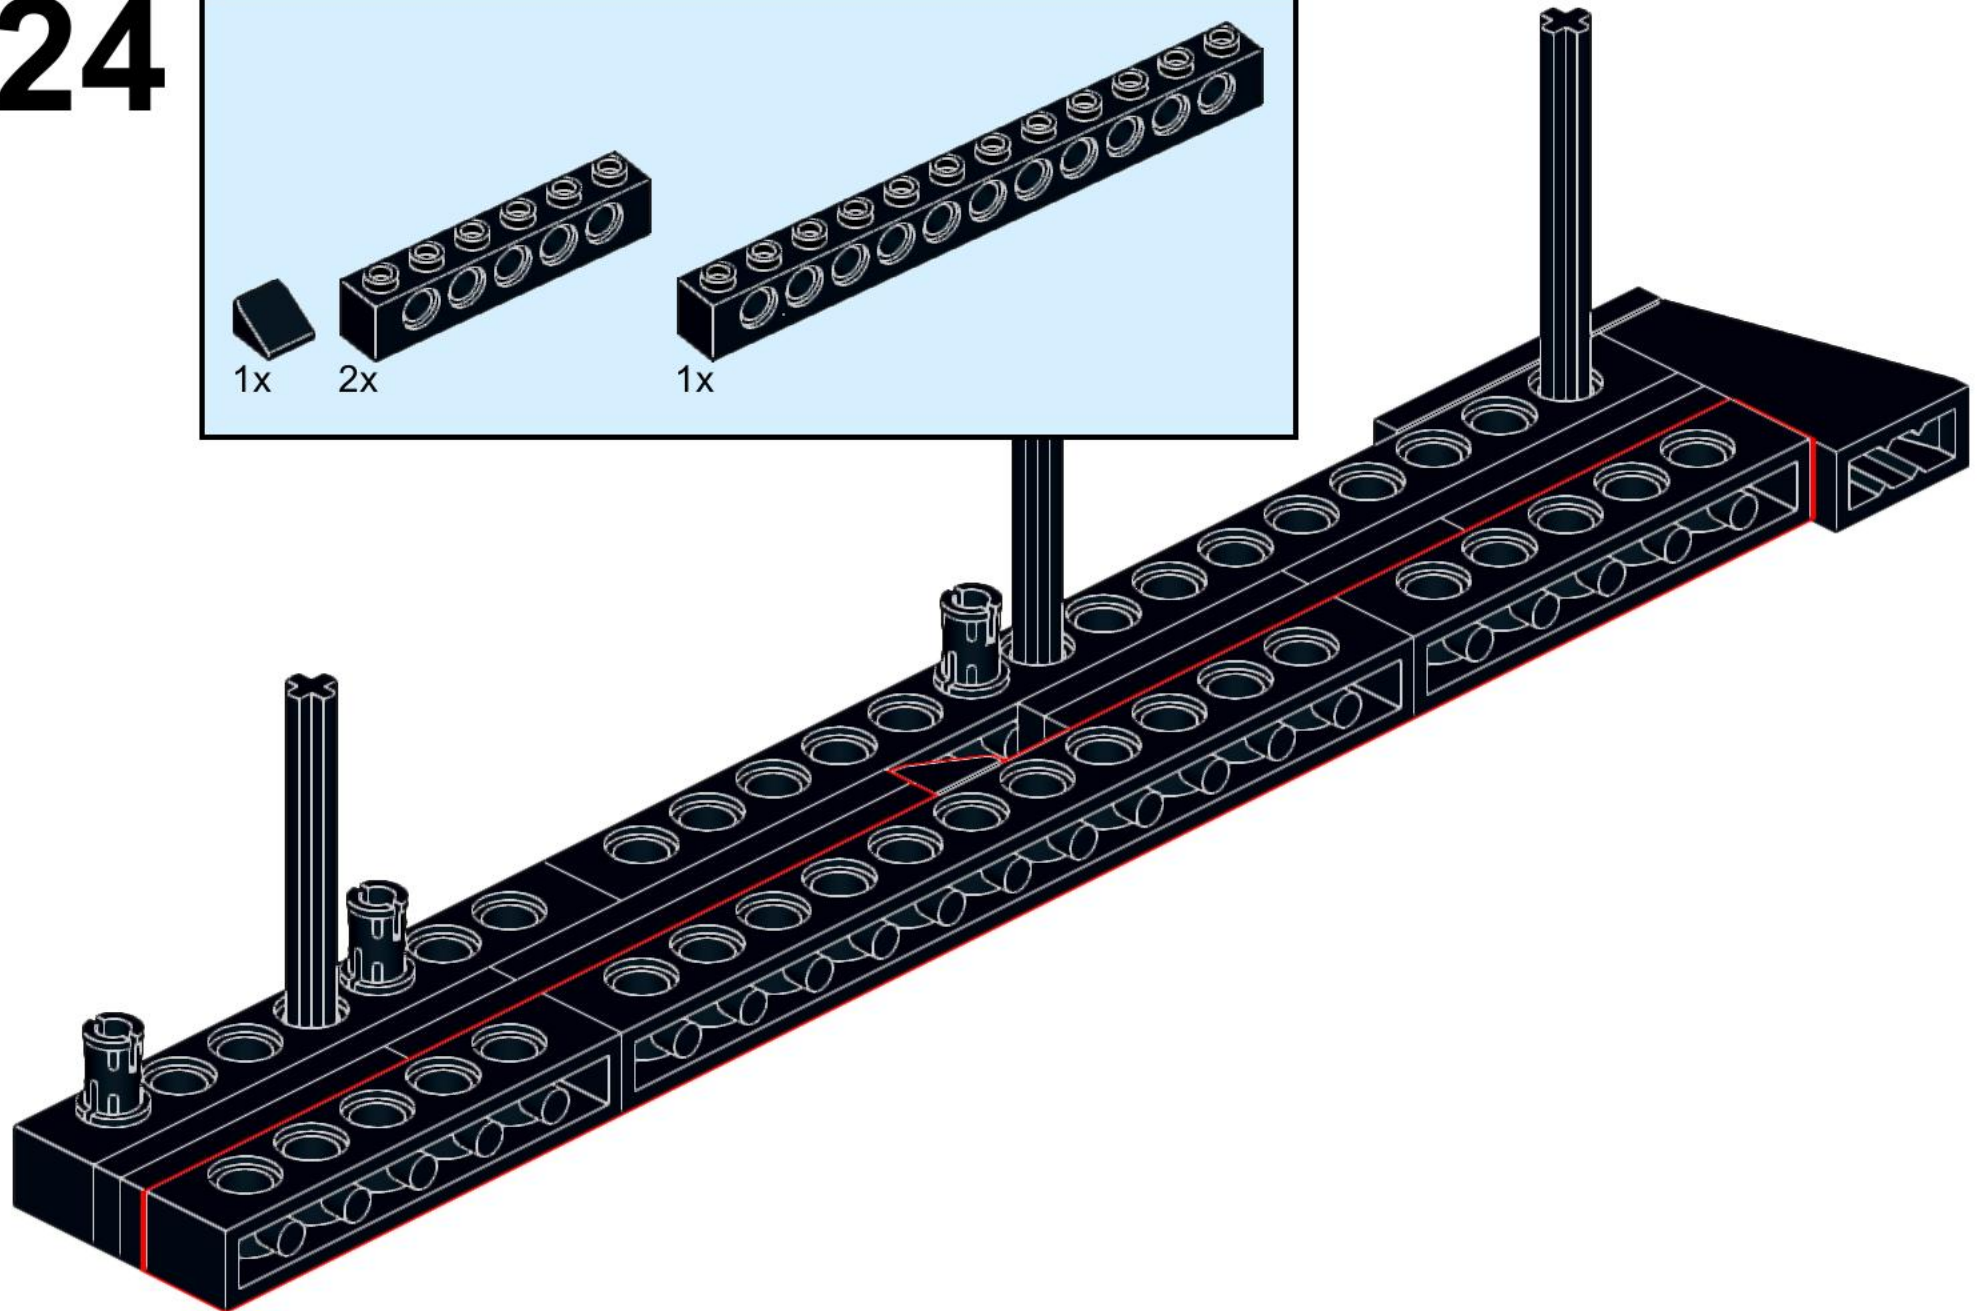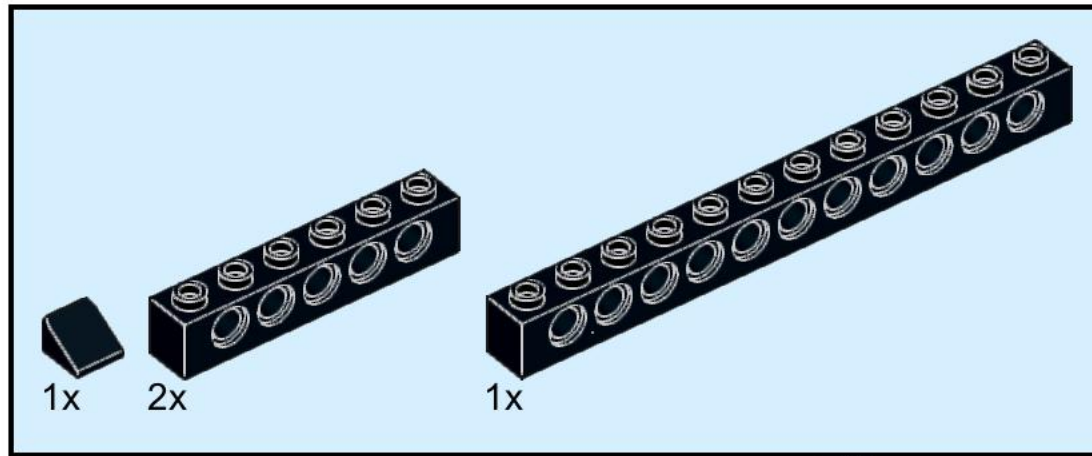


25

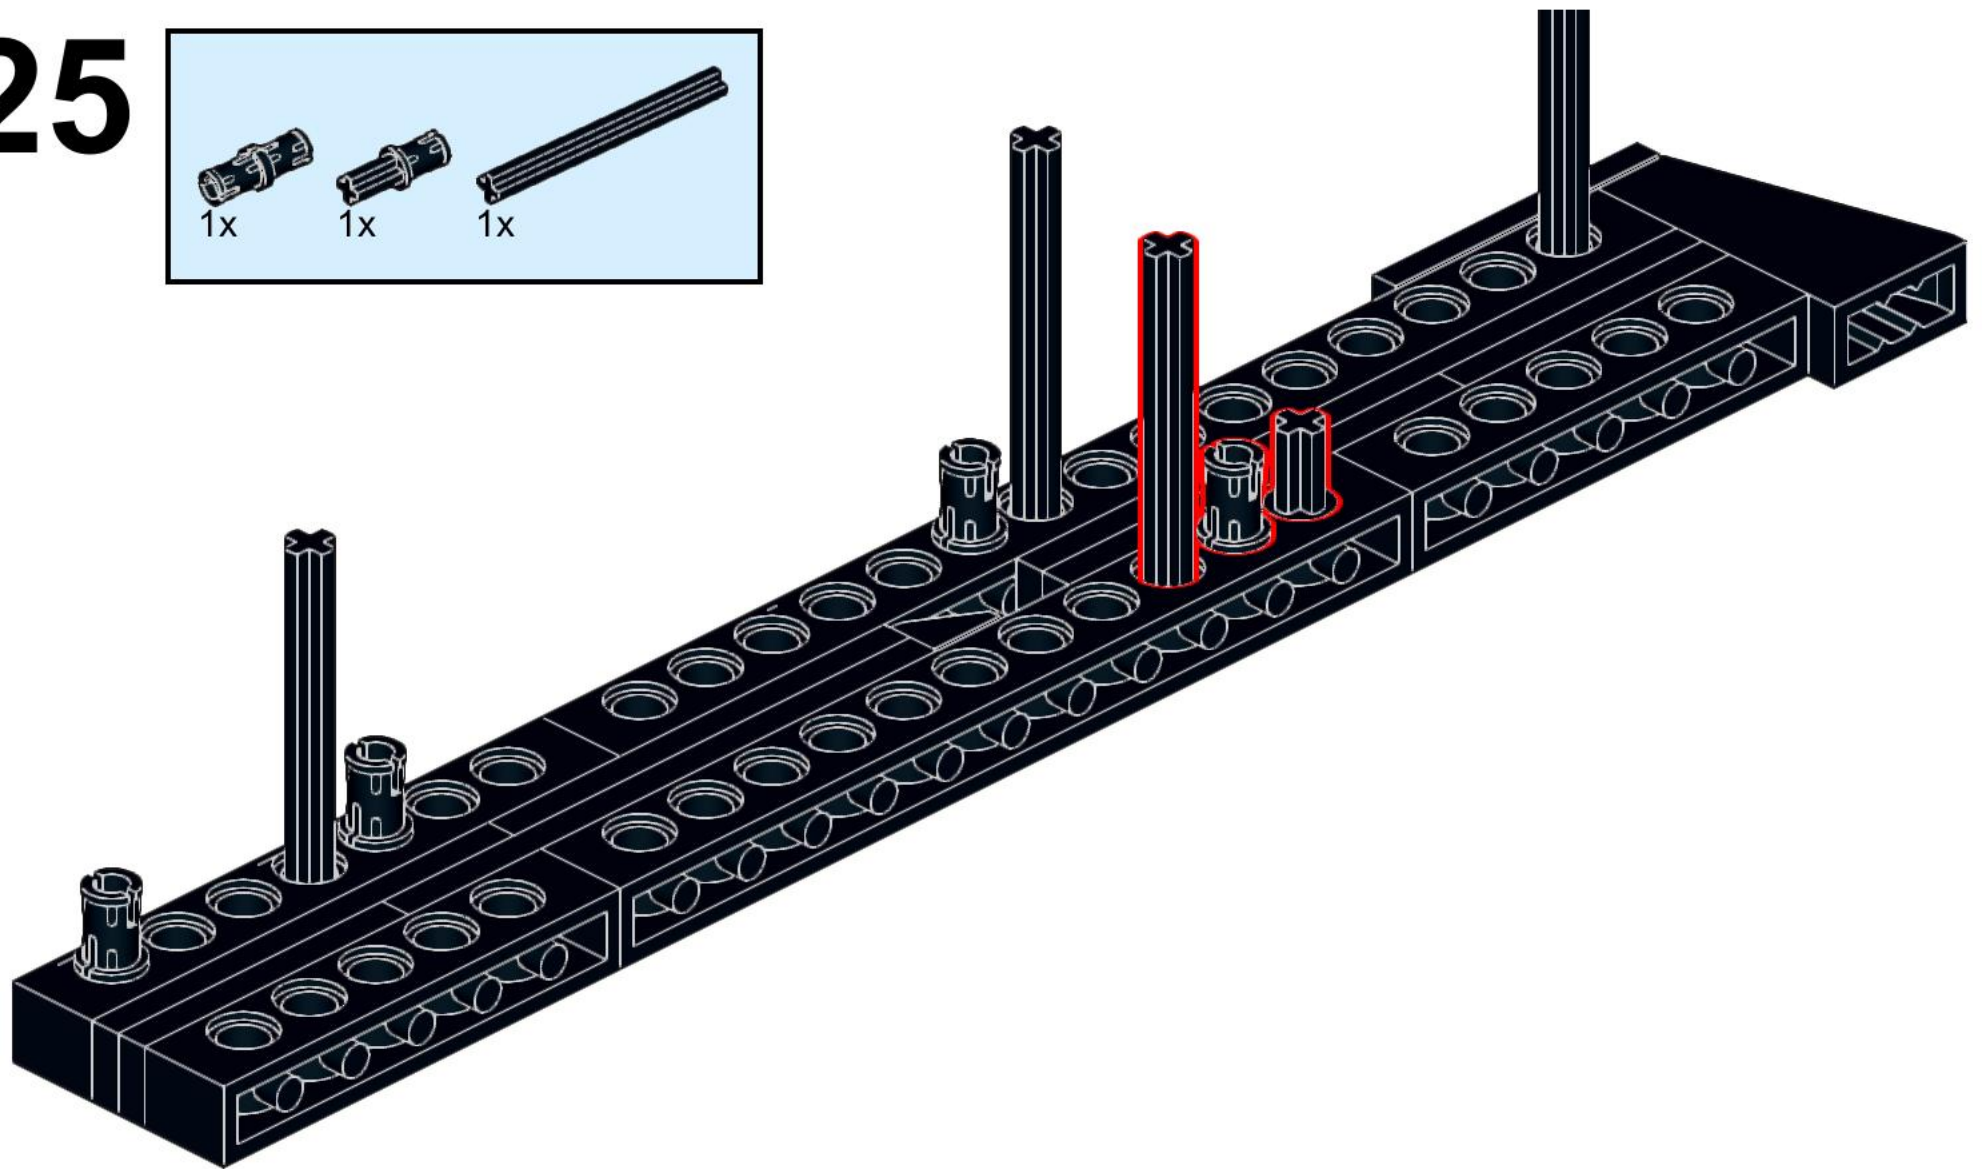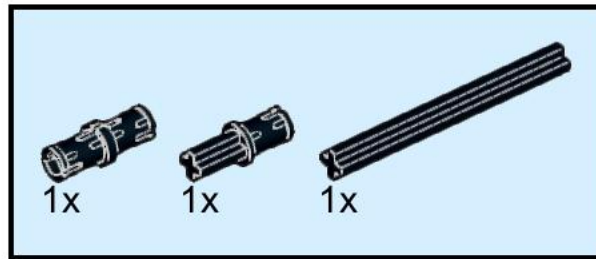



26

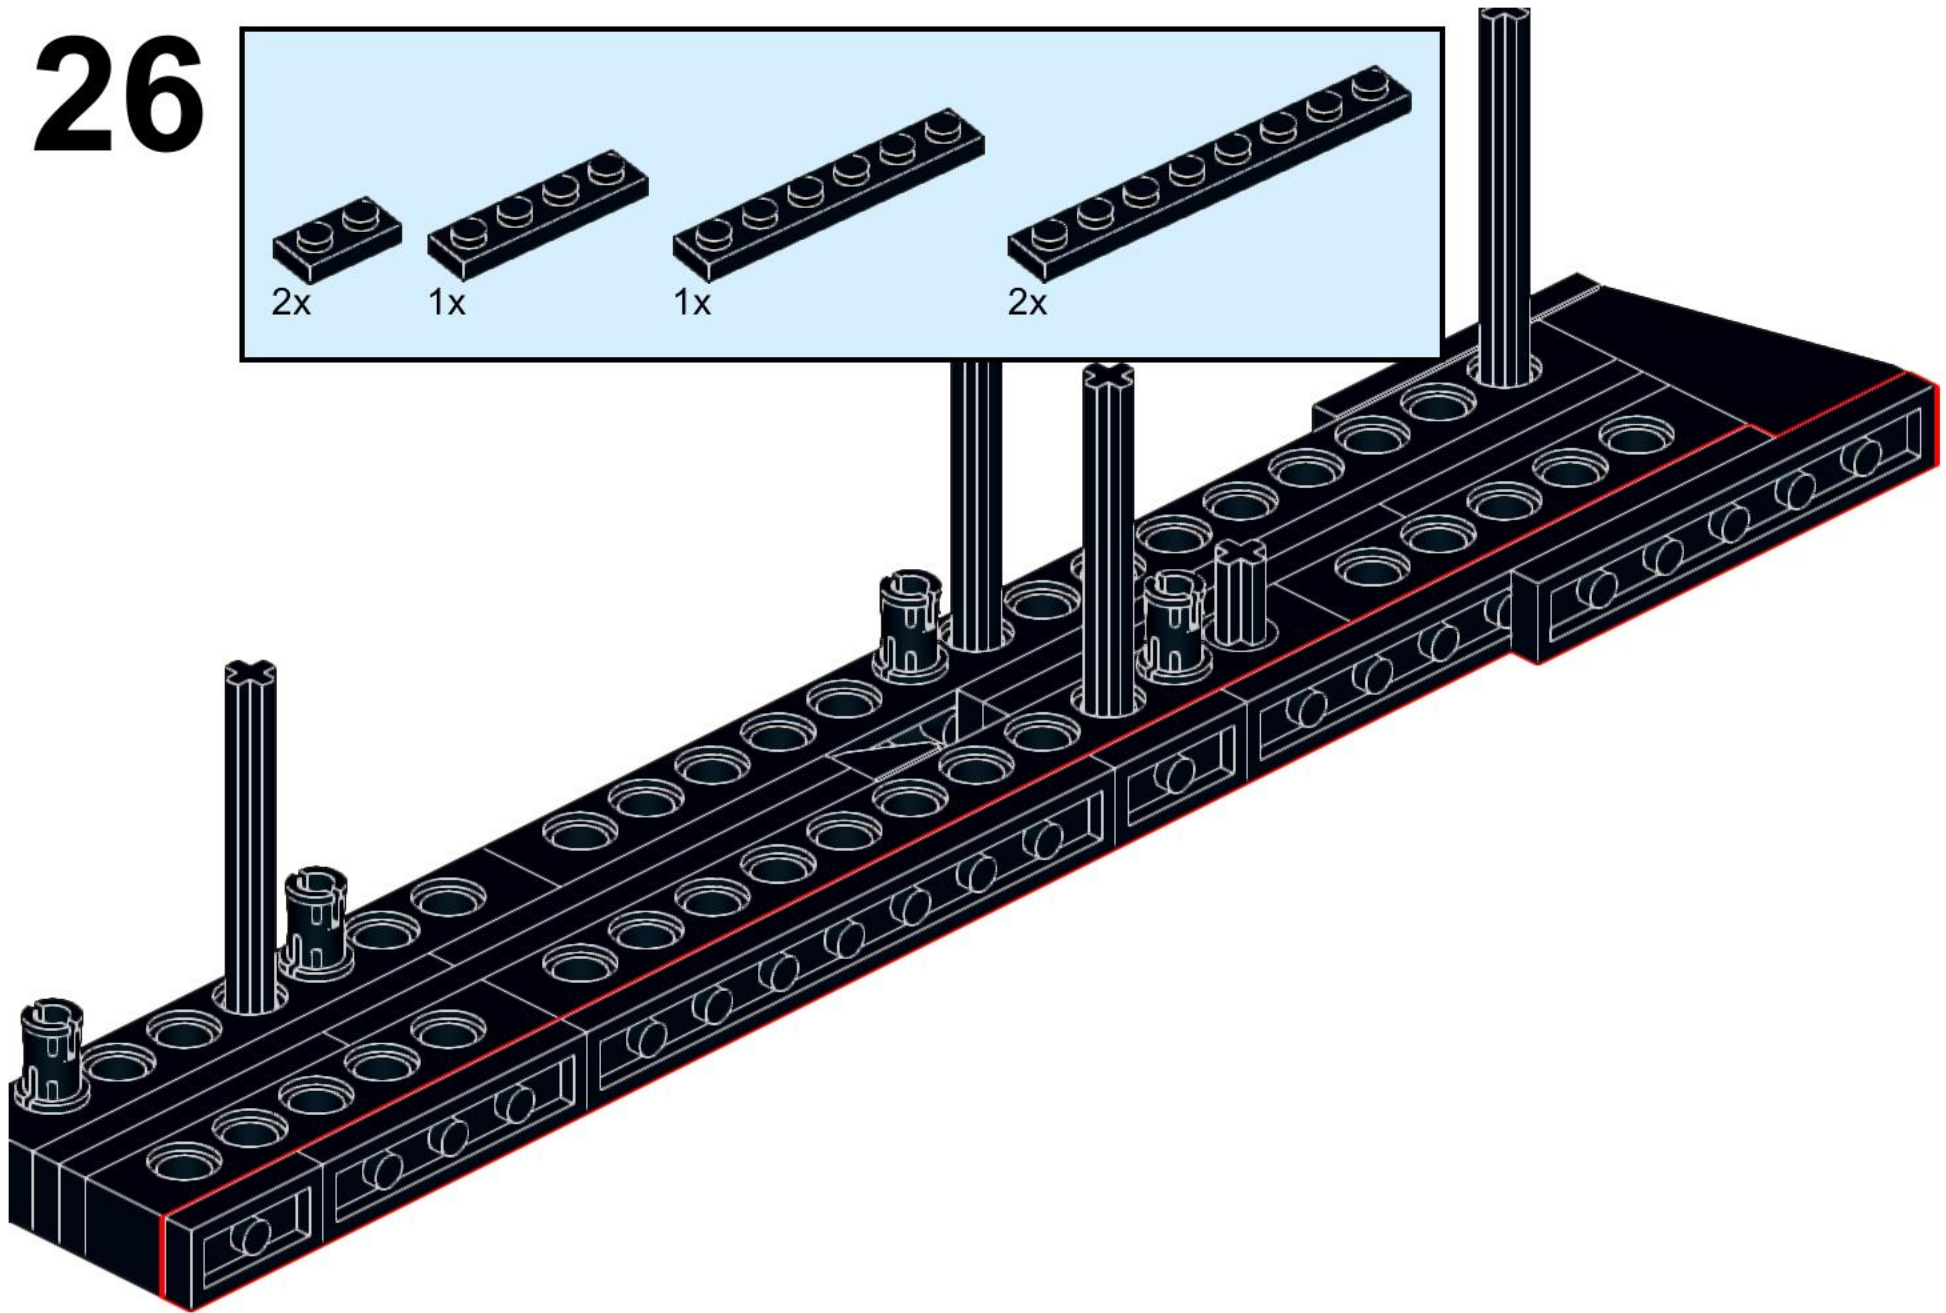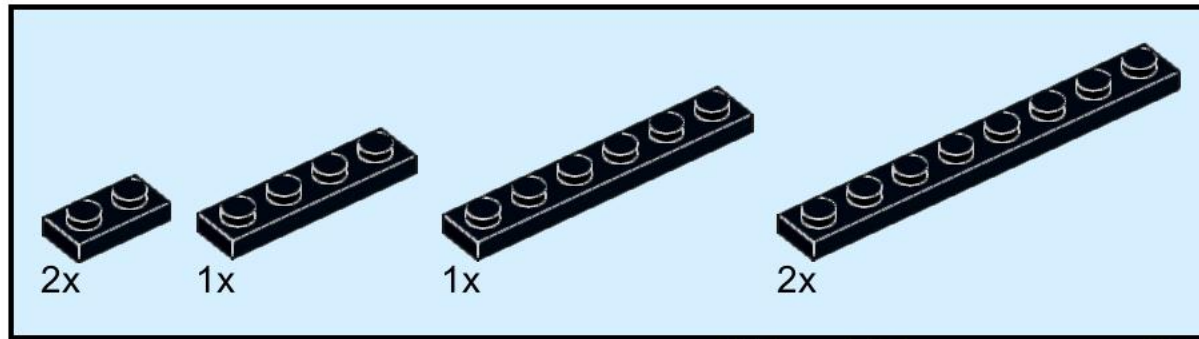



27

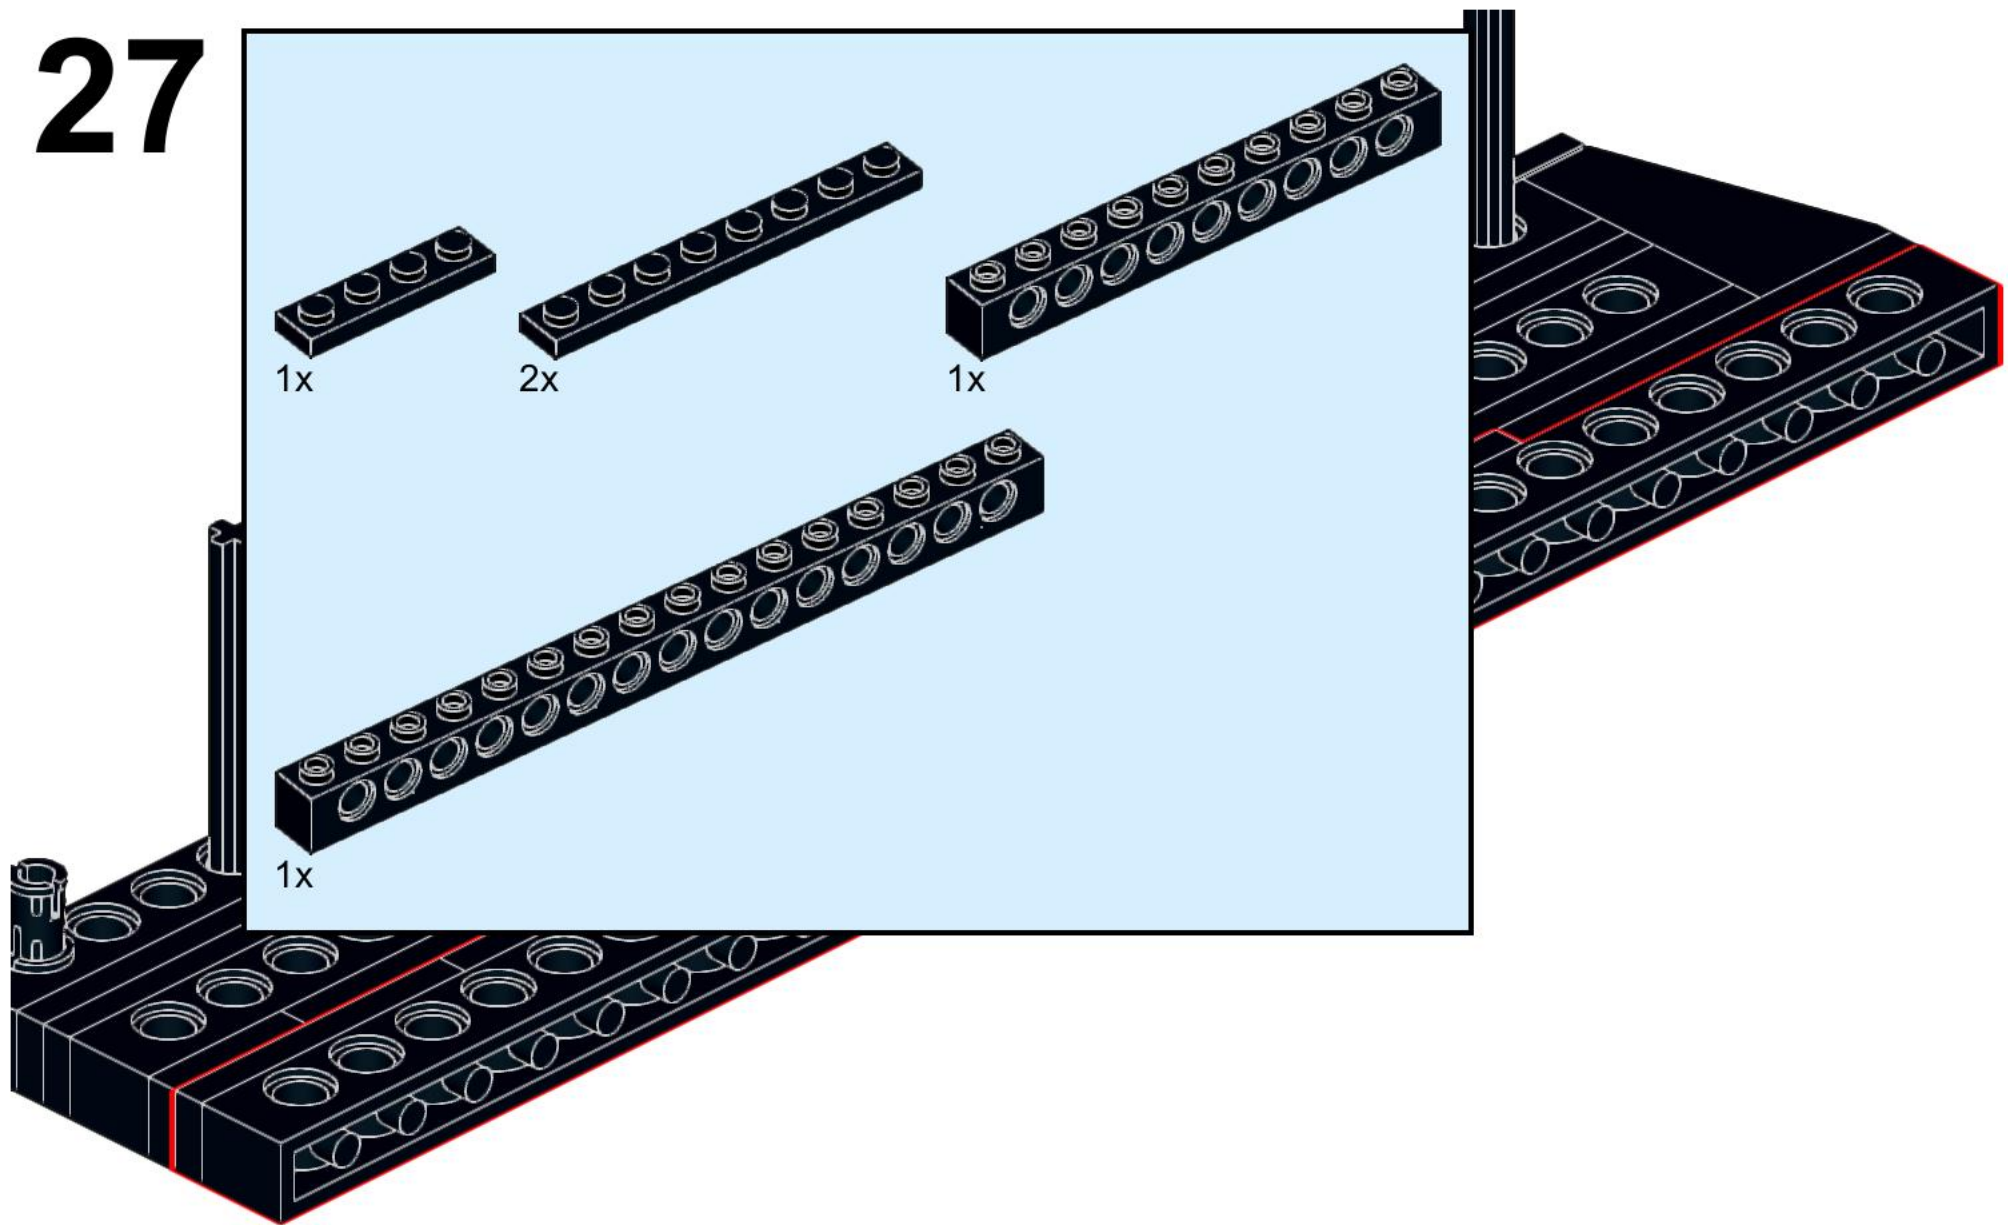


28

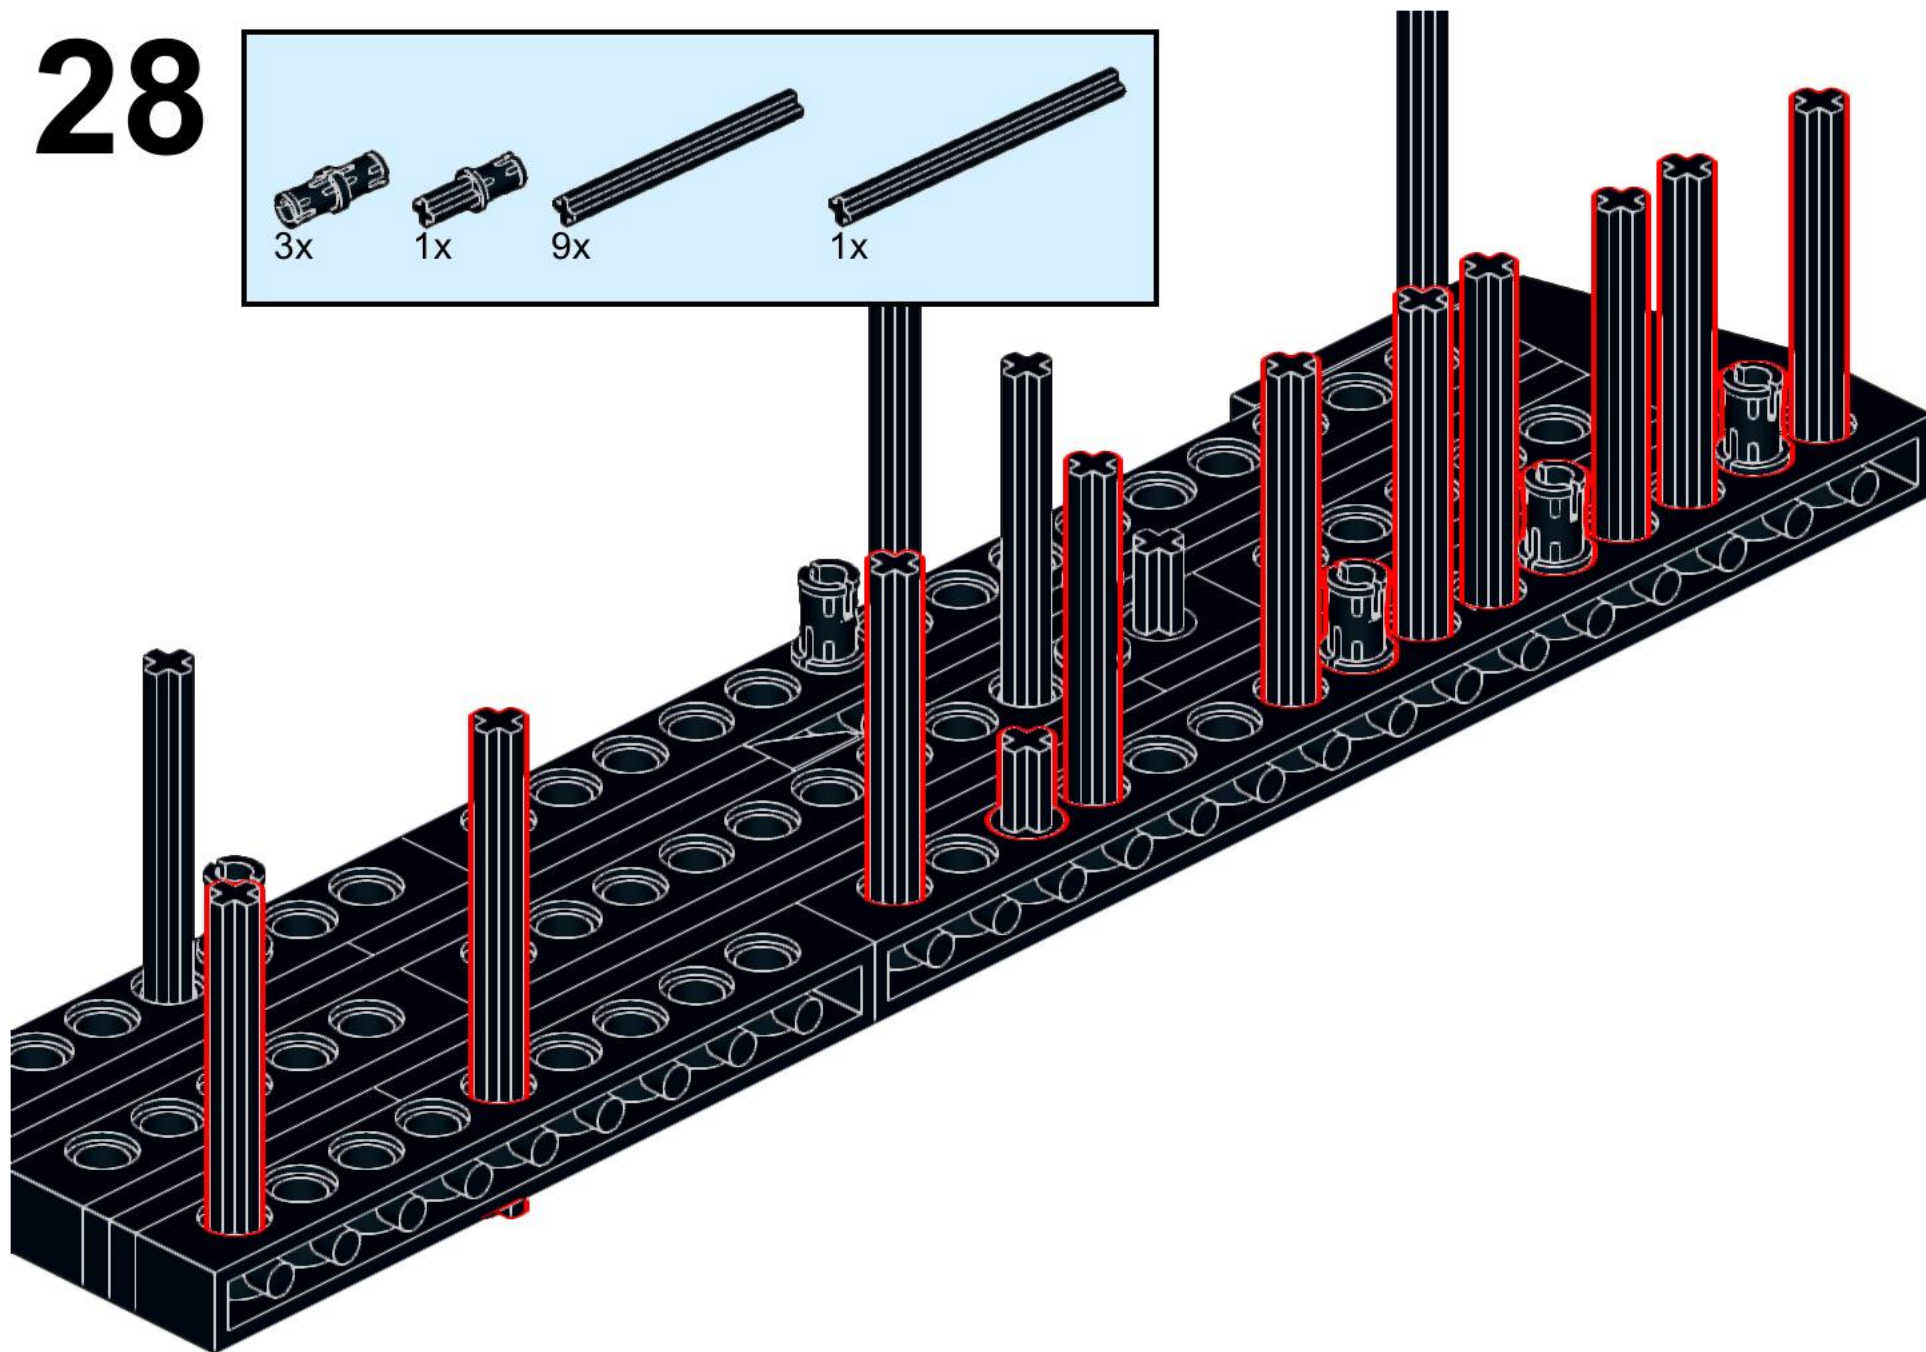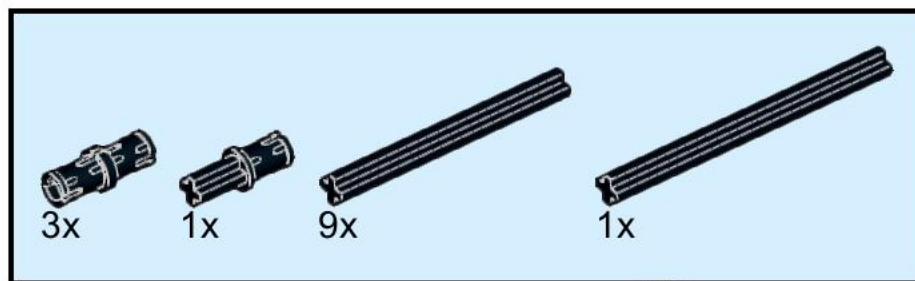



29

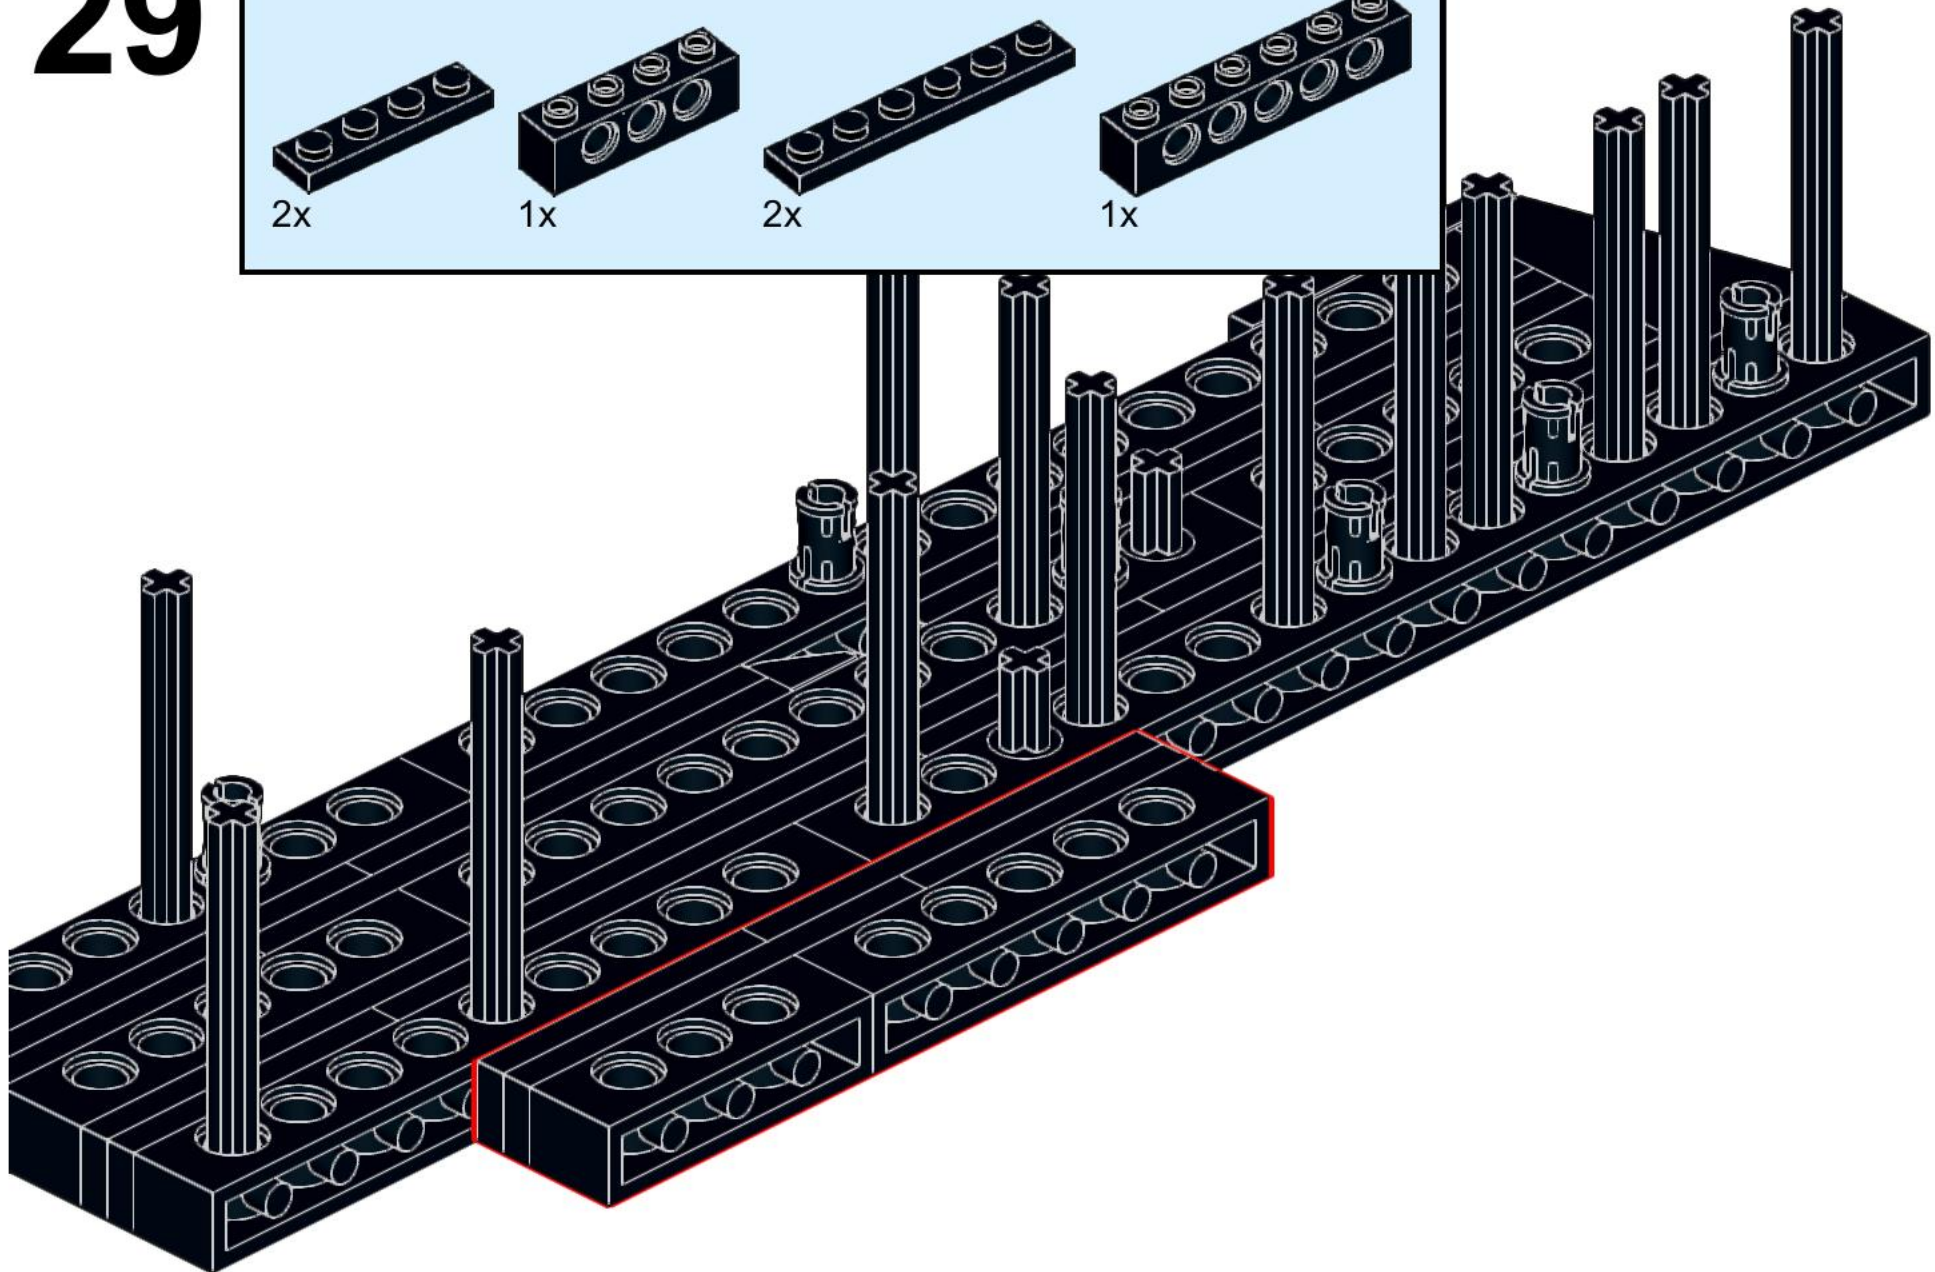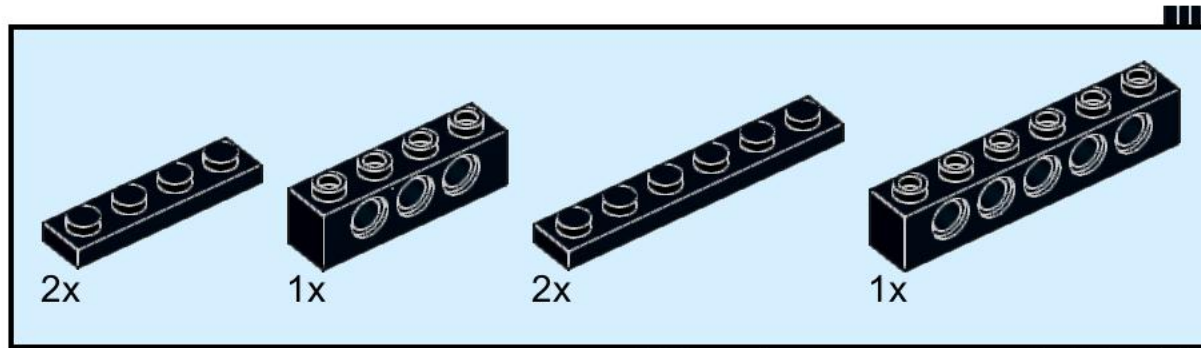



30

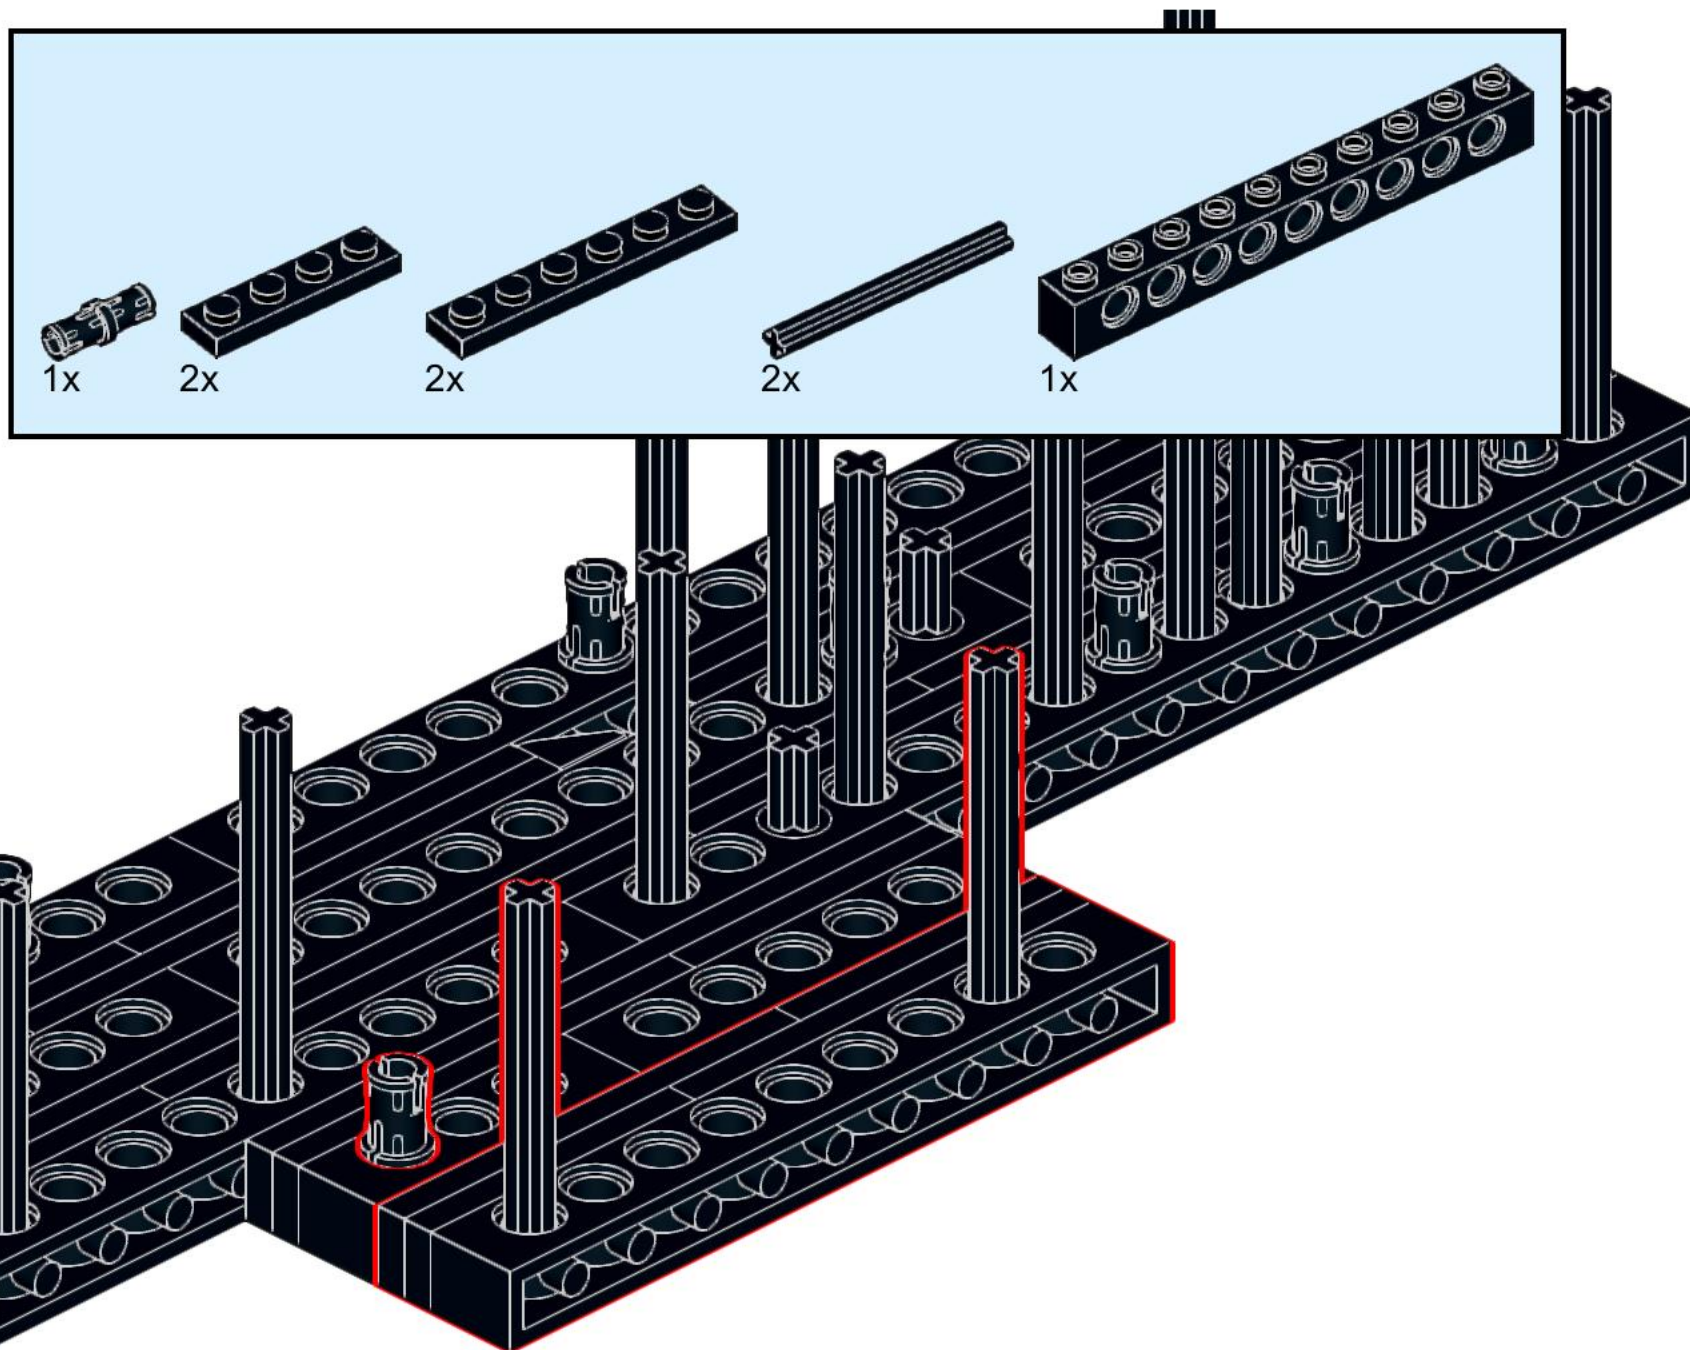



31

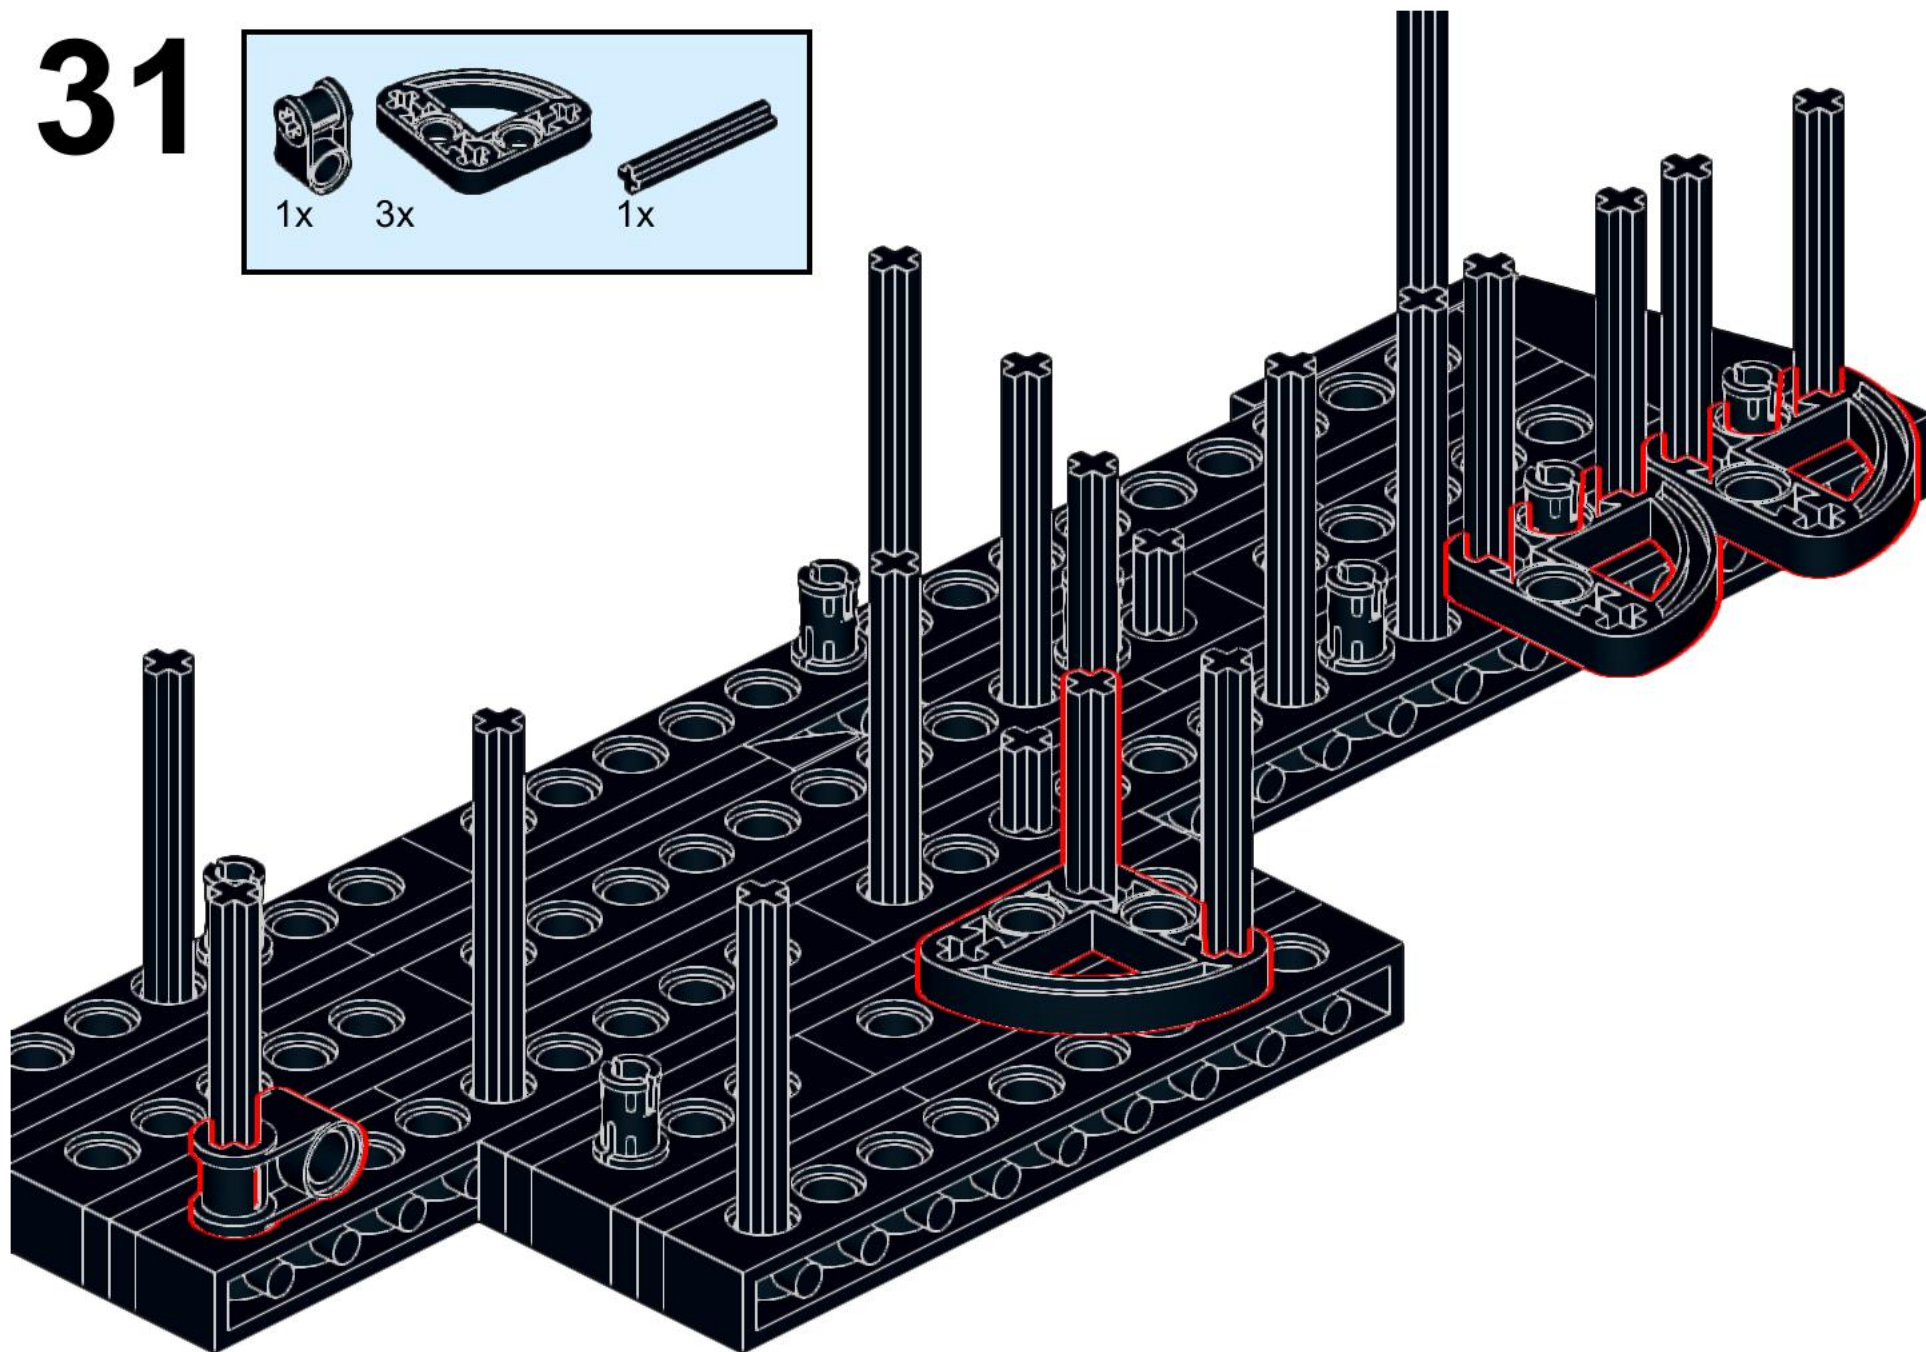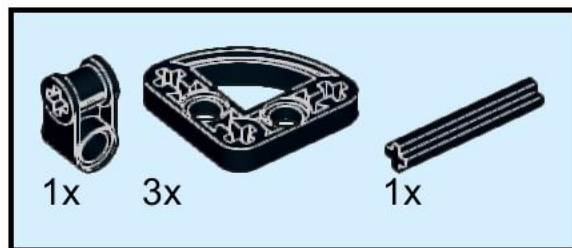



32

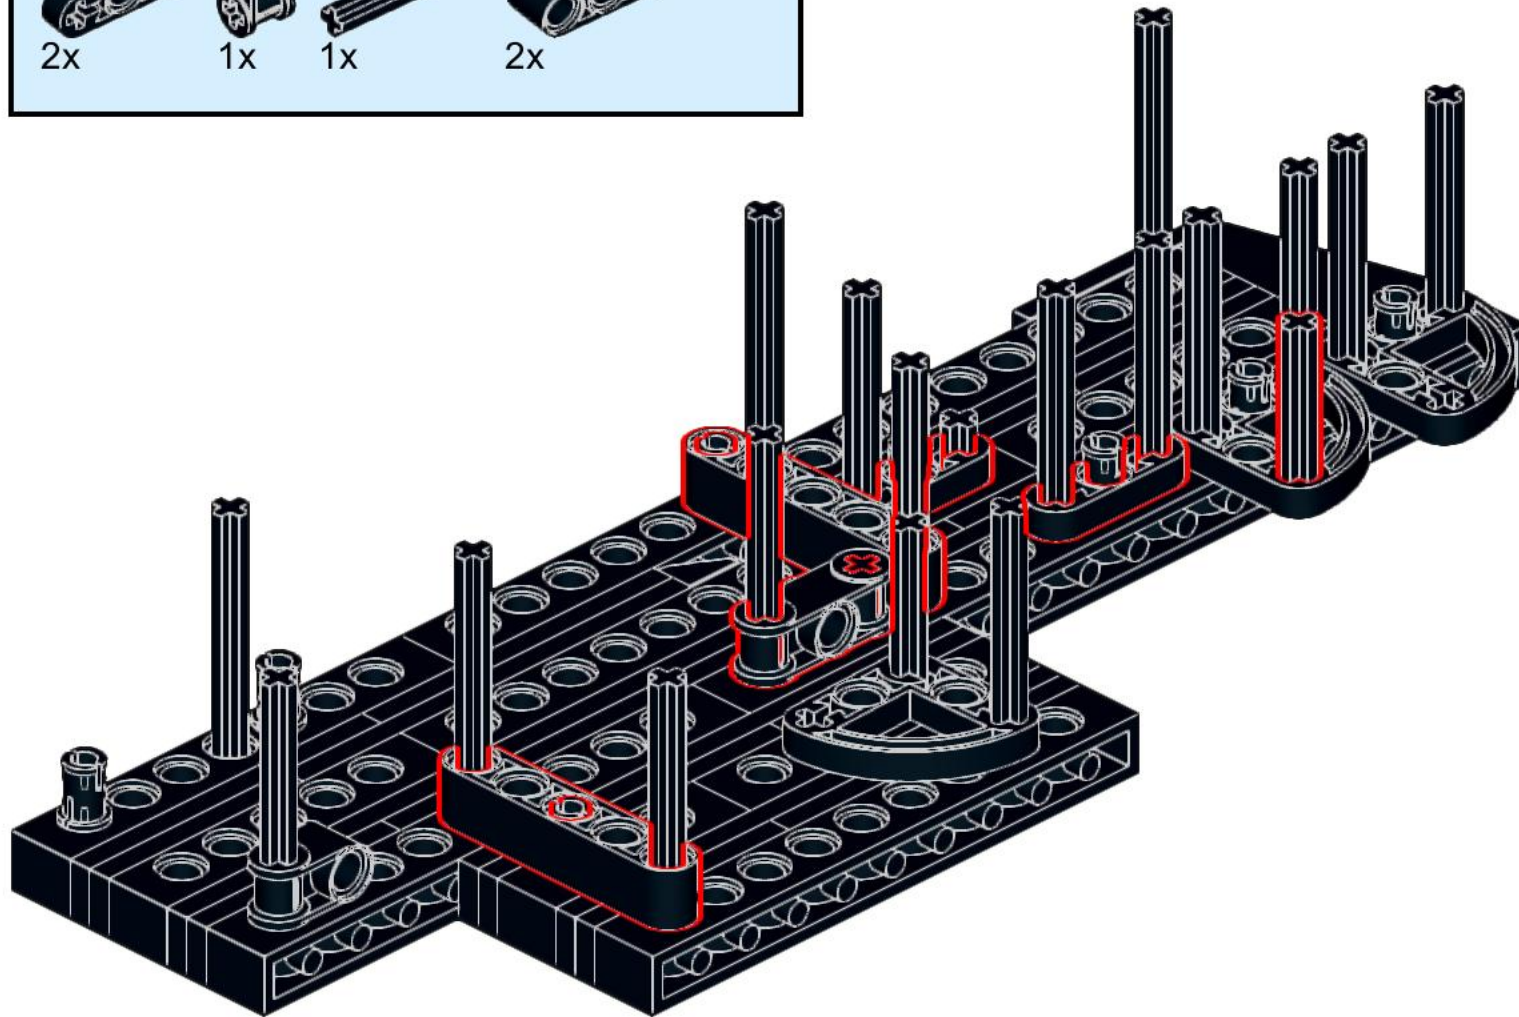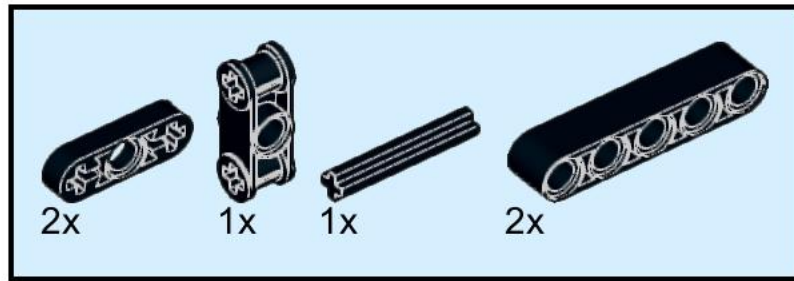



33

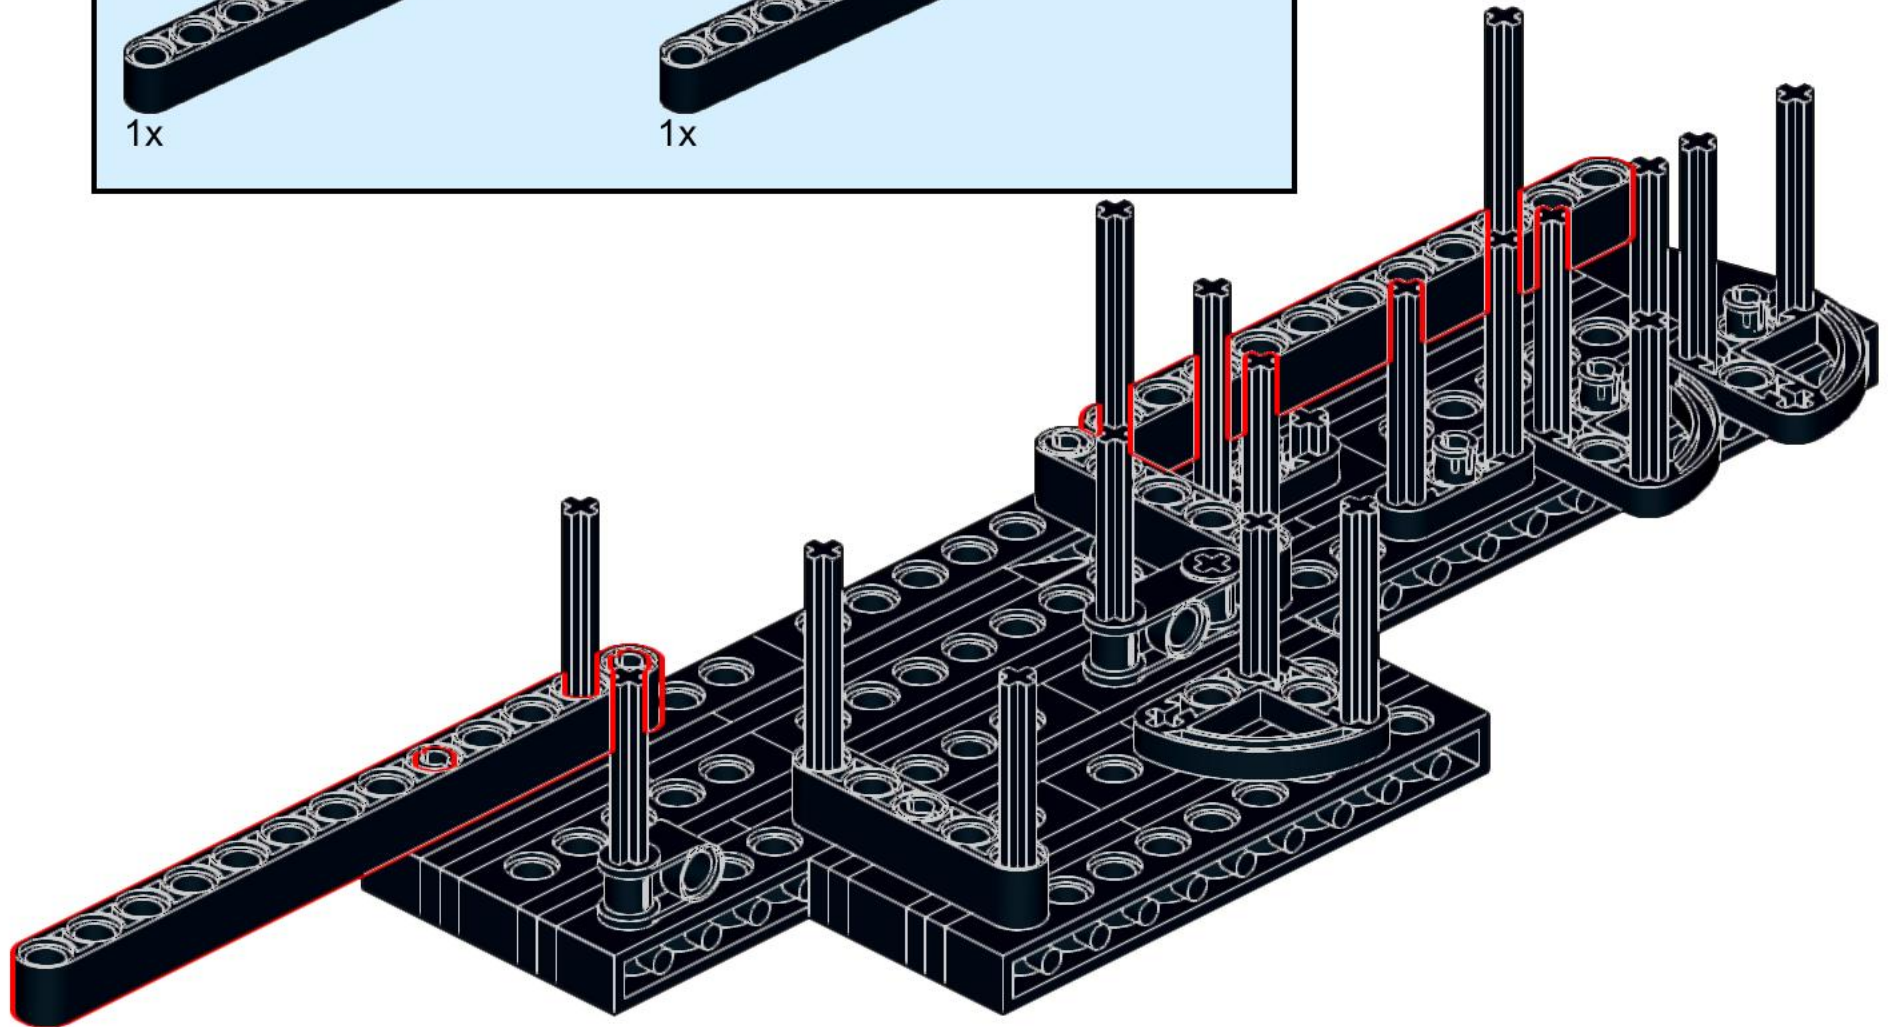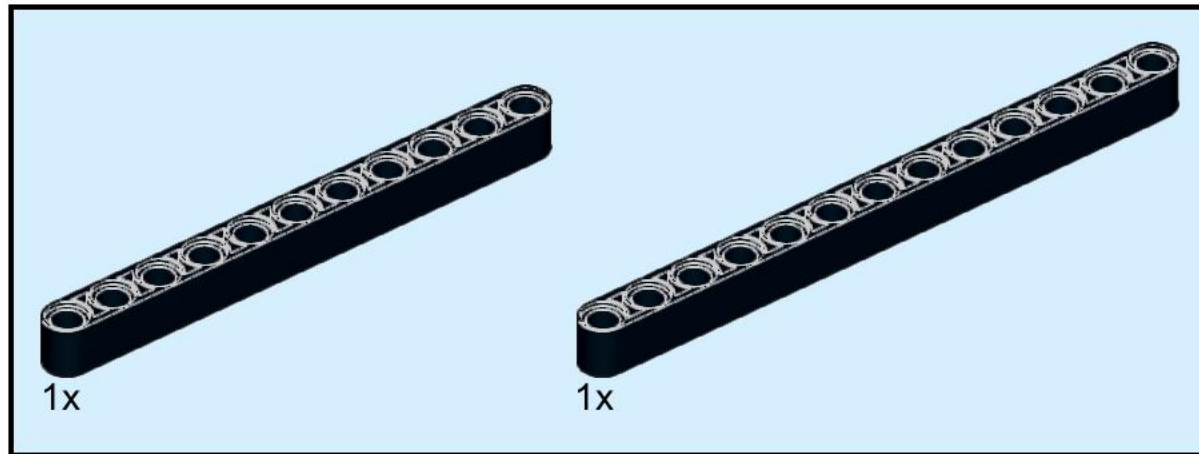



34

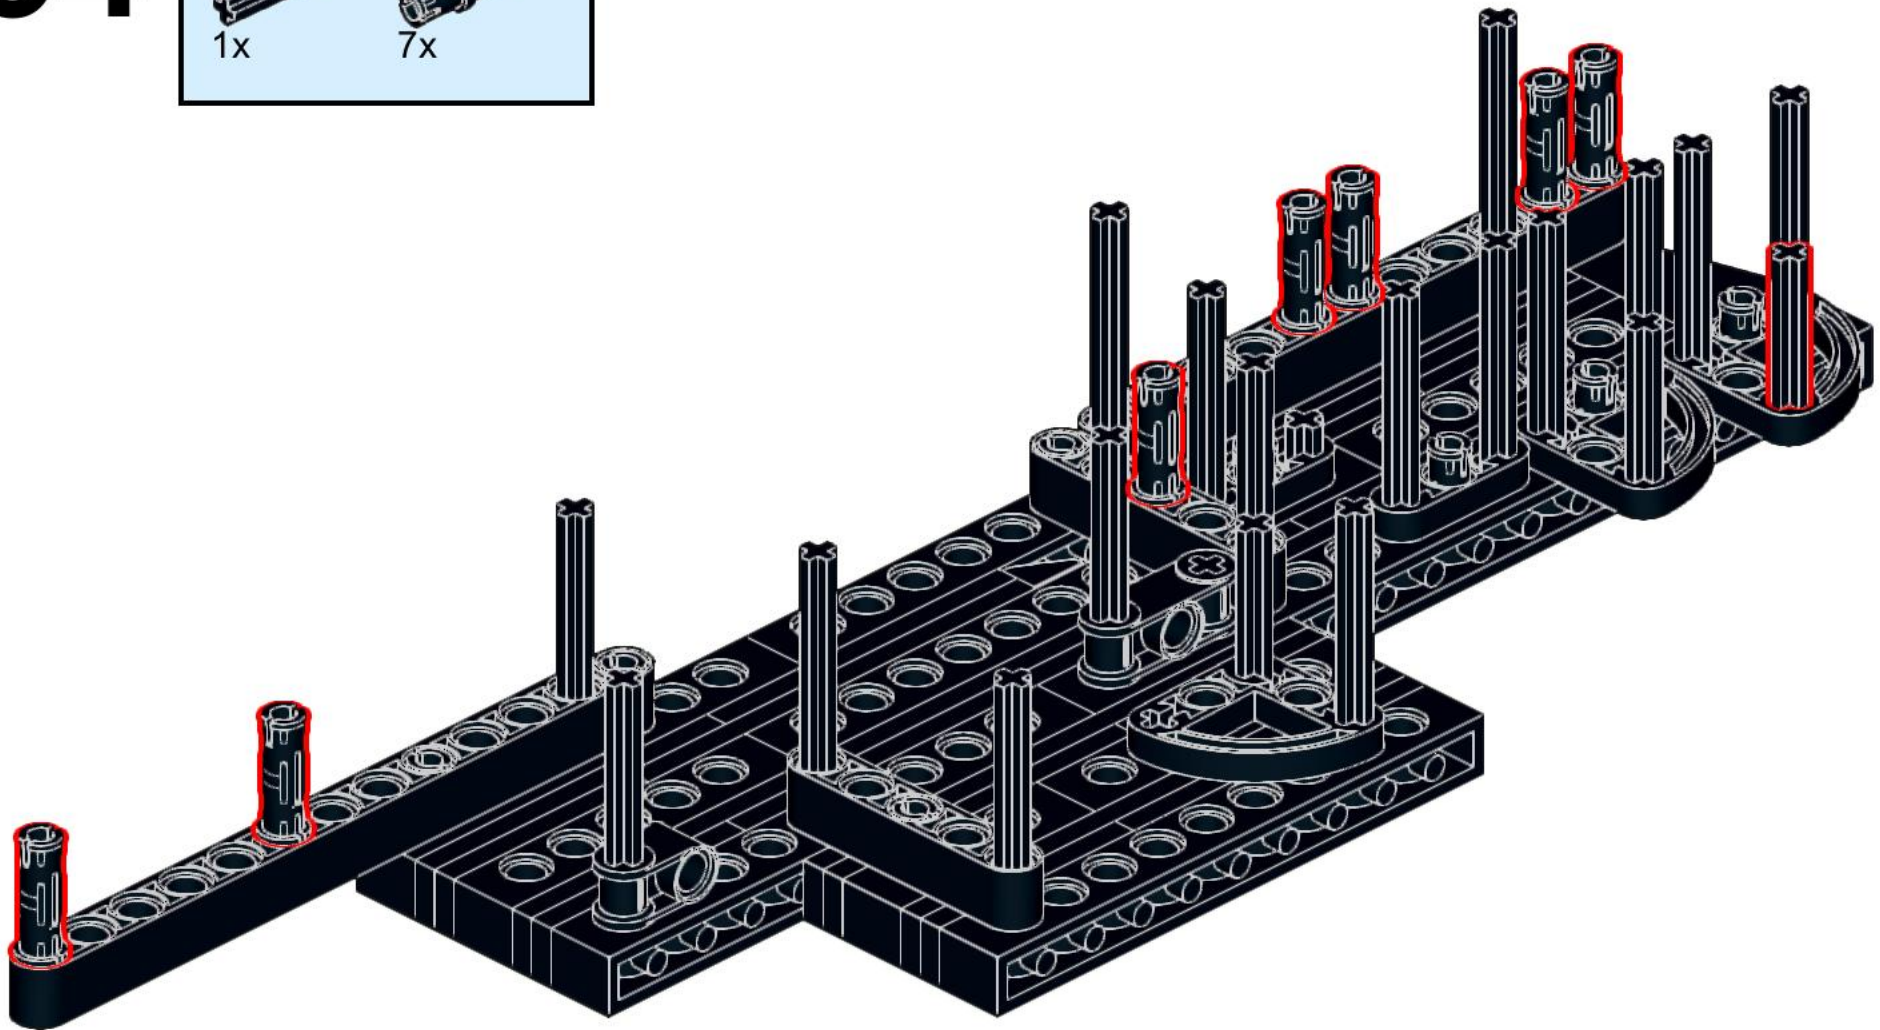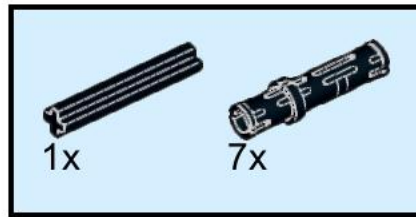



35

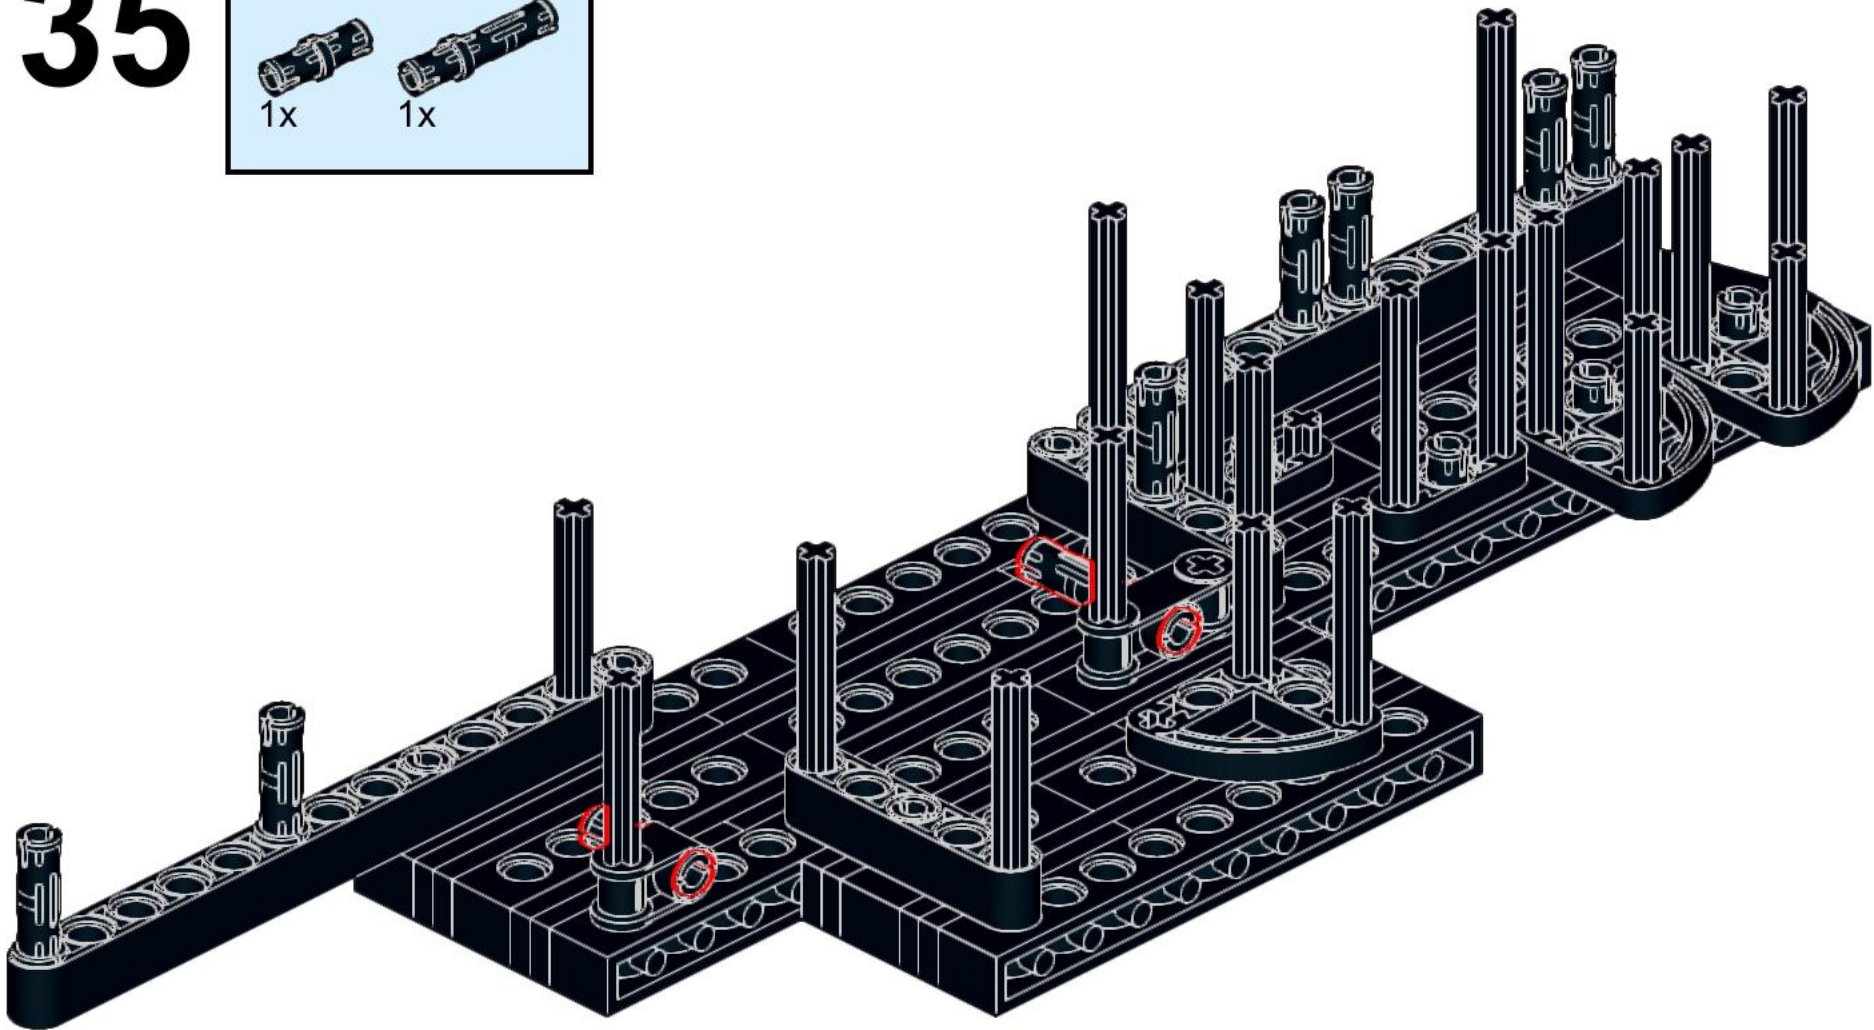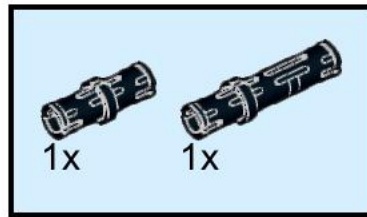


36

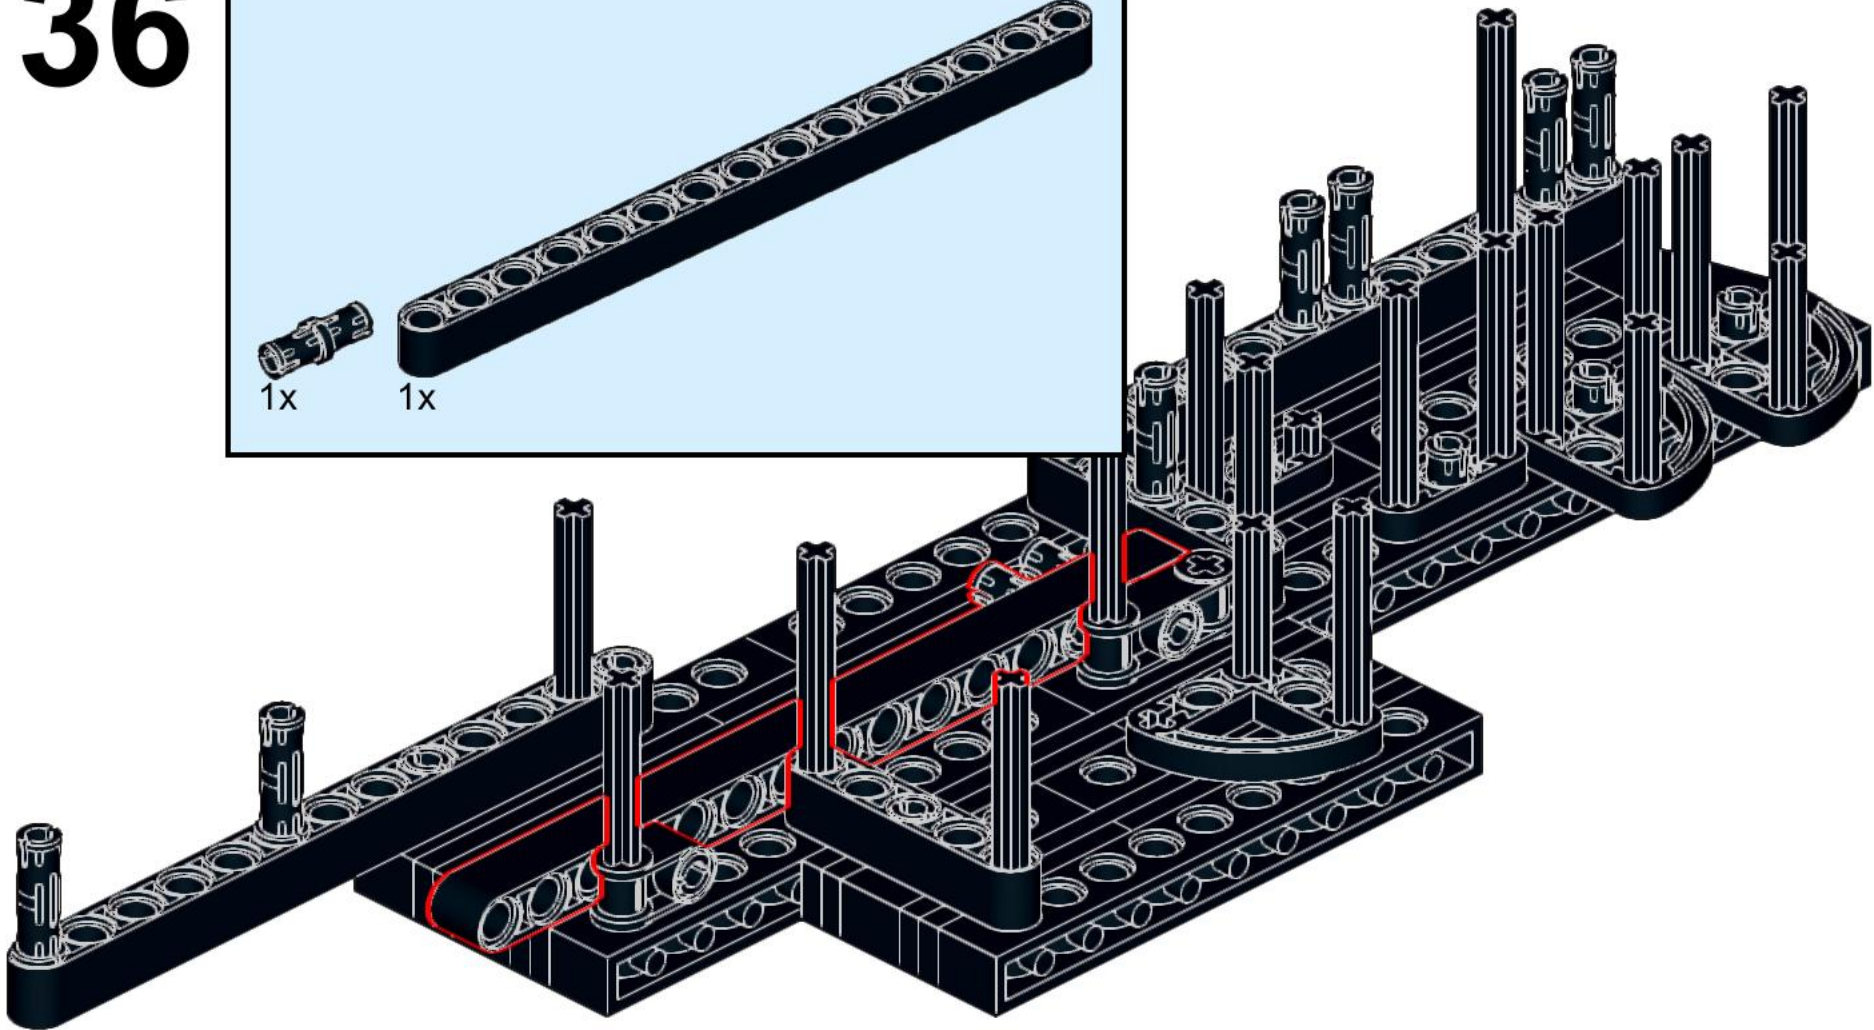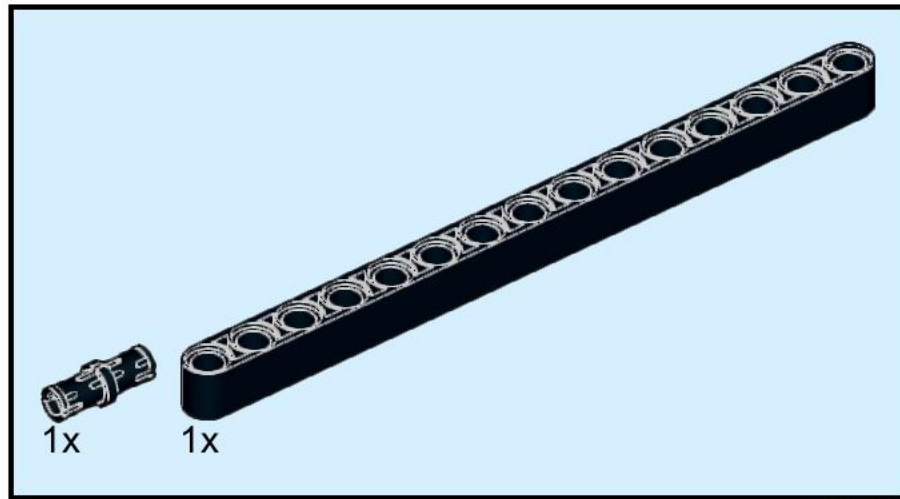



37

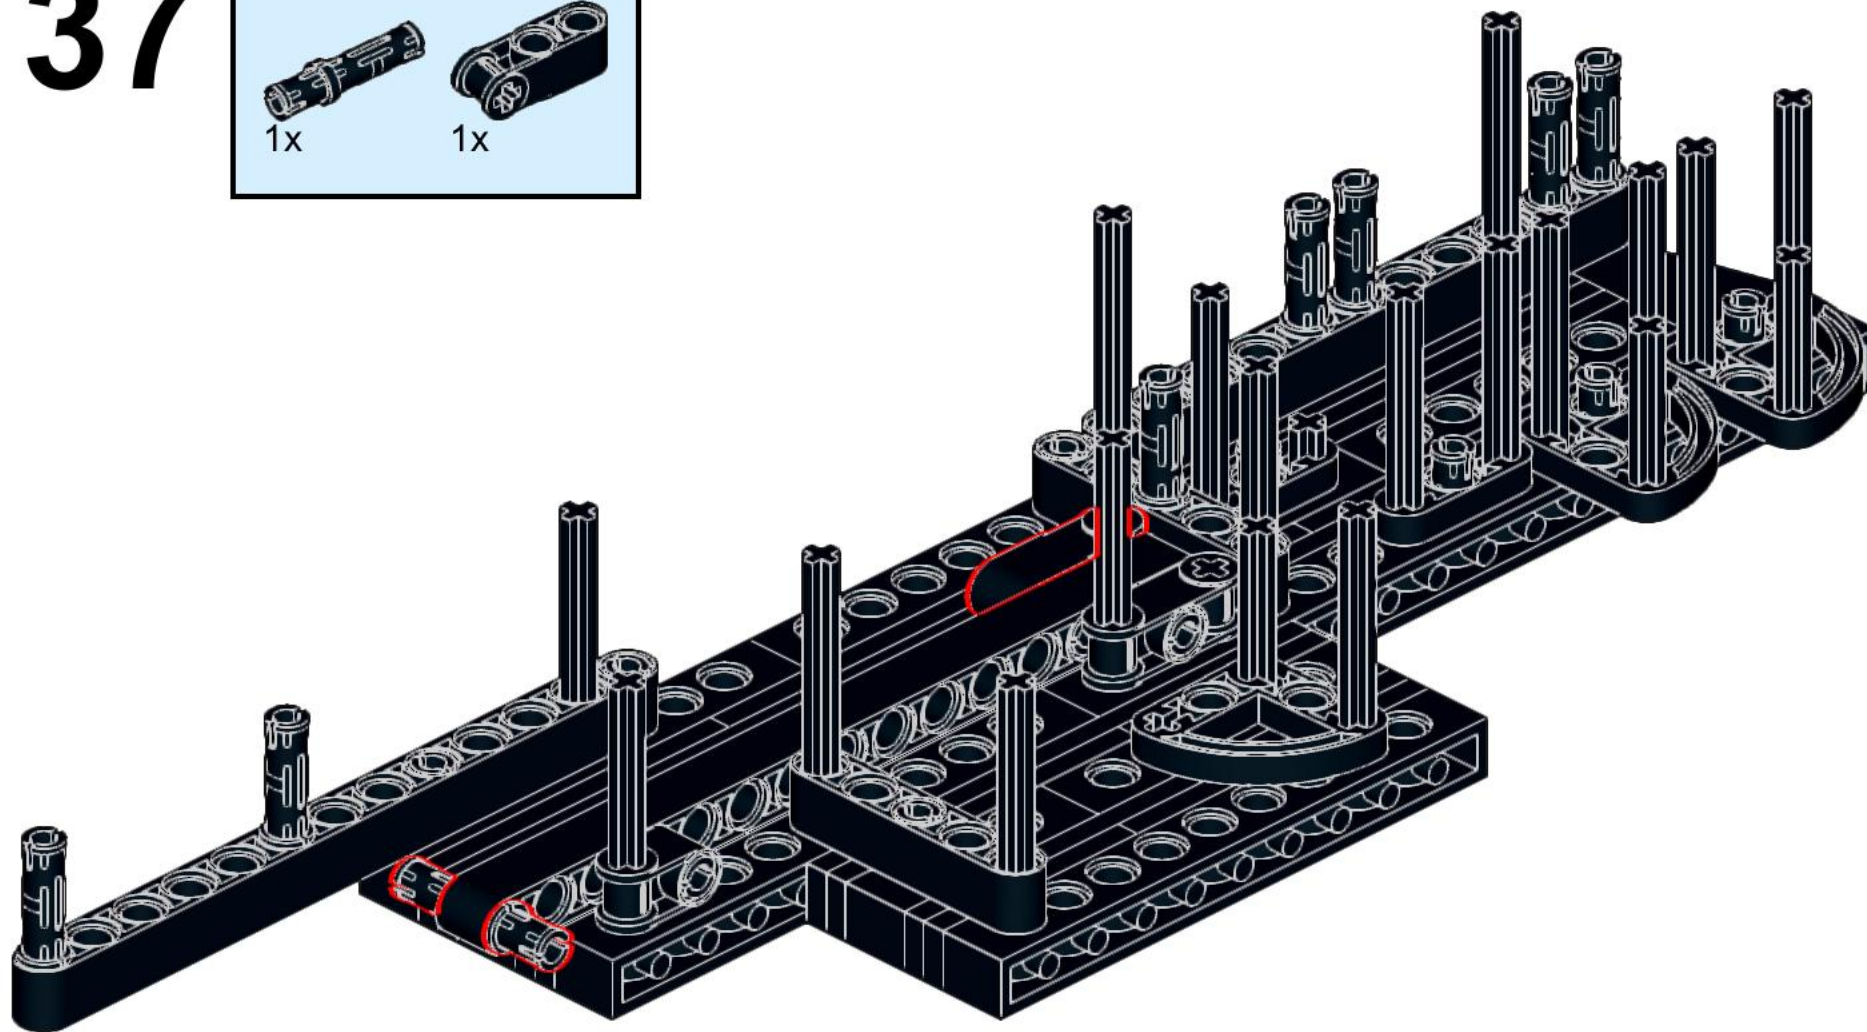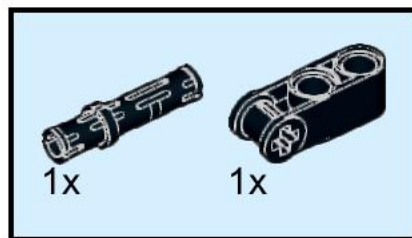



38

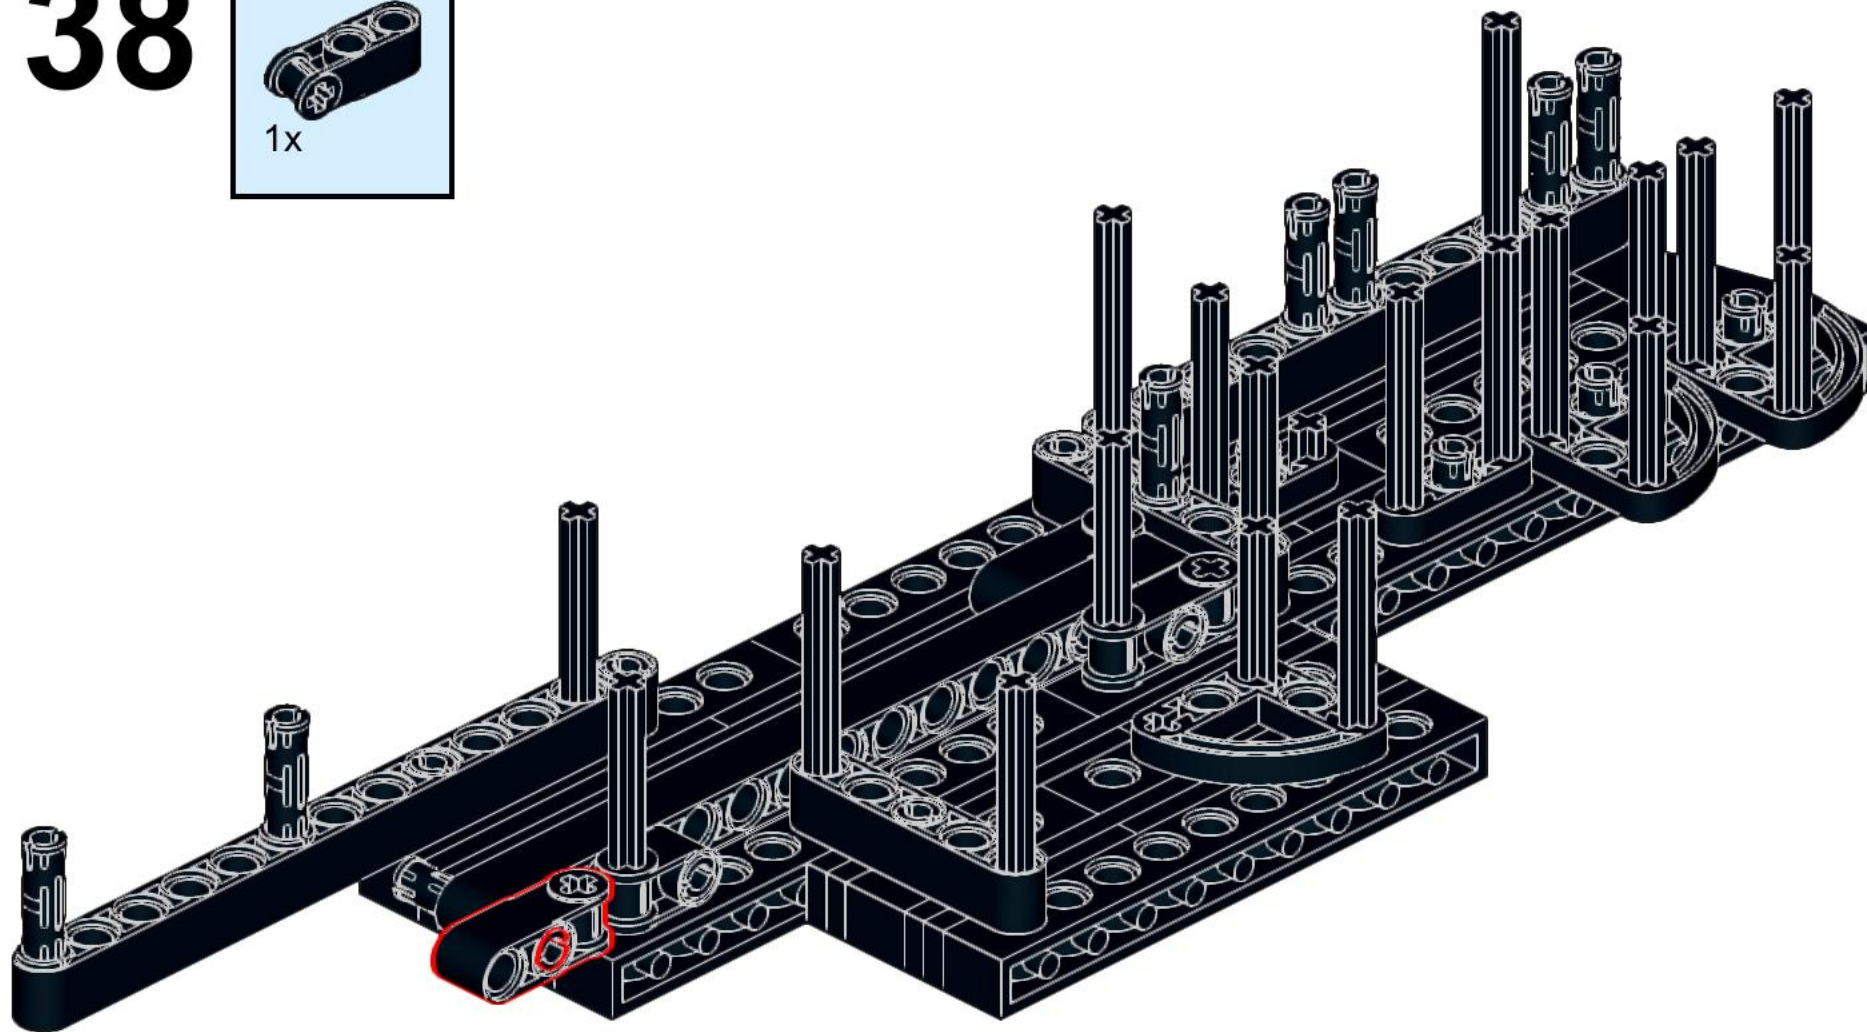



39

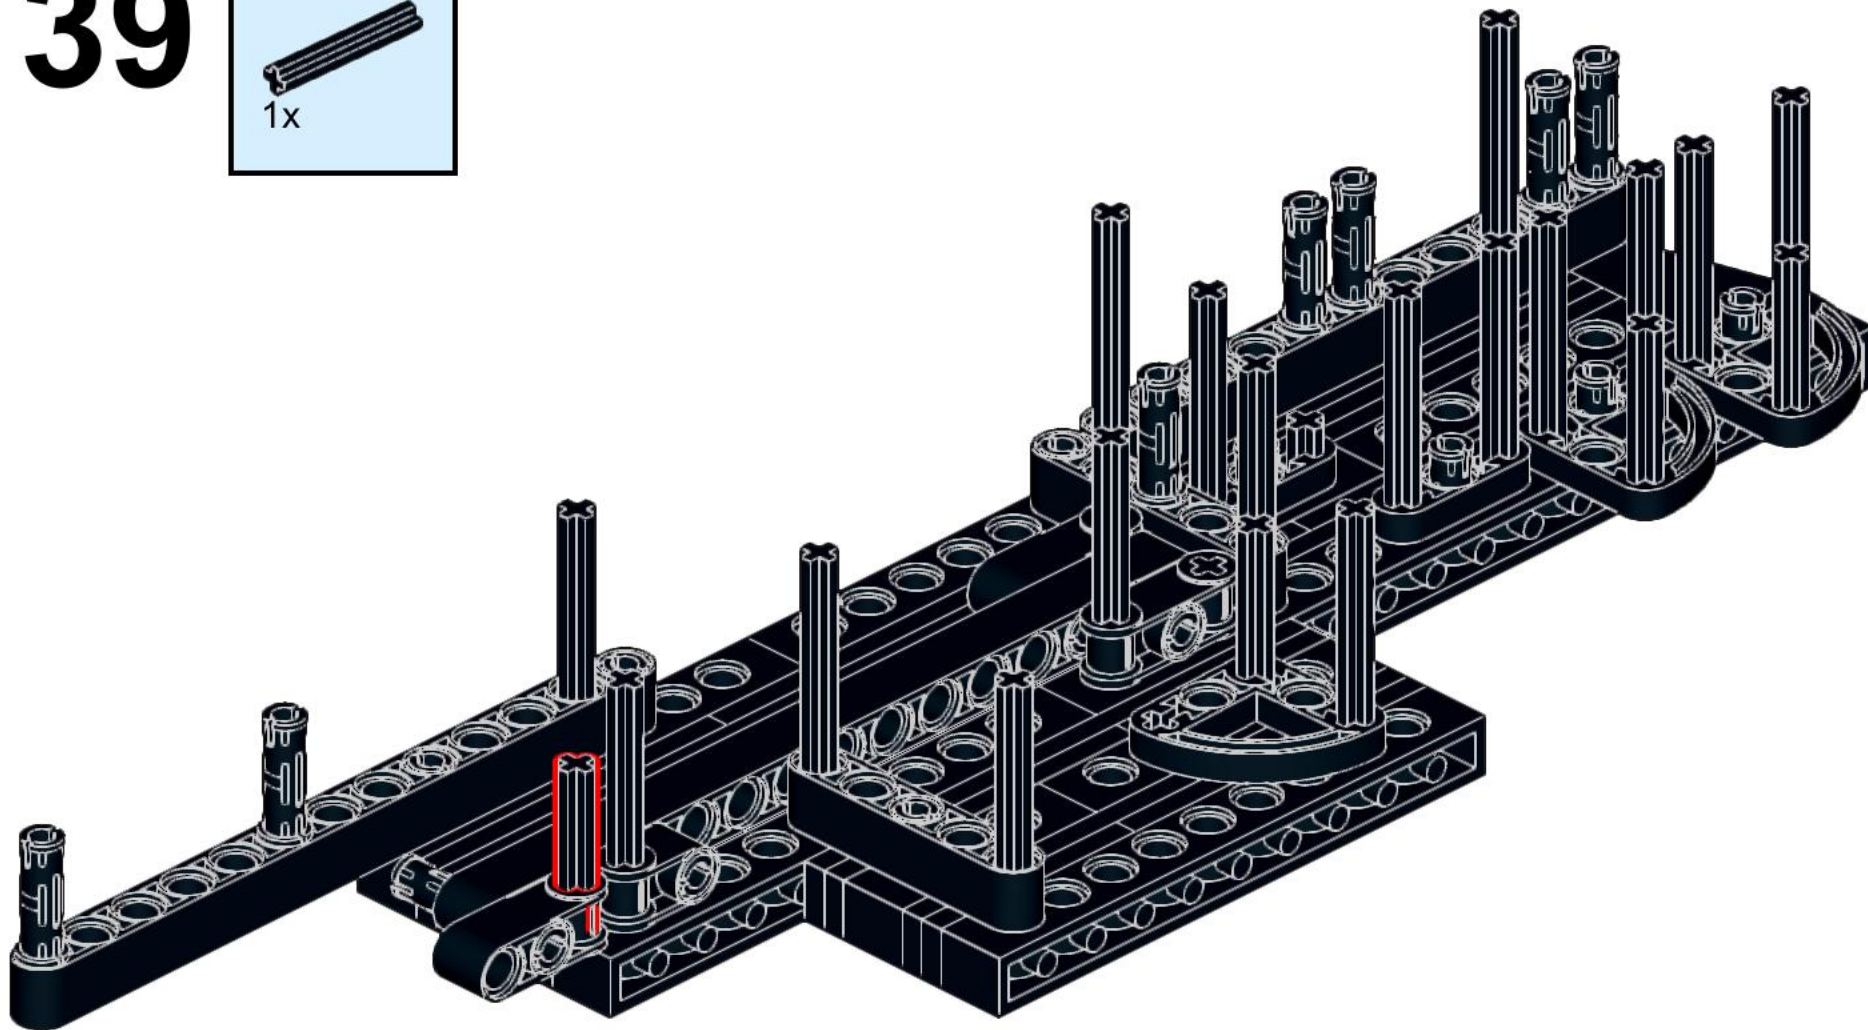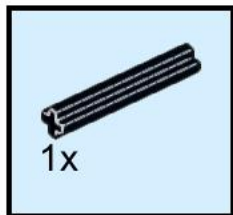



40

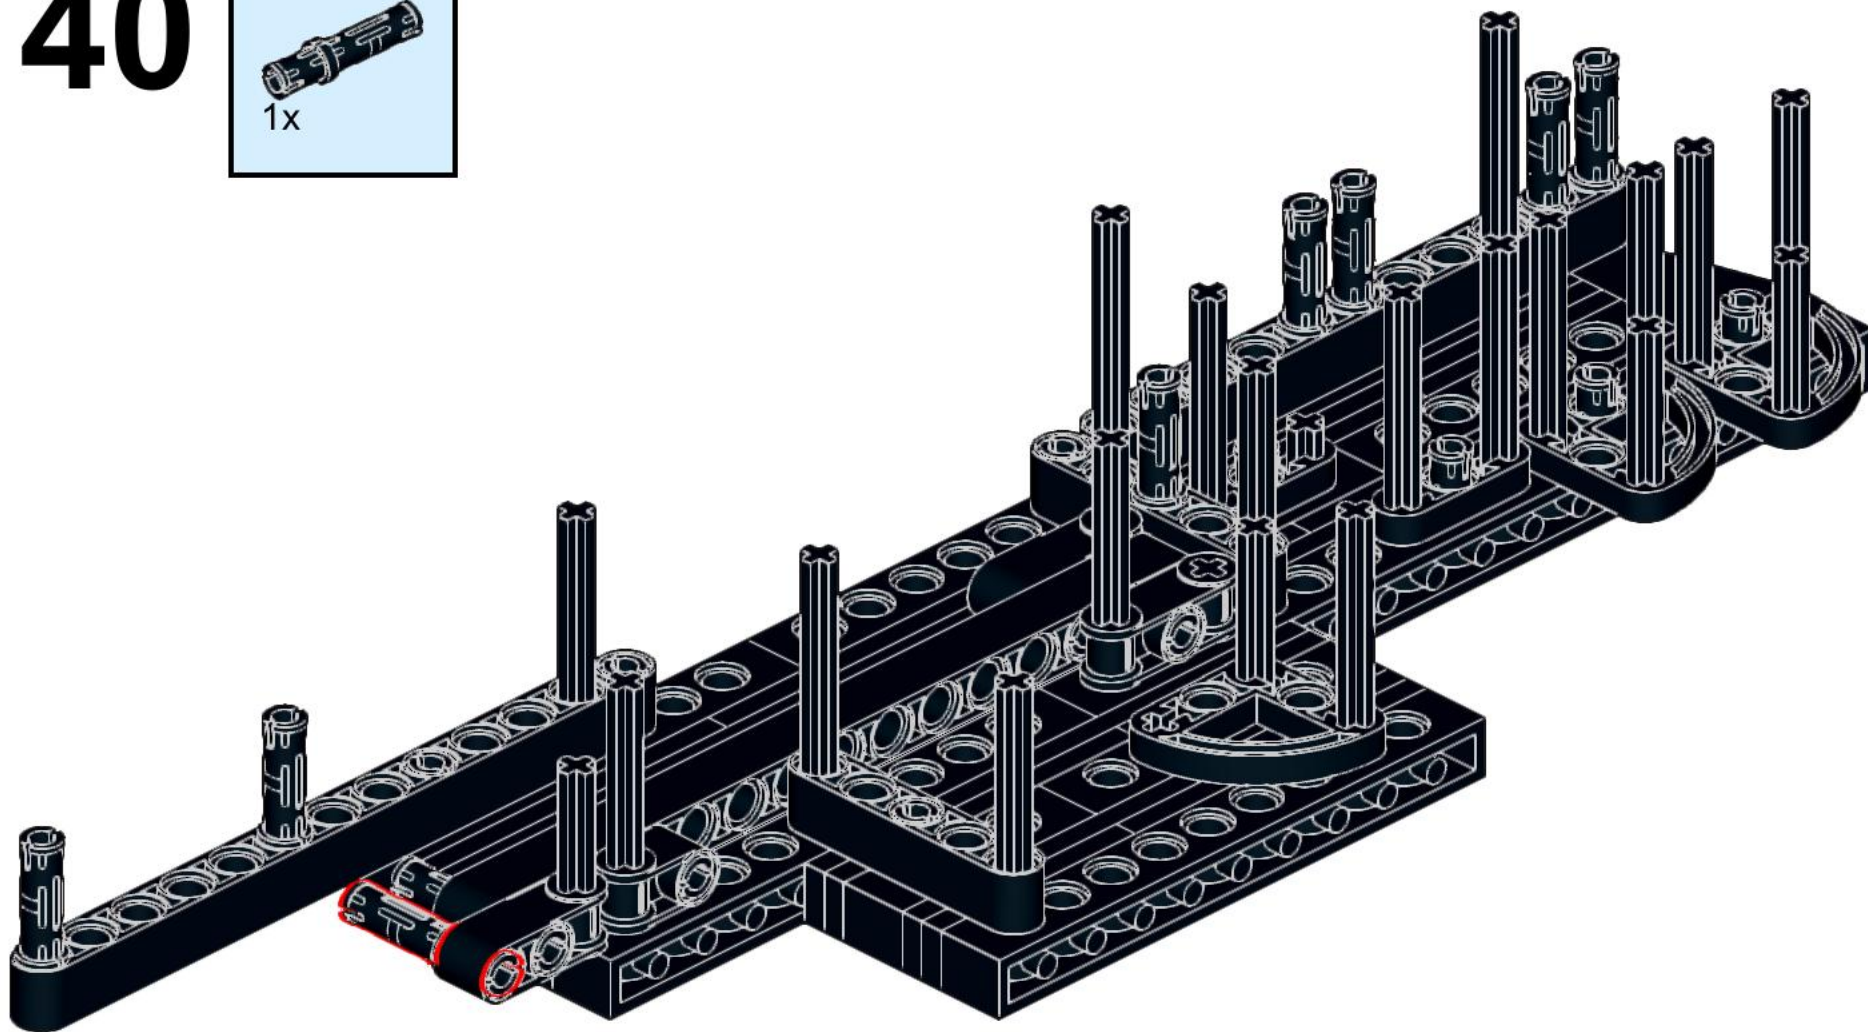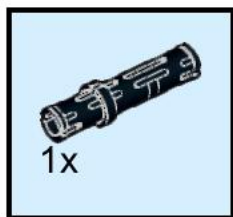



41

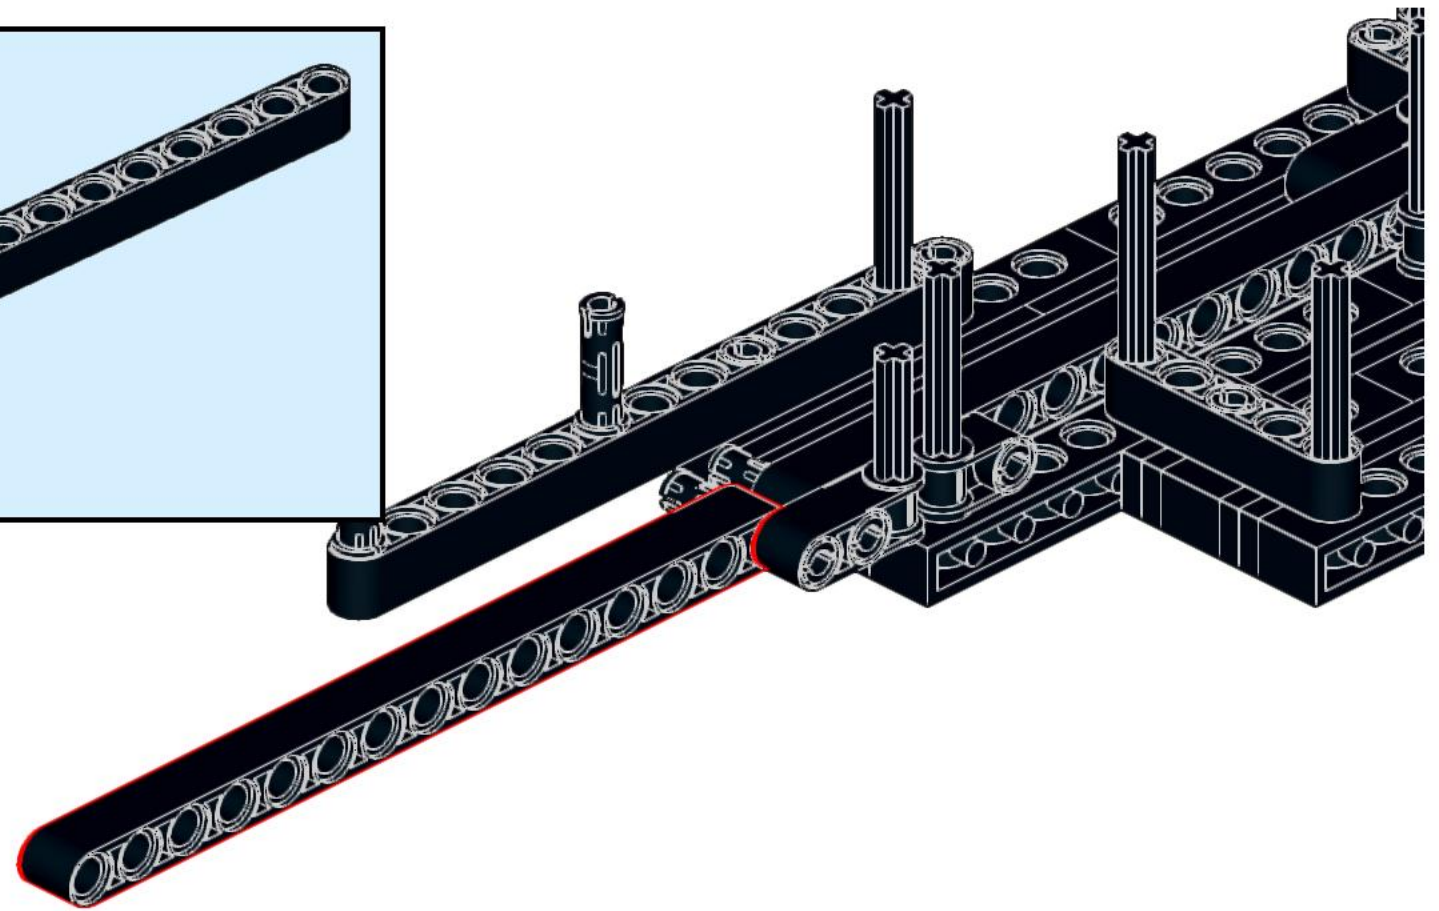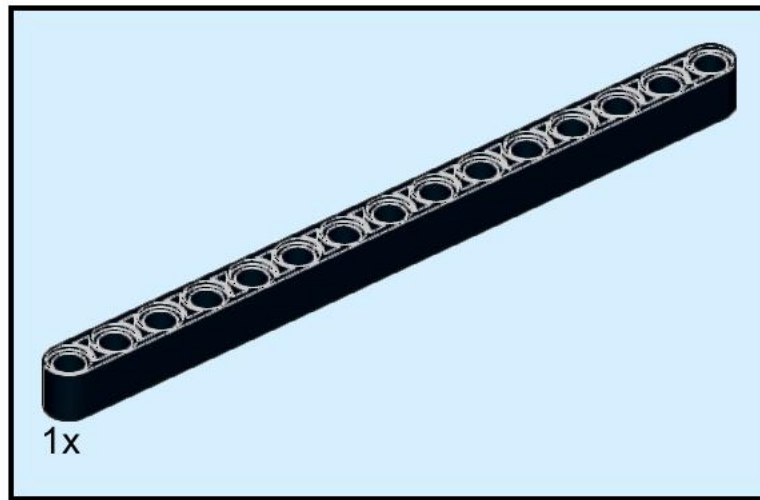



42

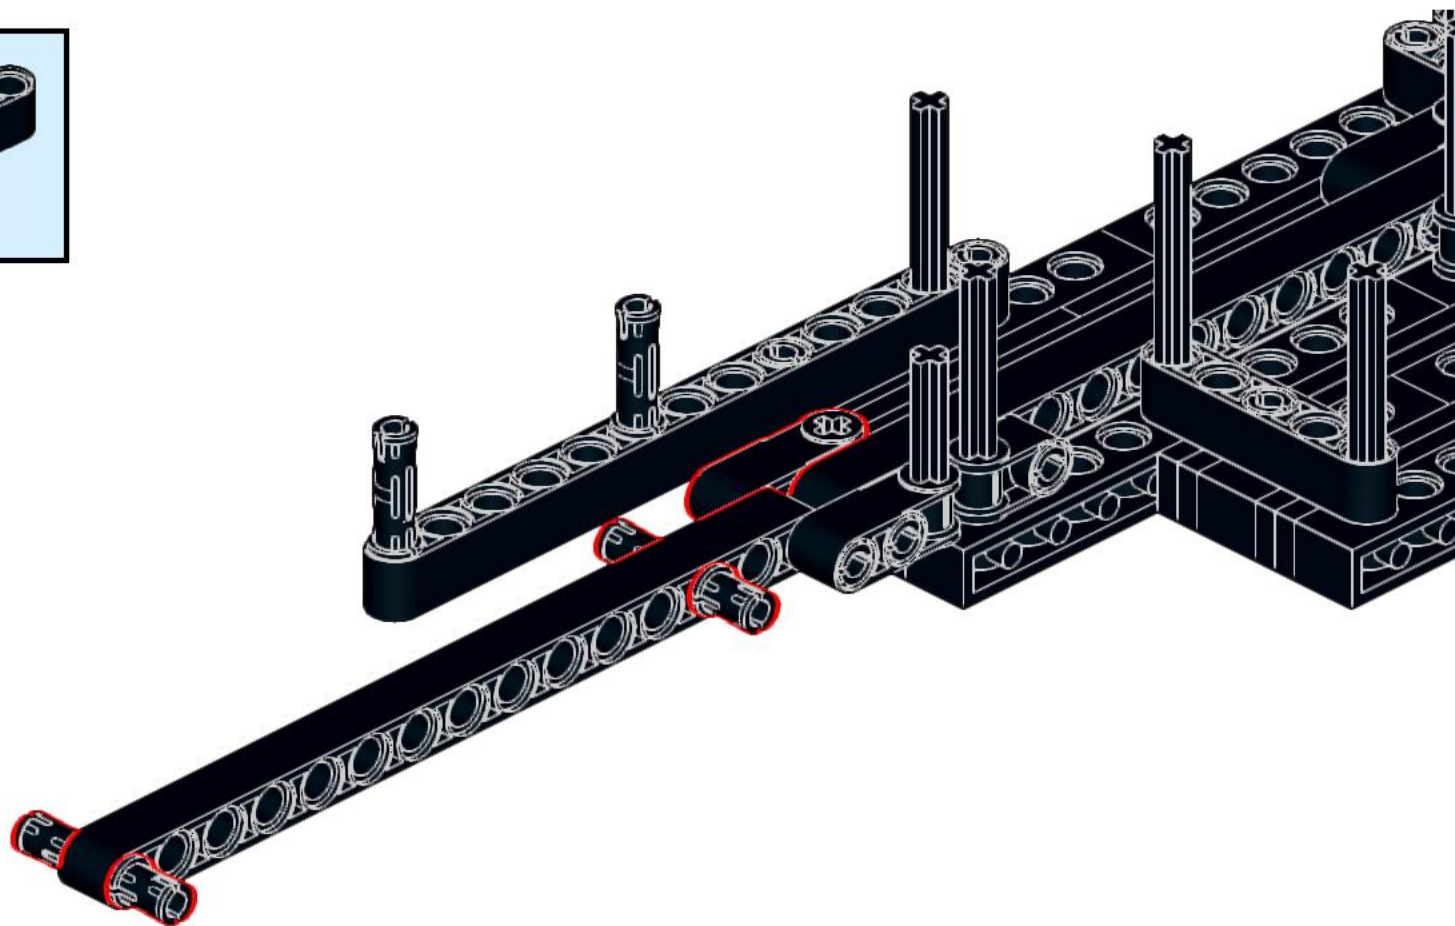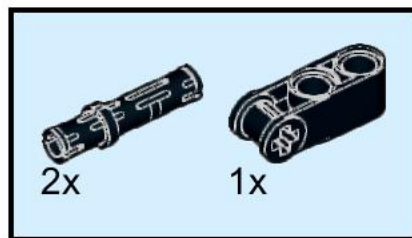



43

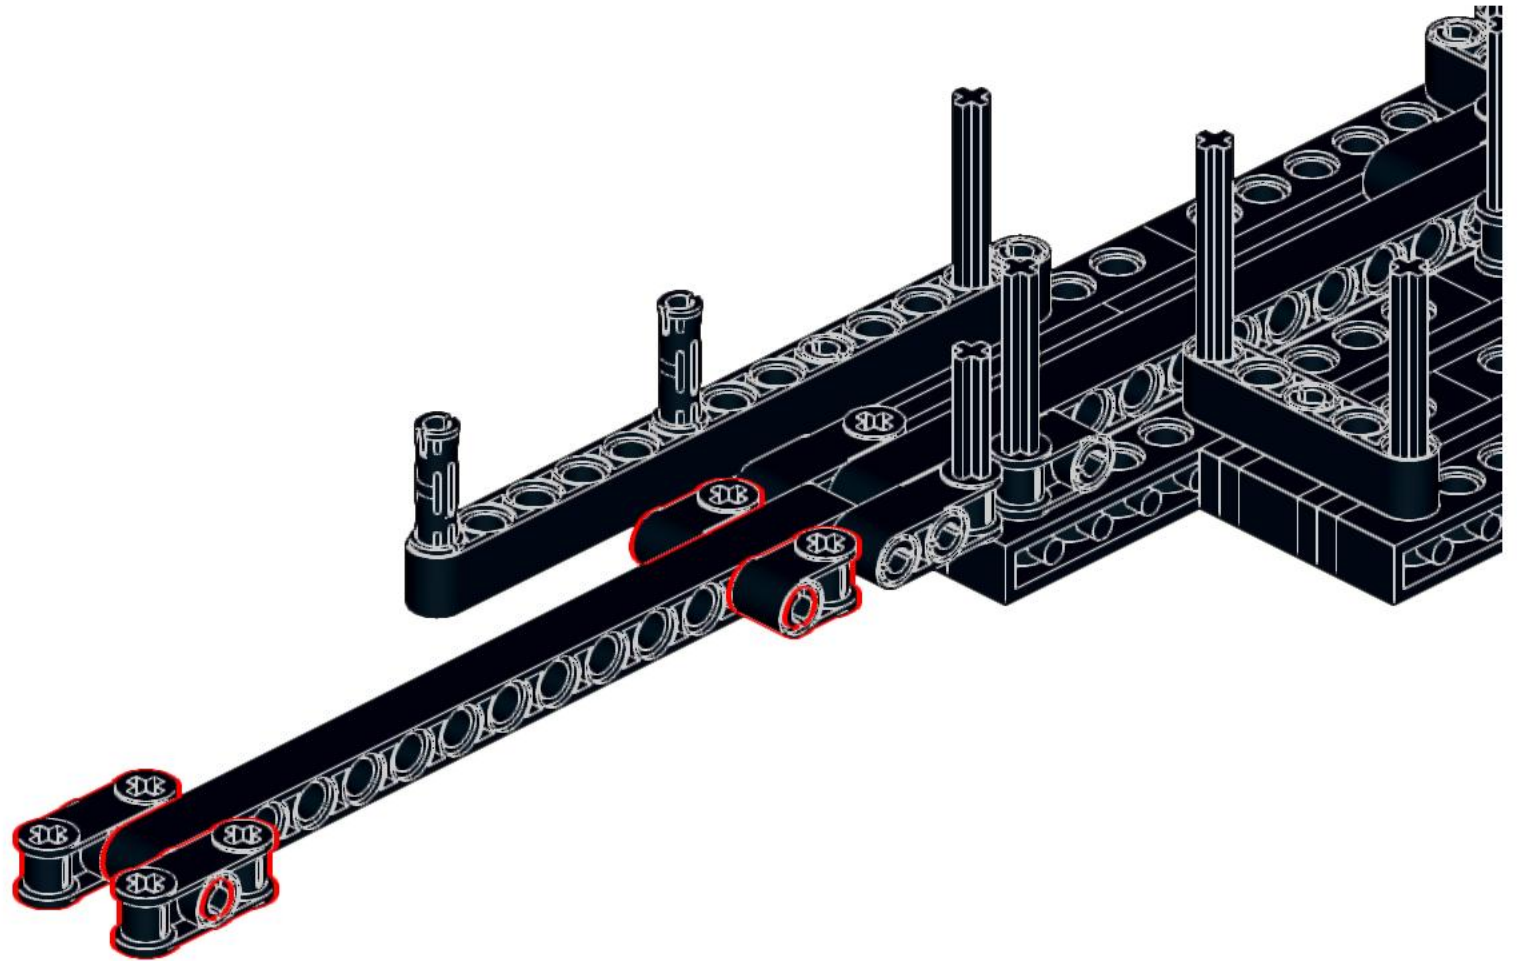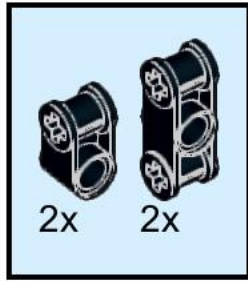



44

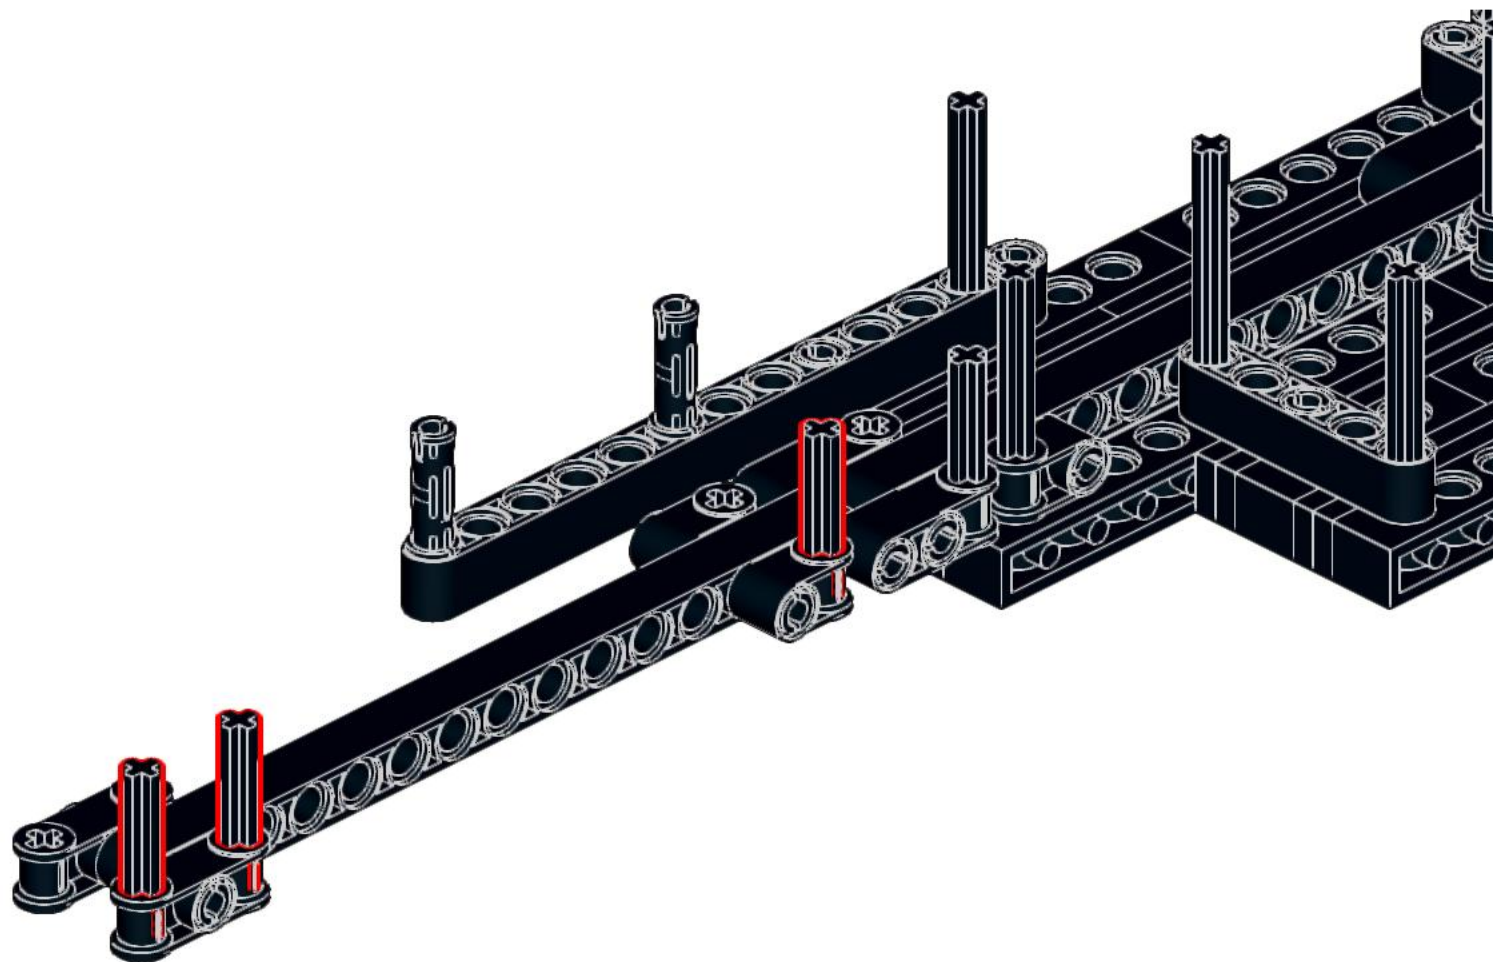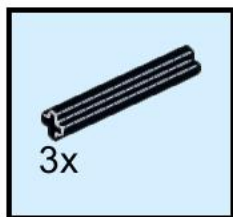



45

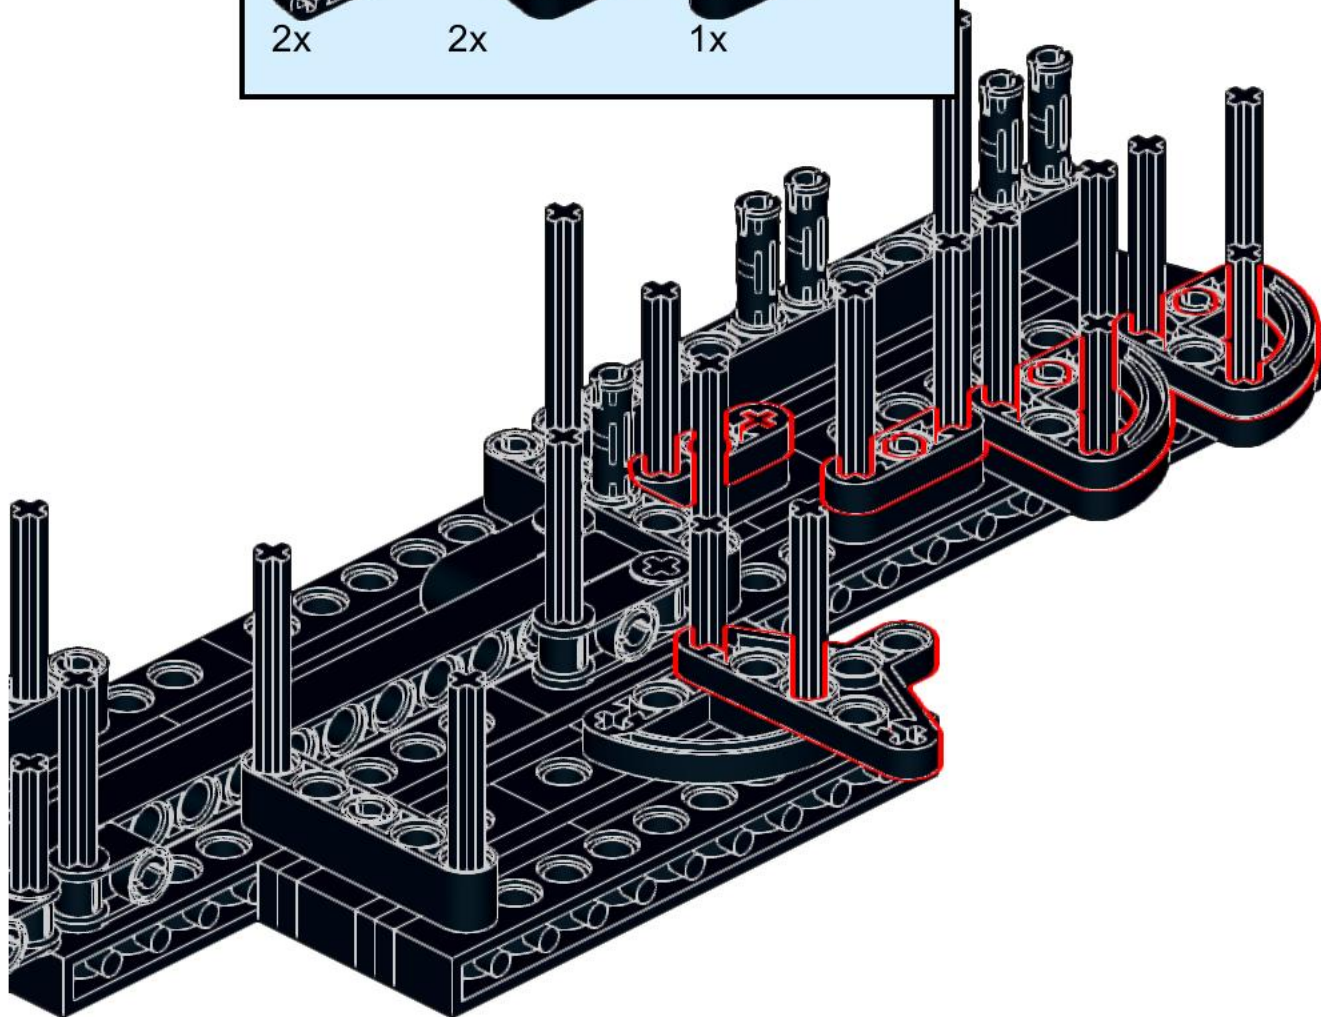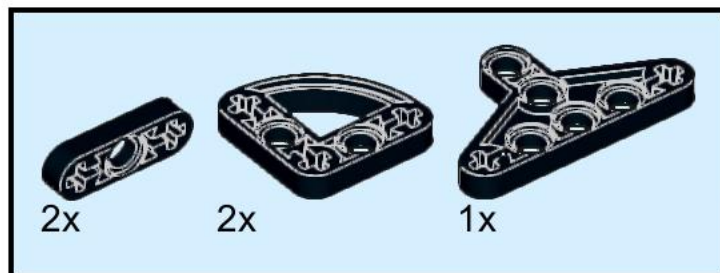

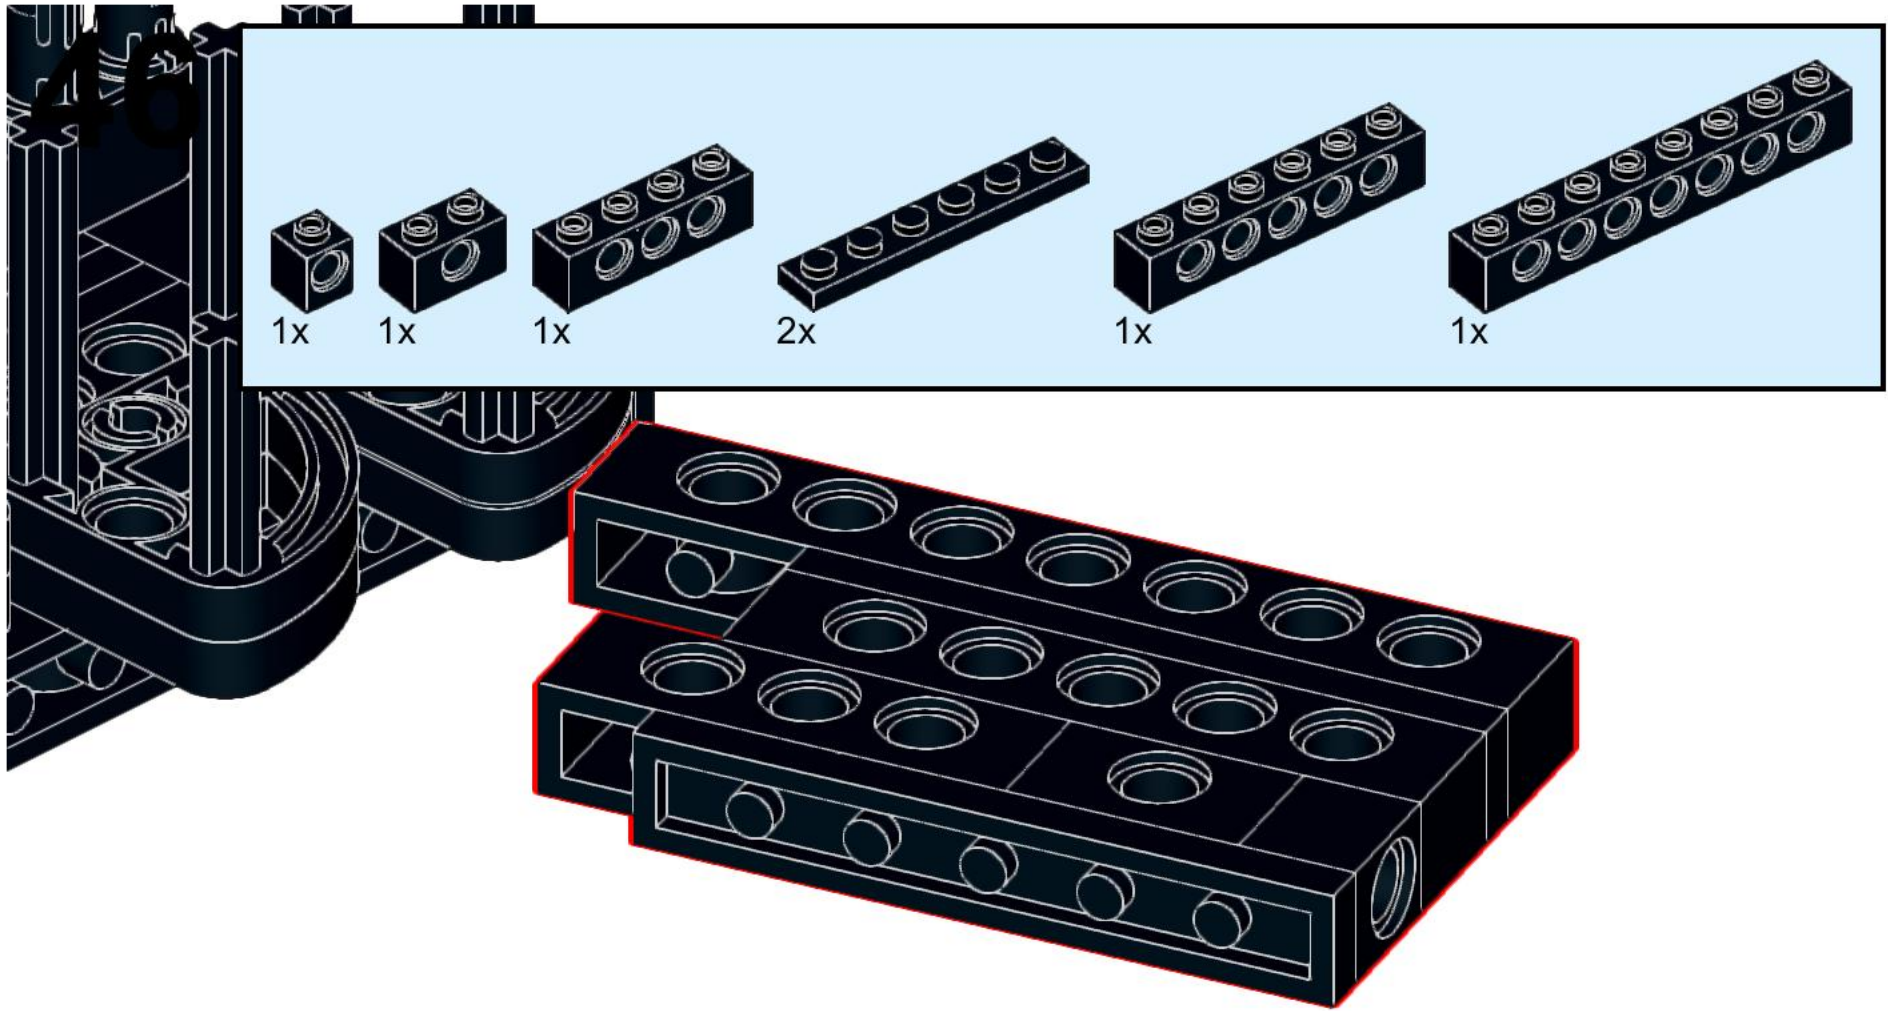


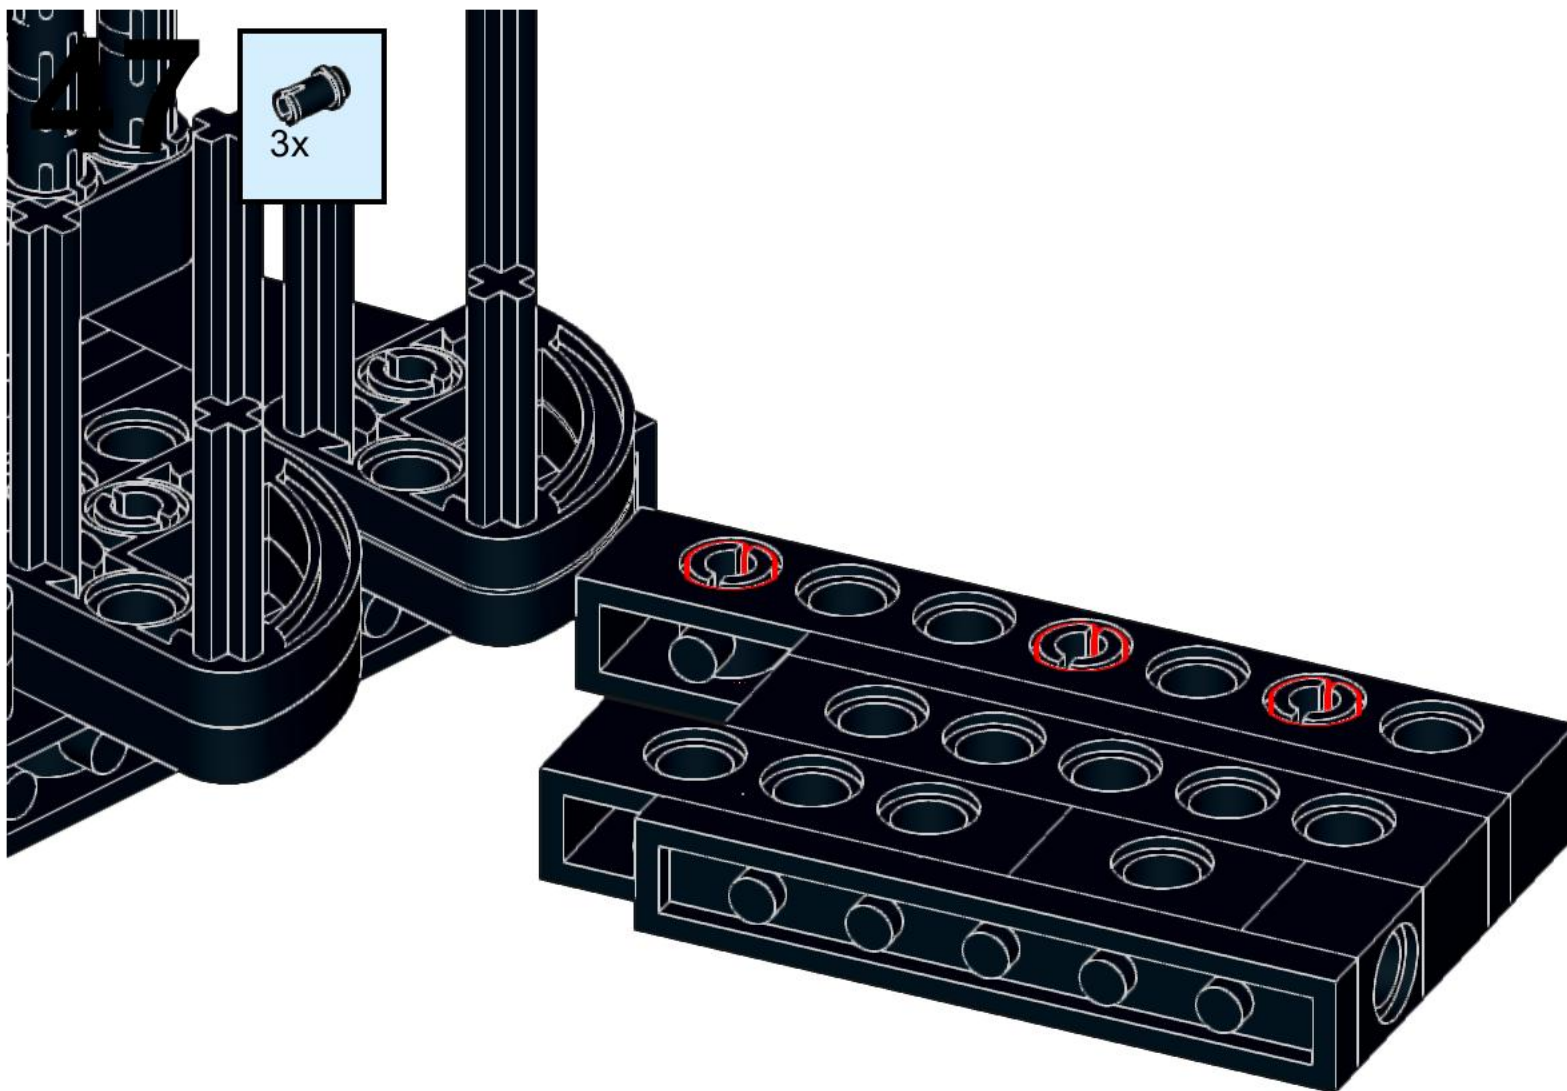



48

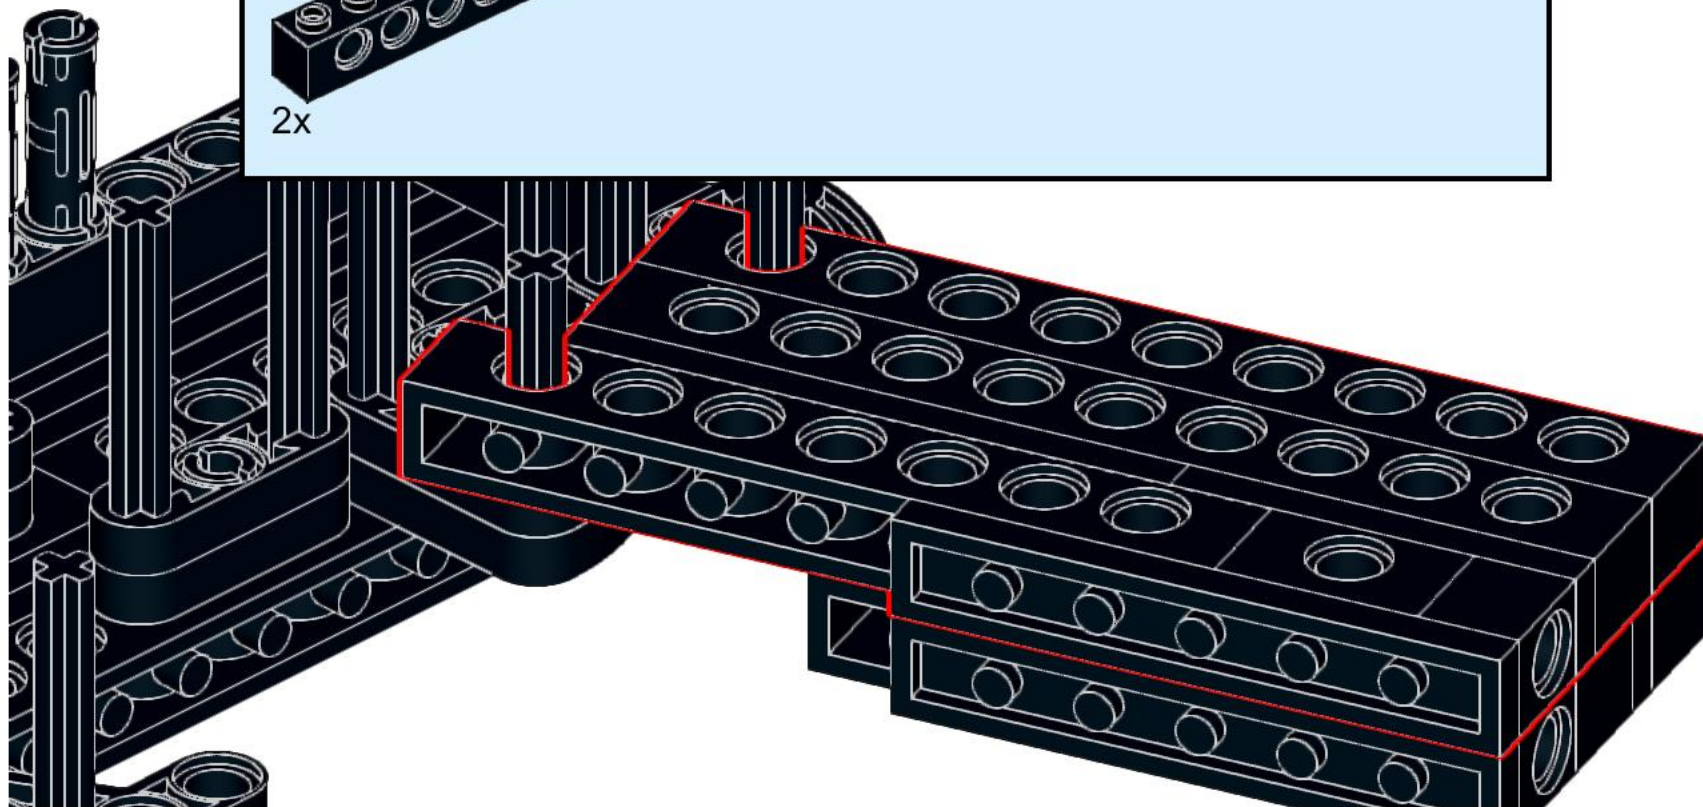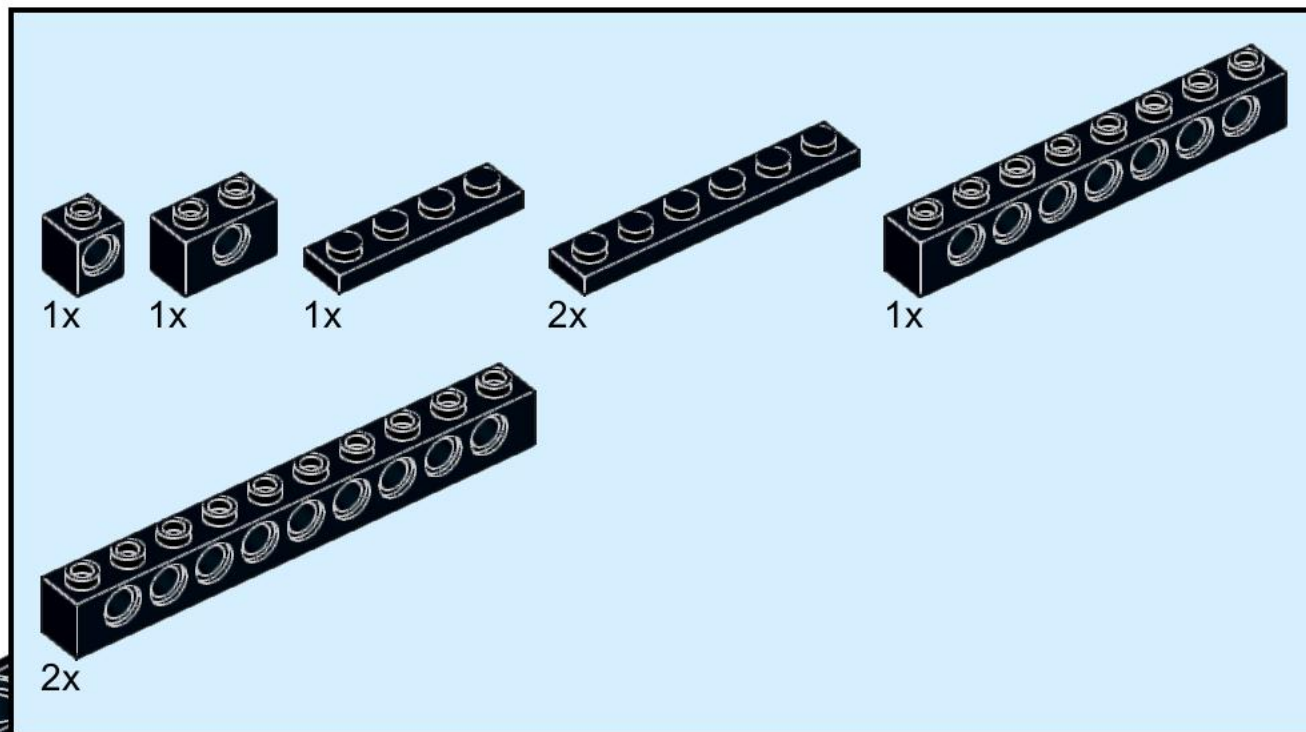




49

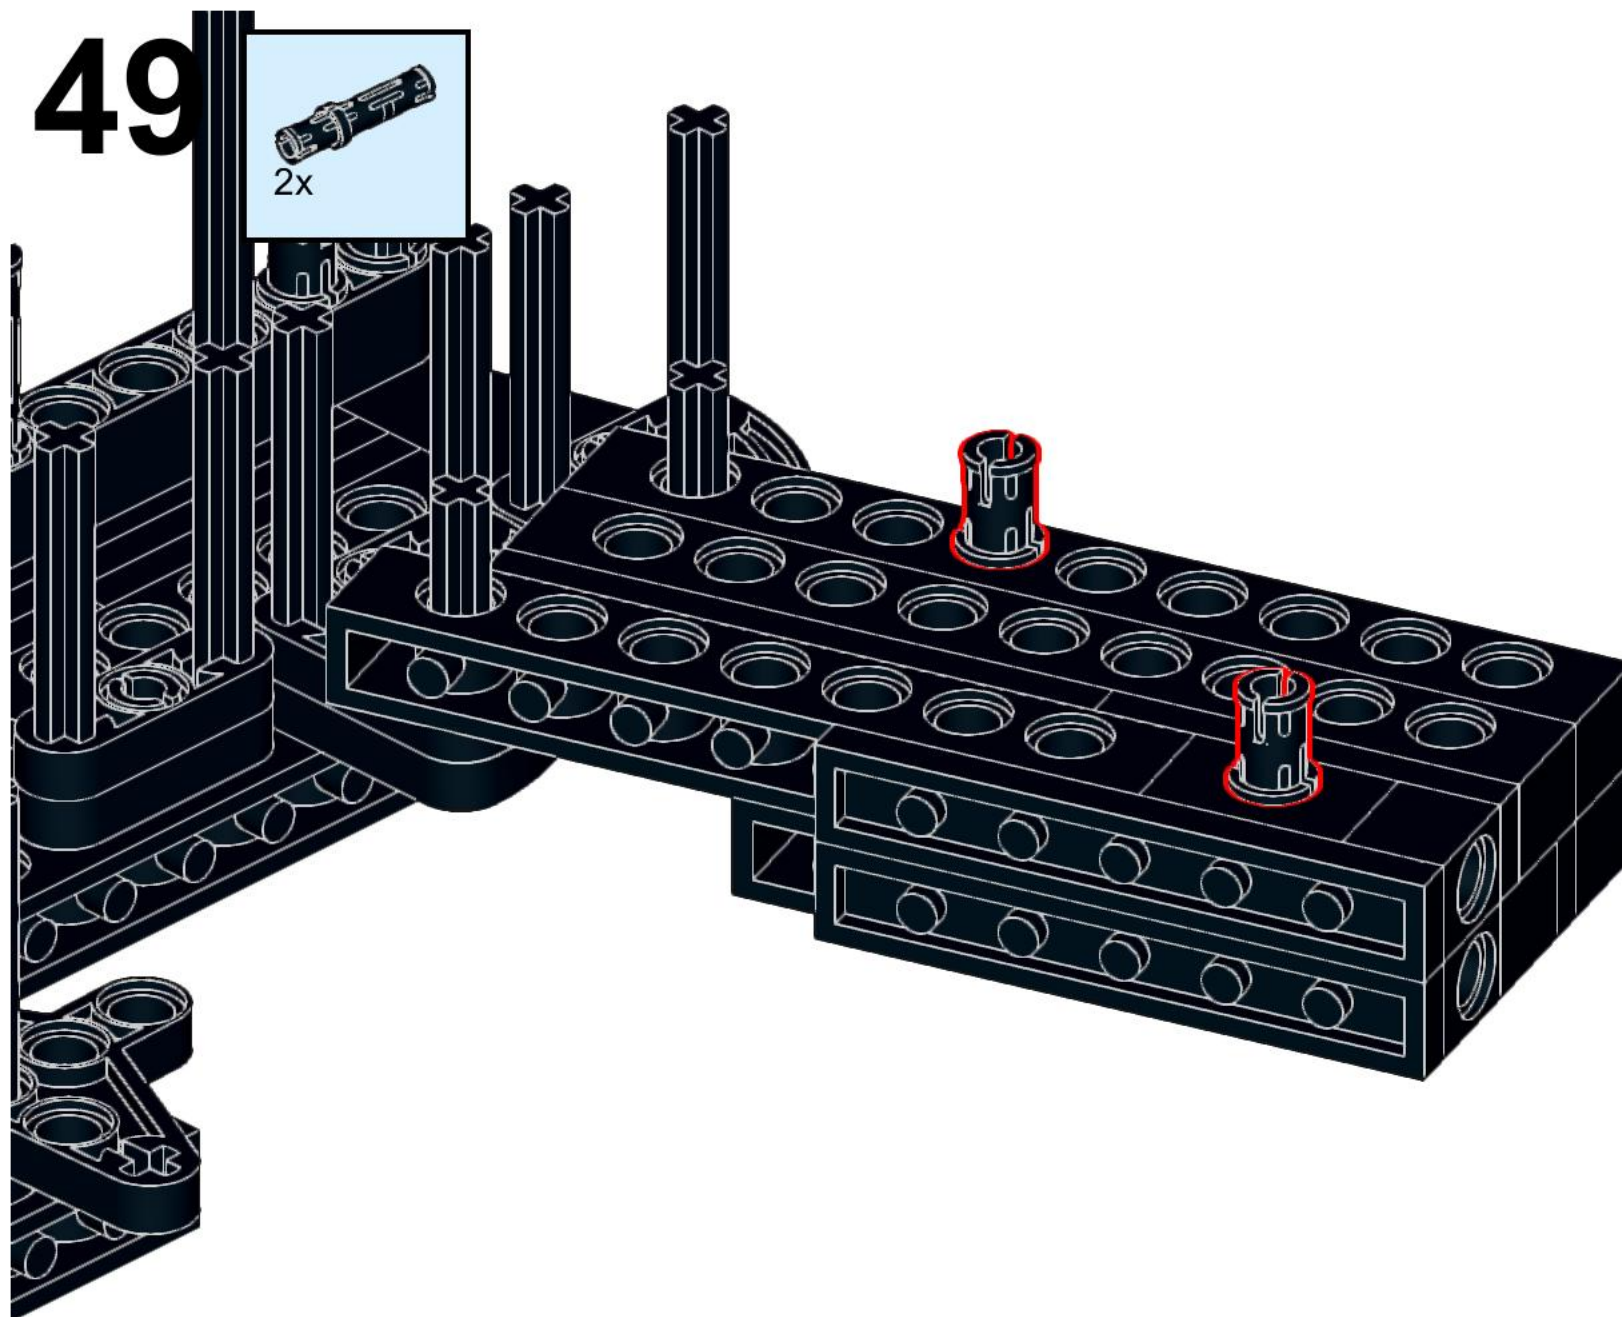



50

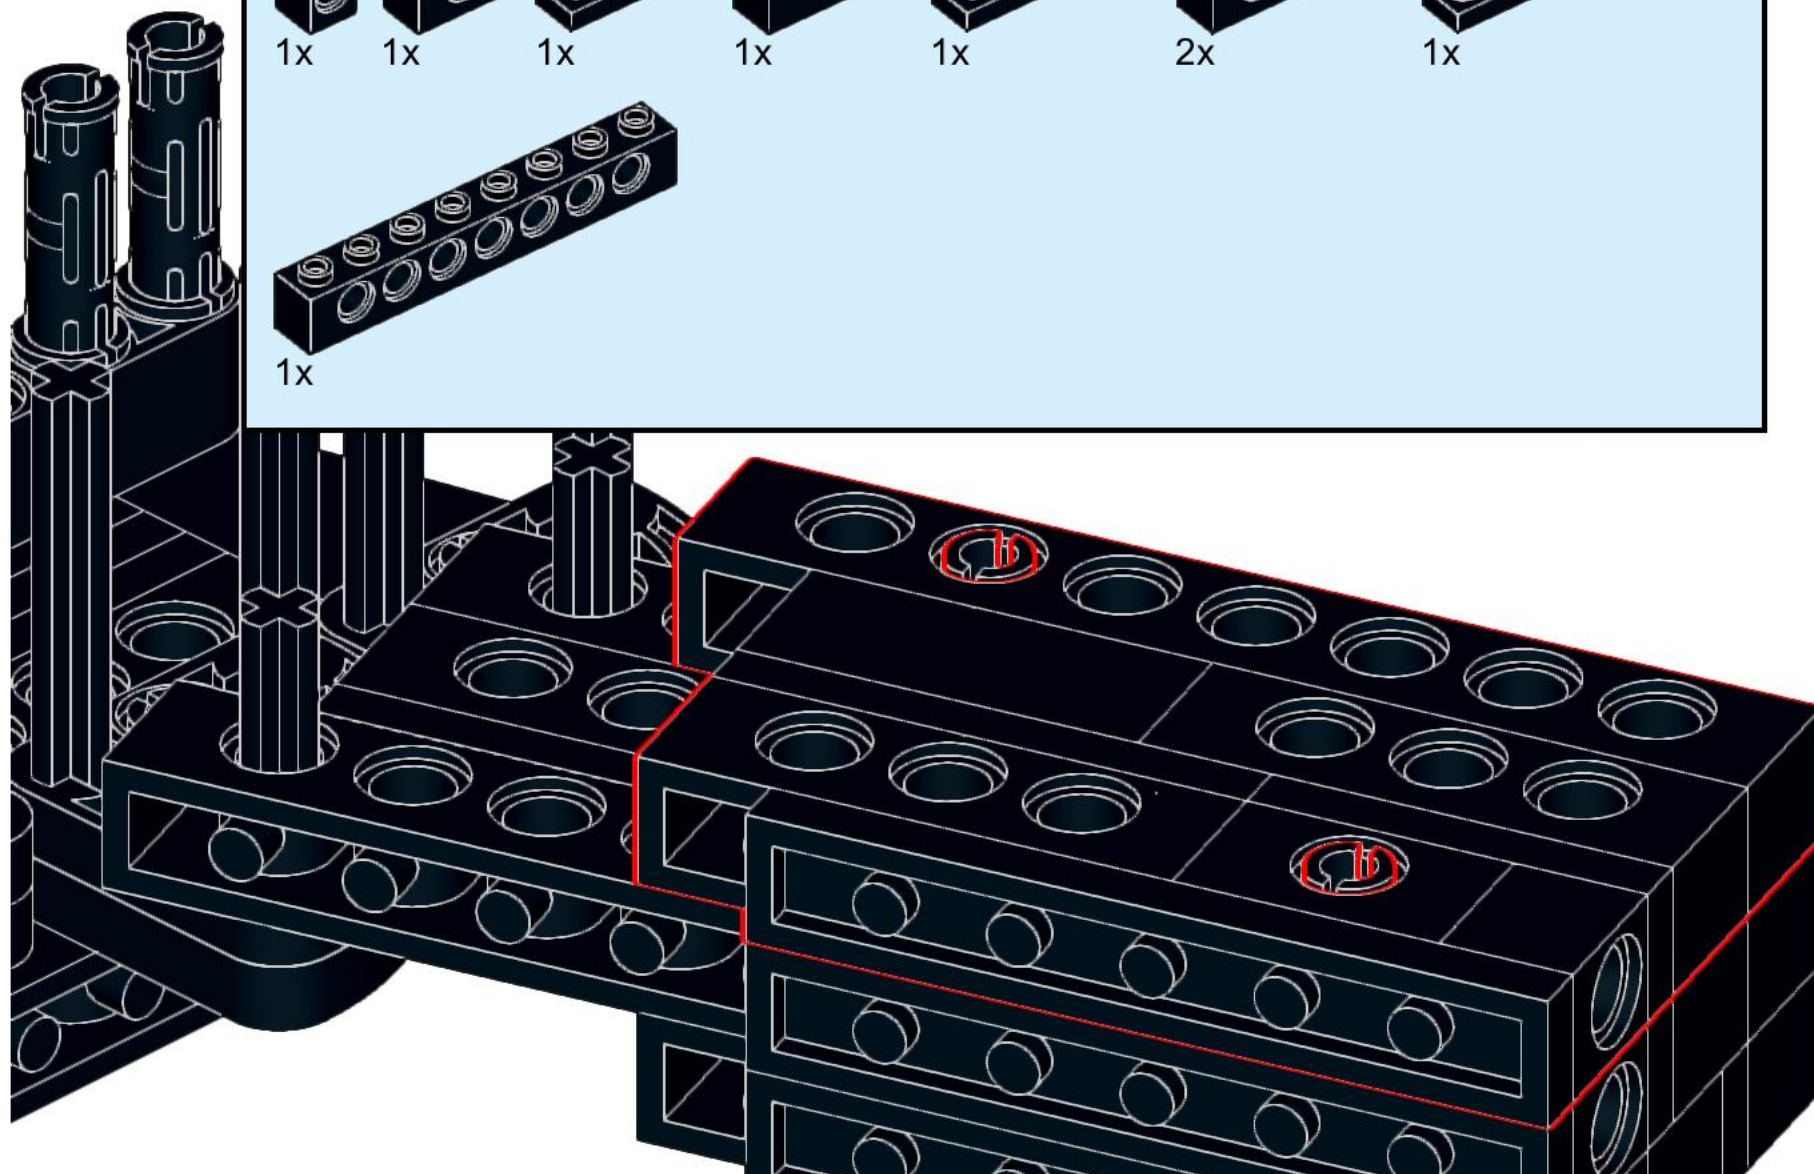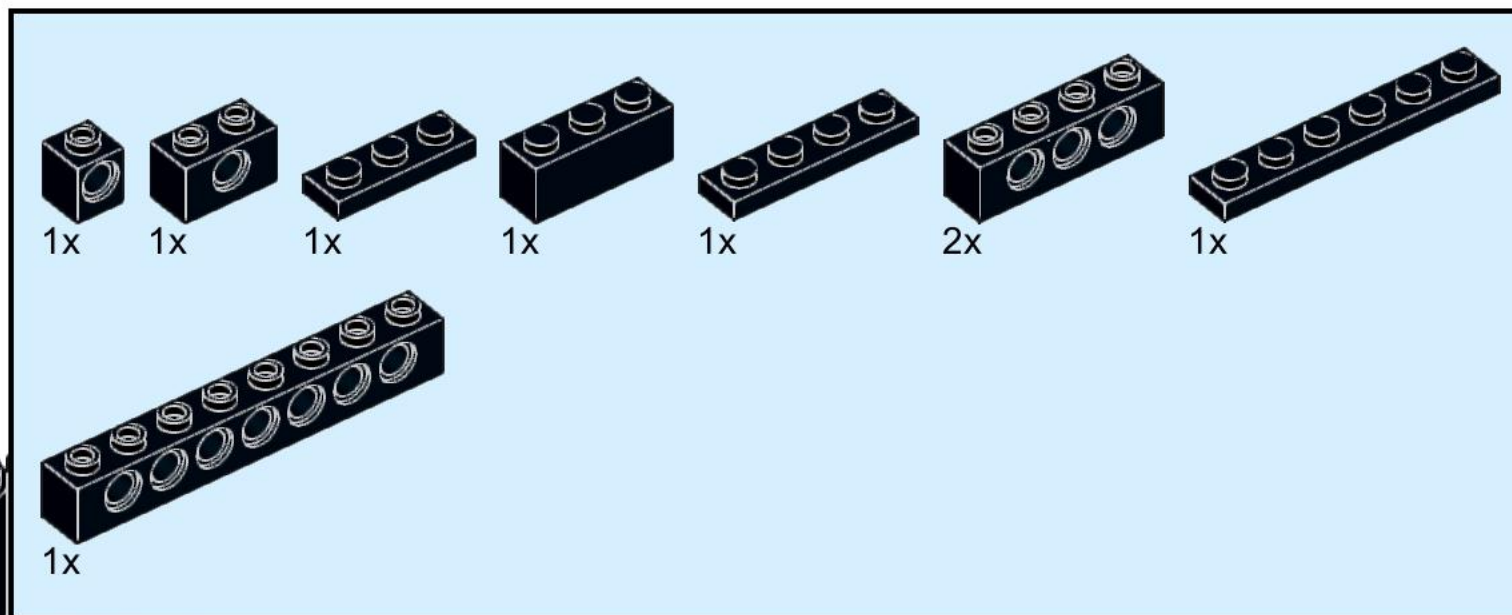


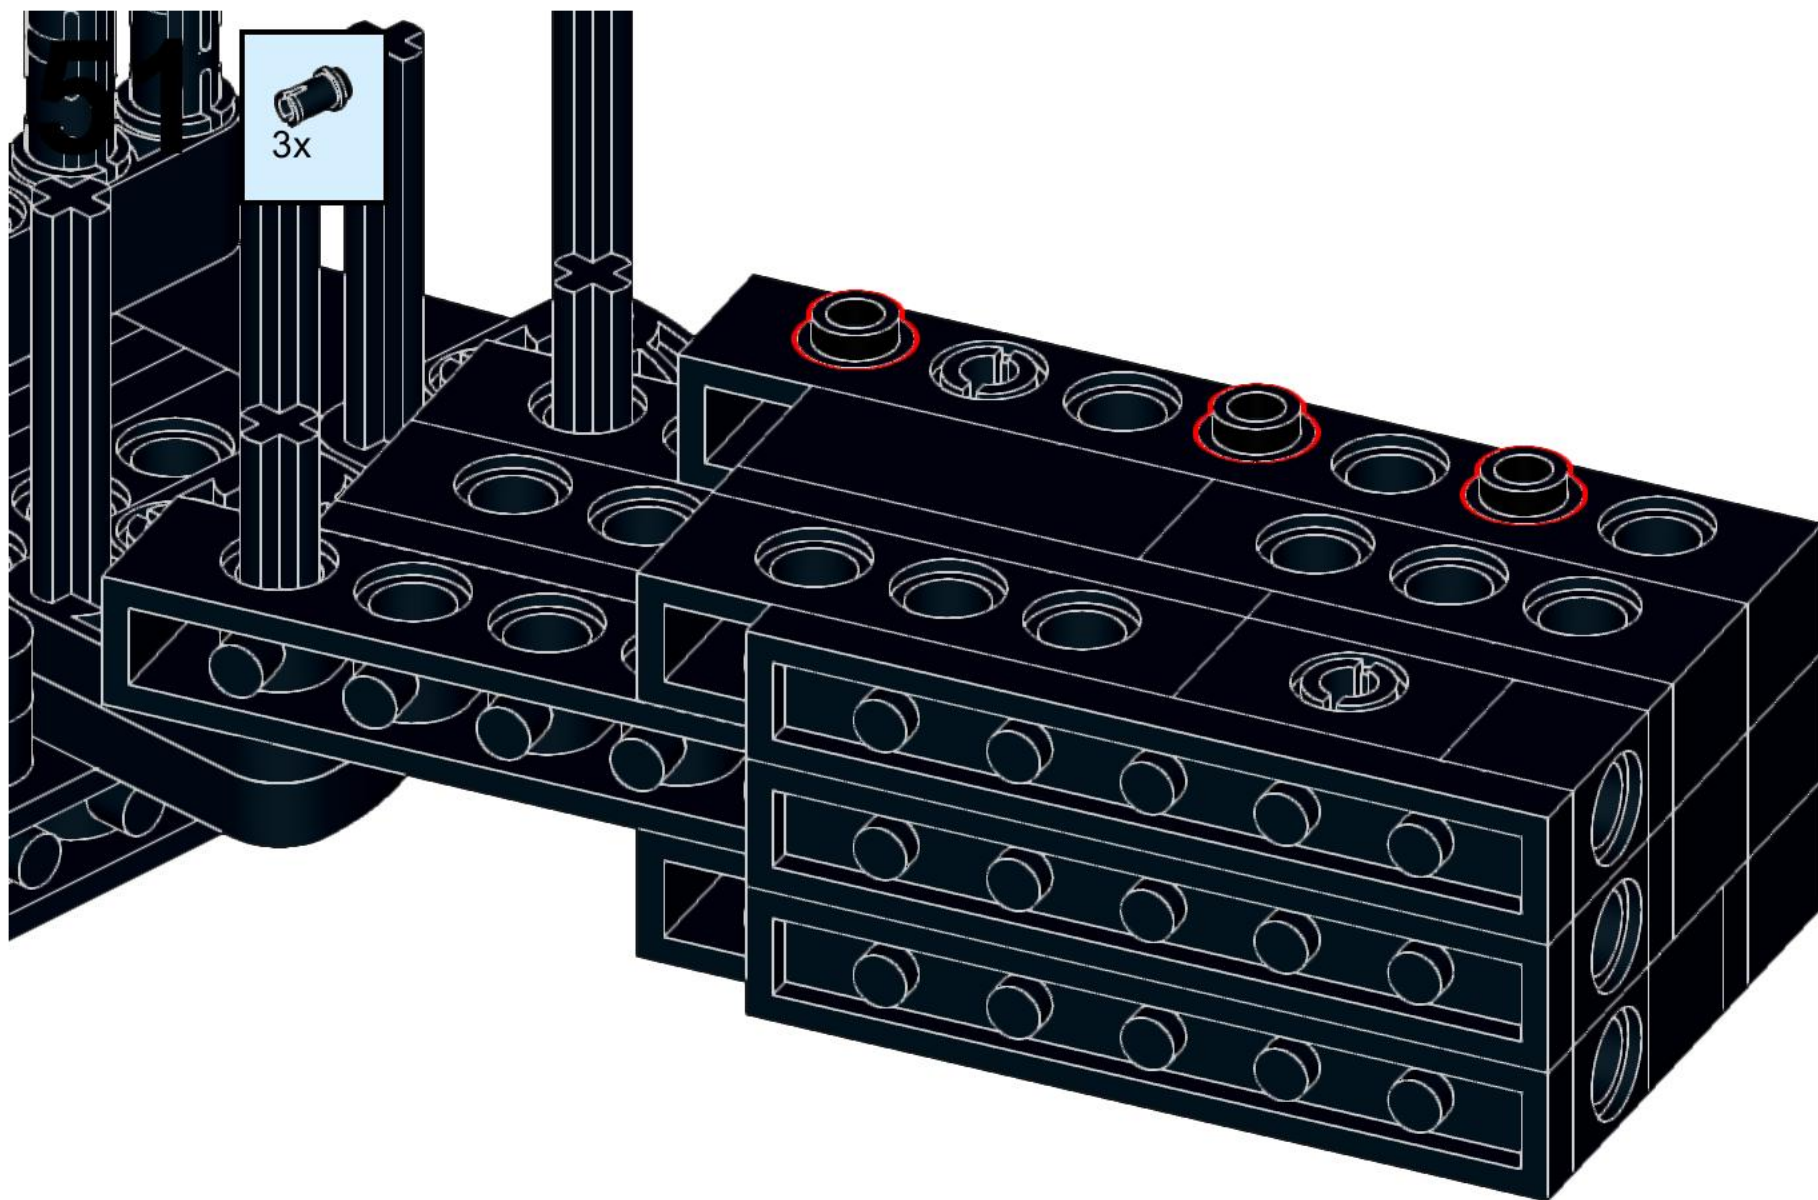


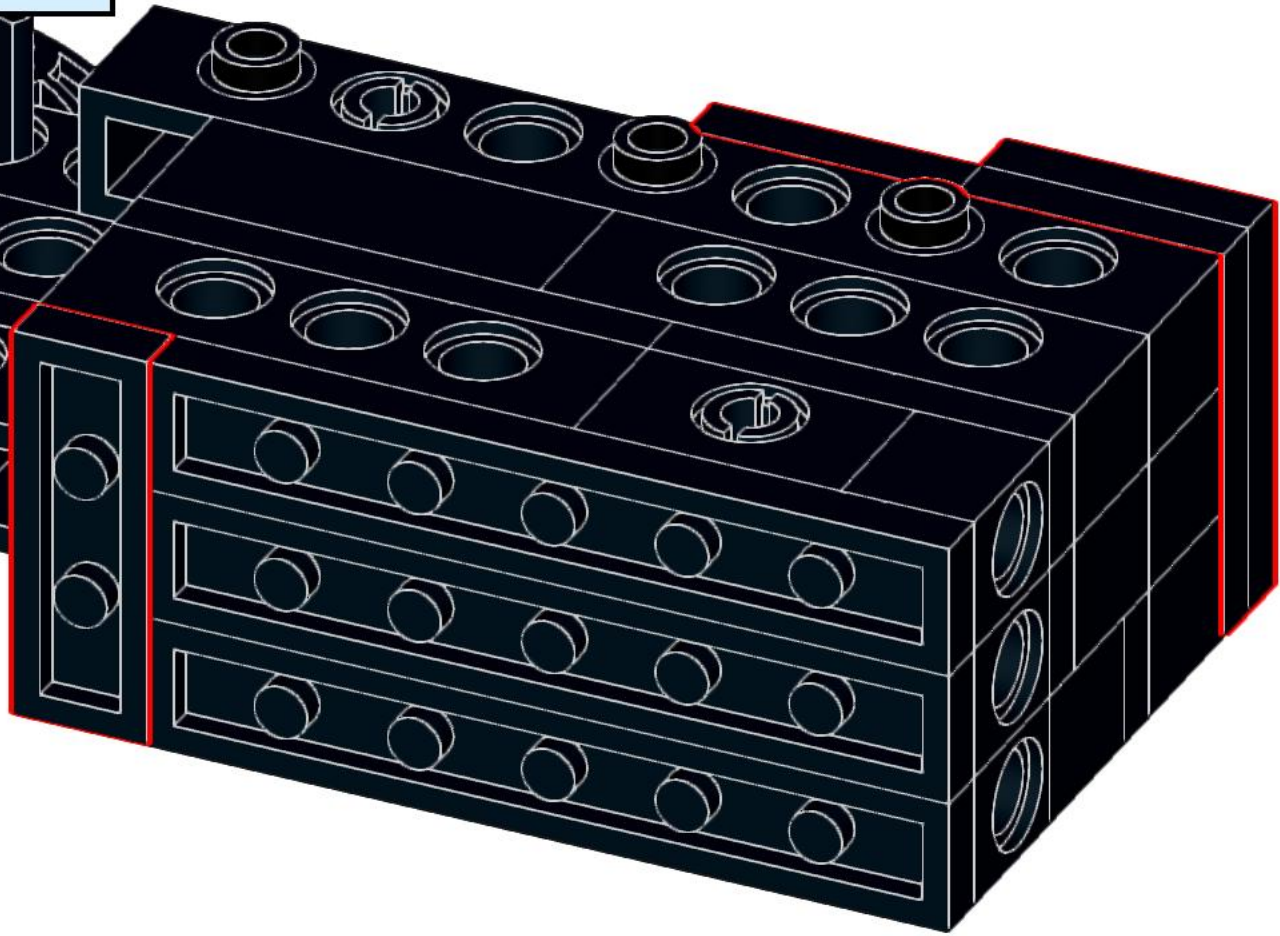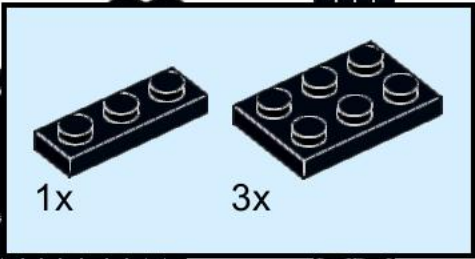


53

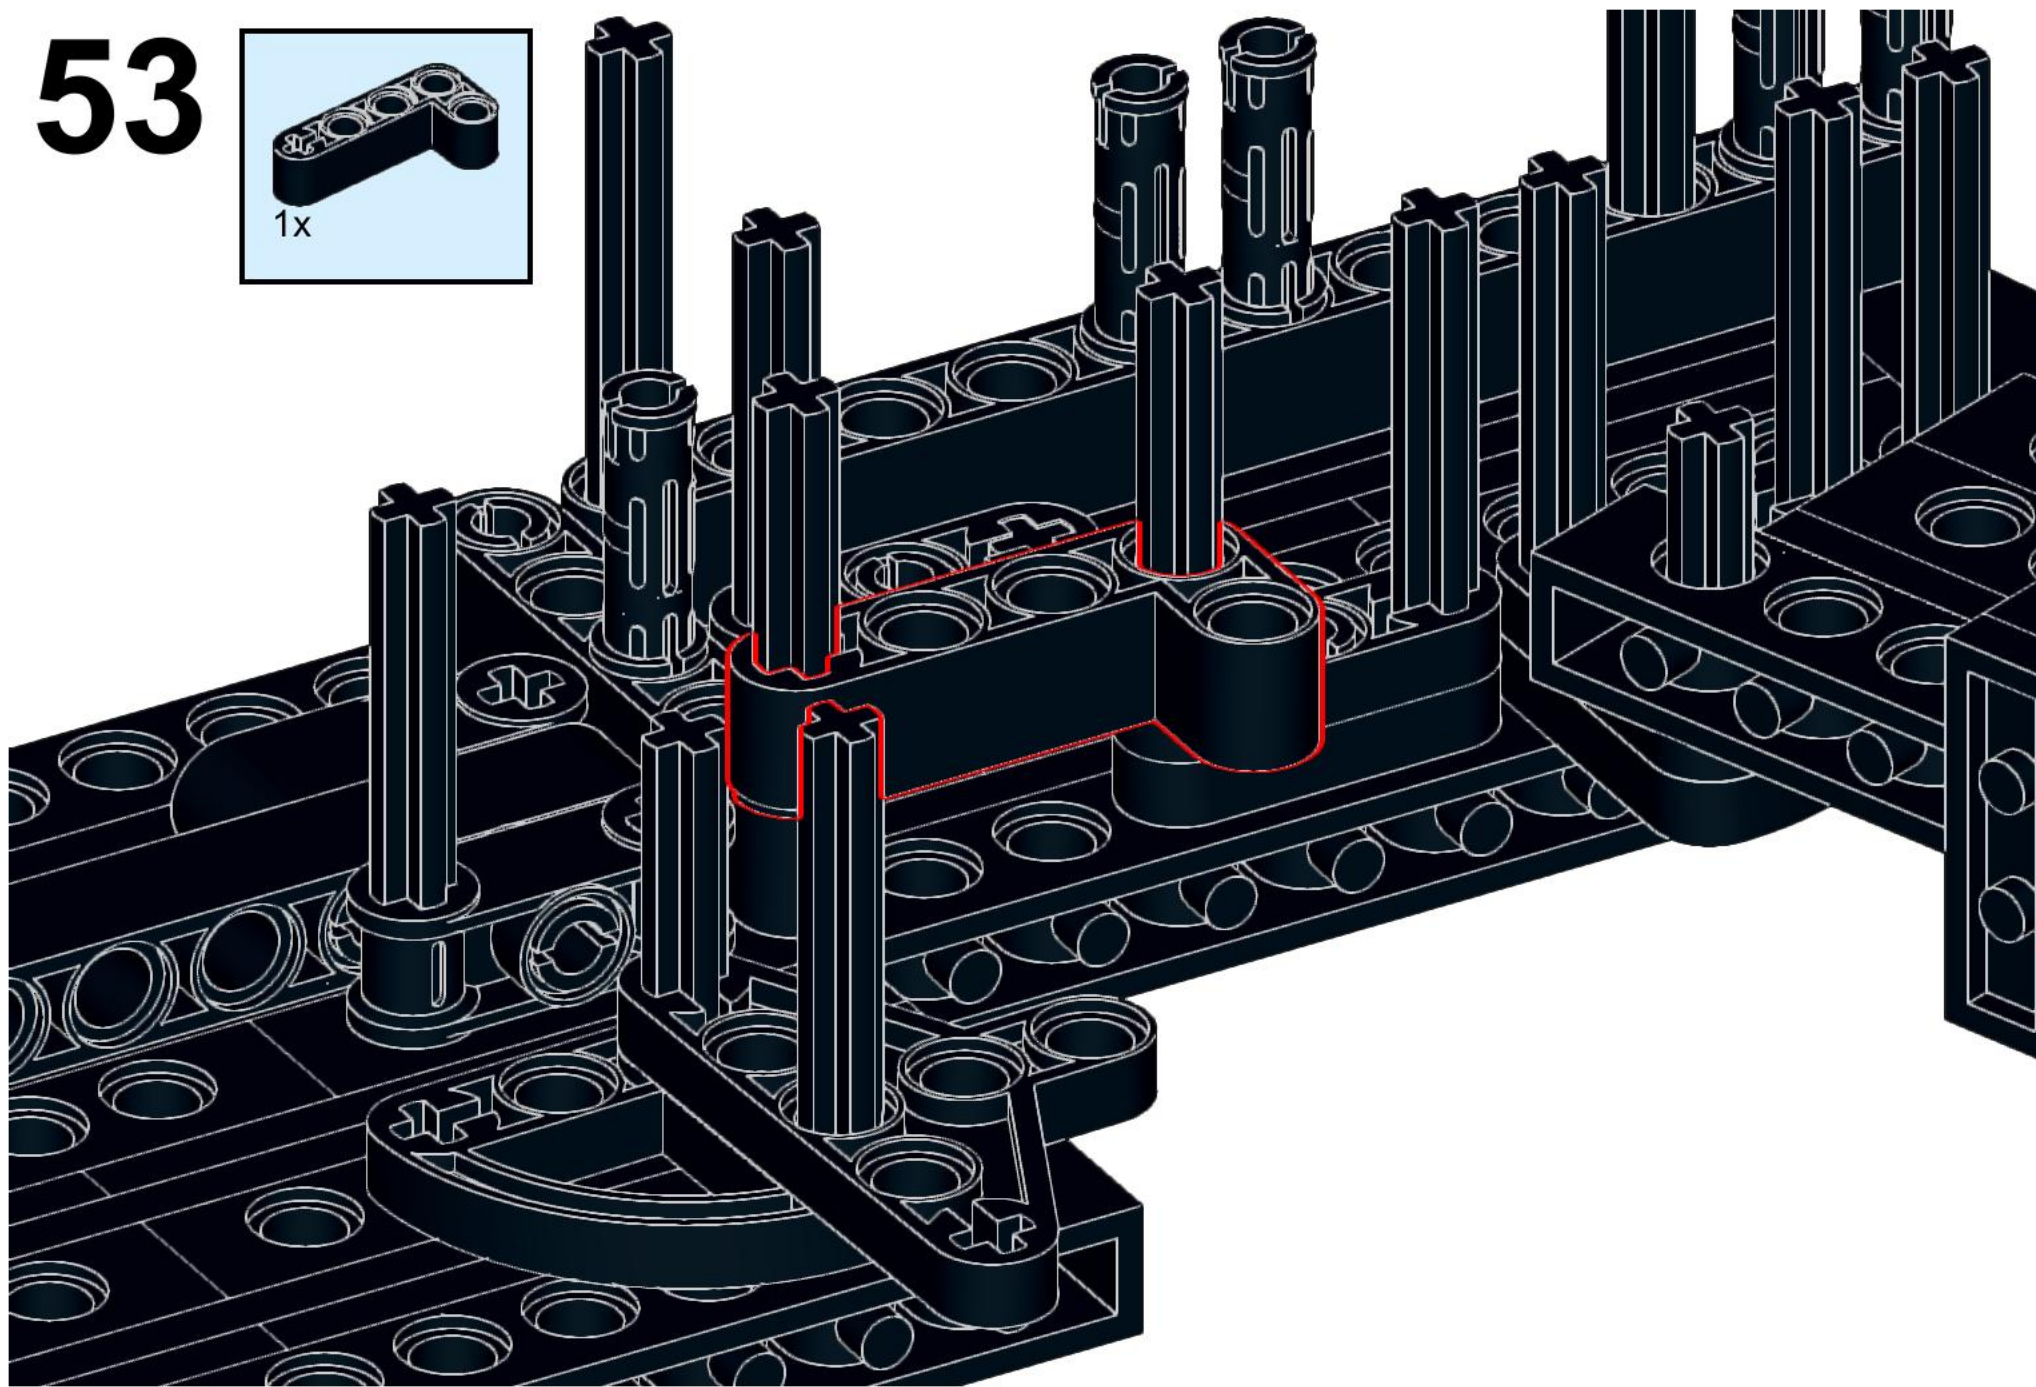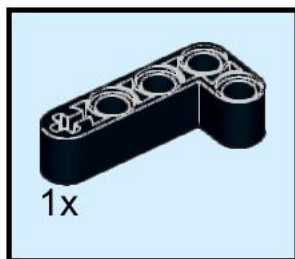


54

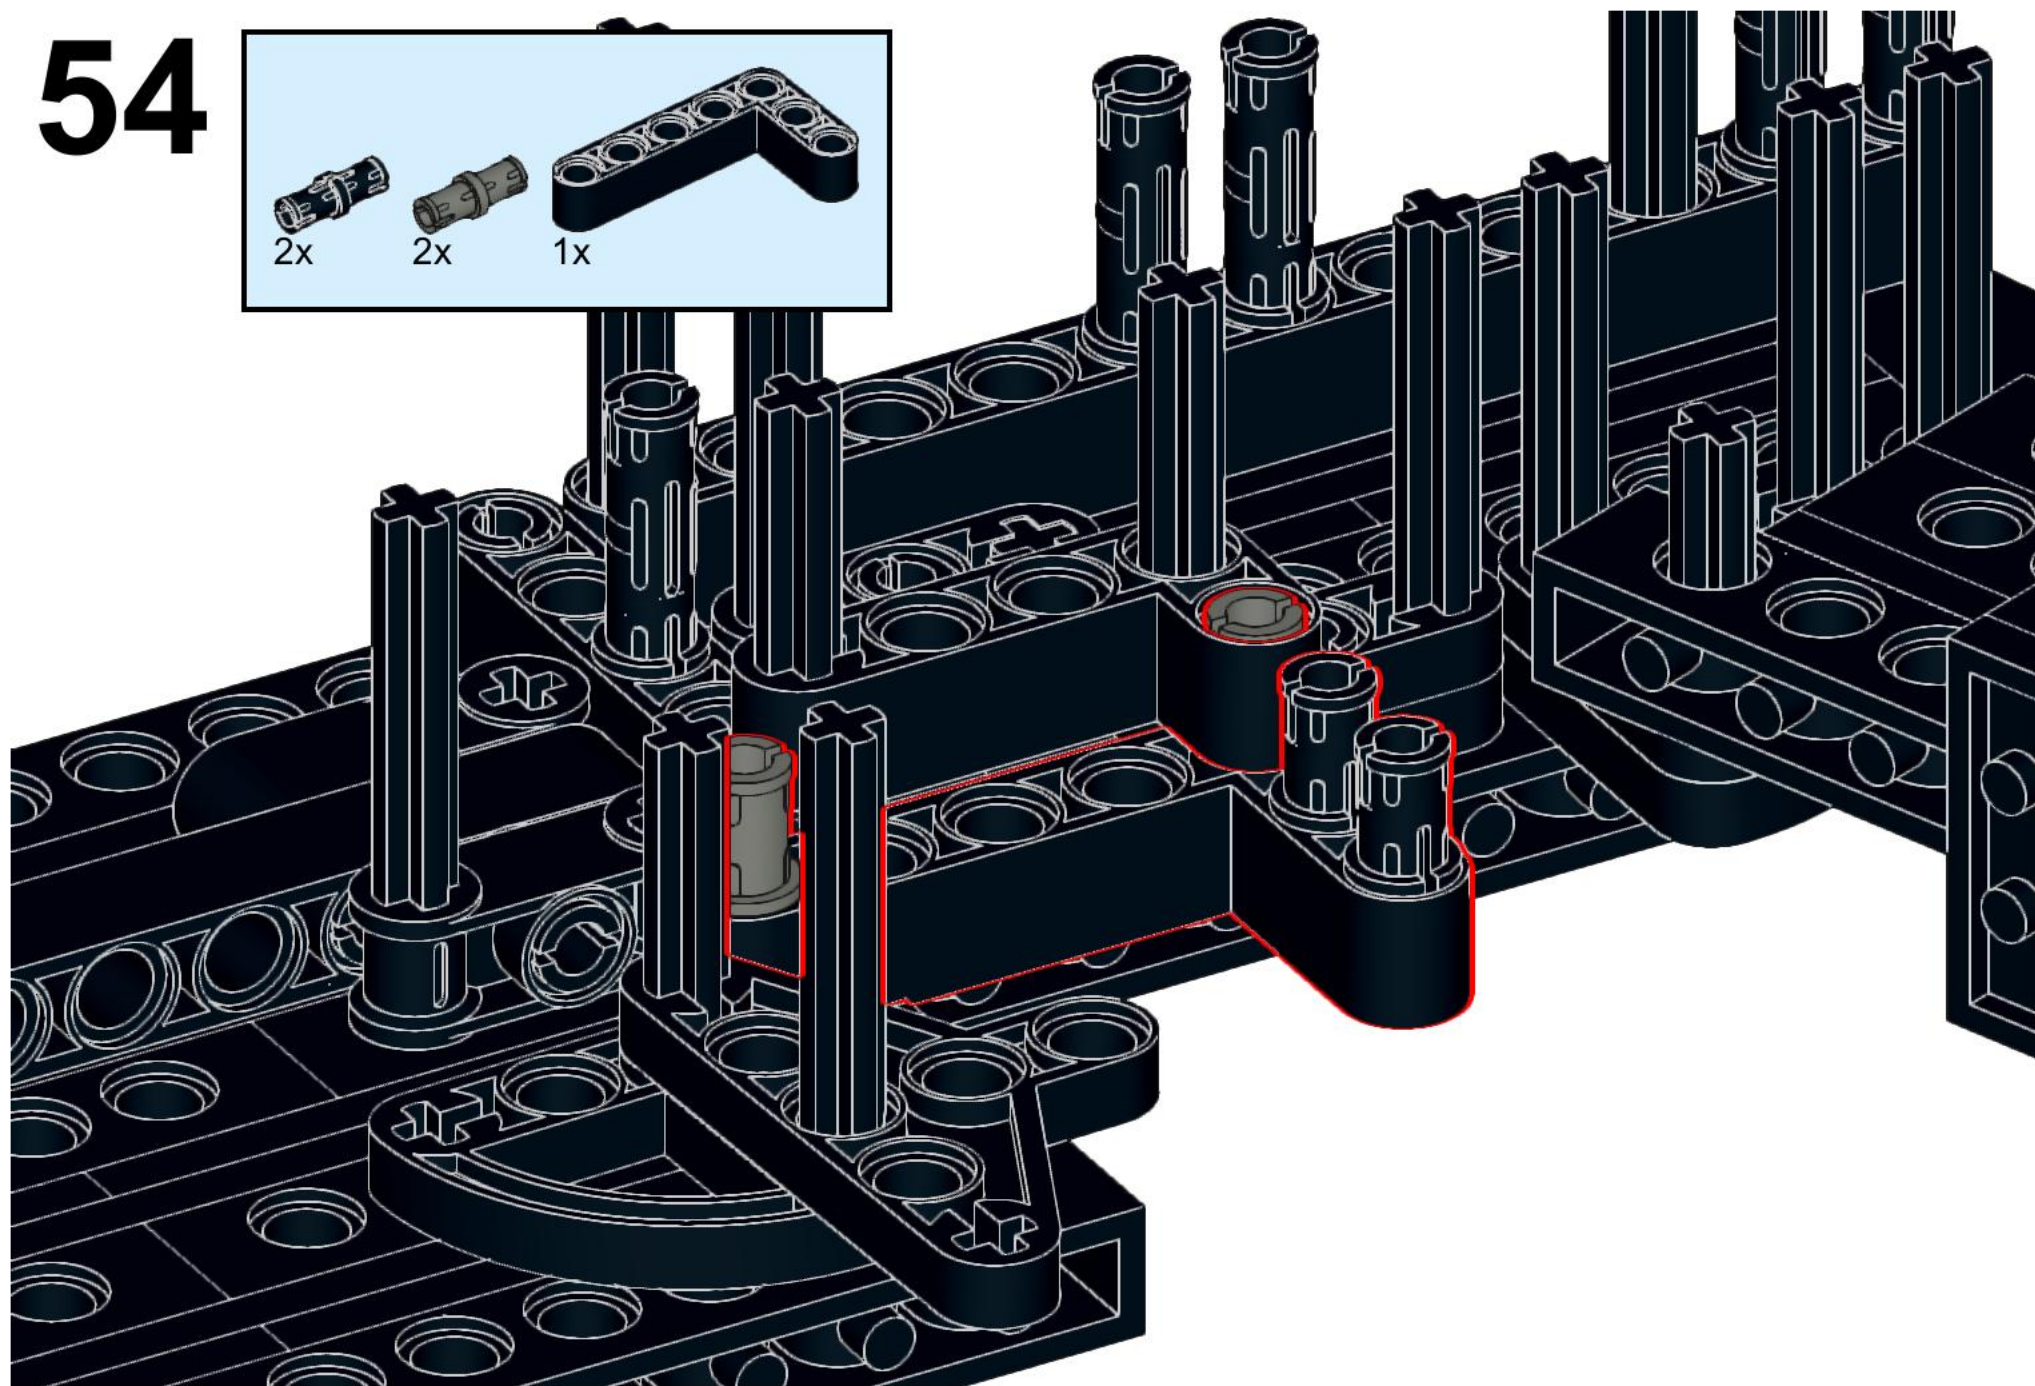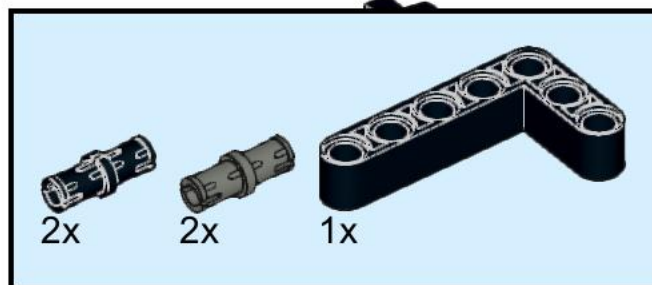



55

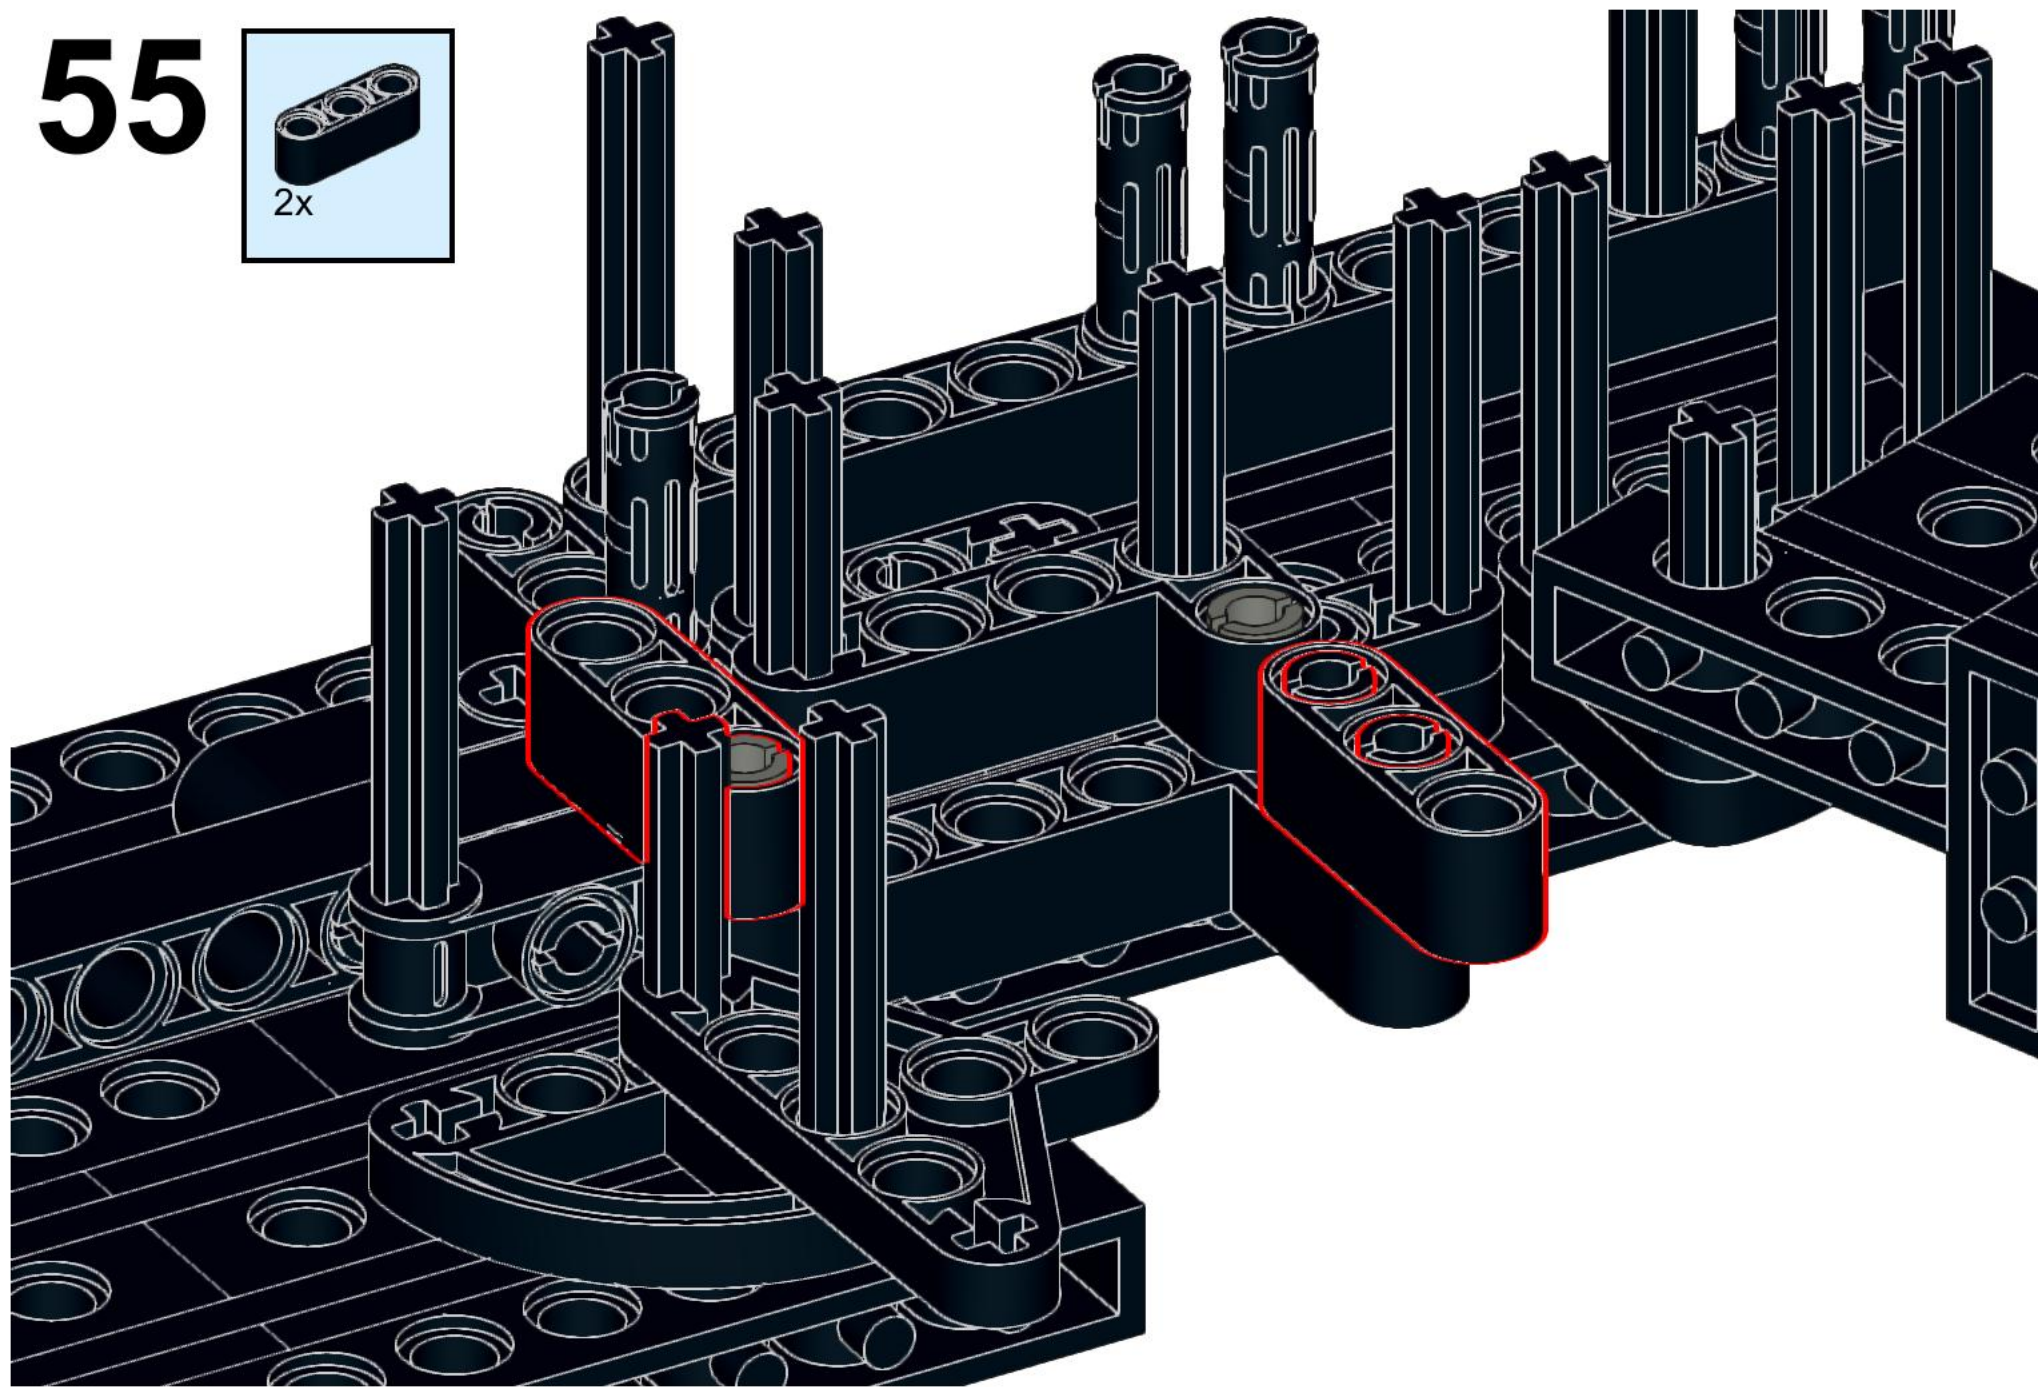

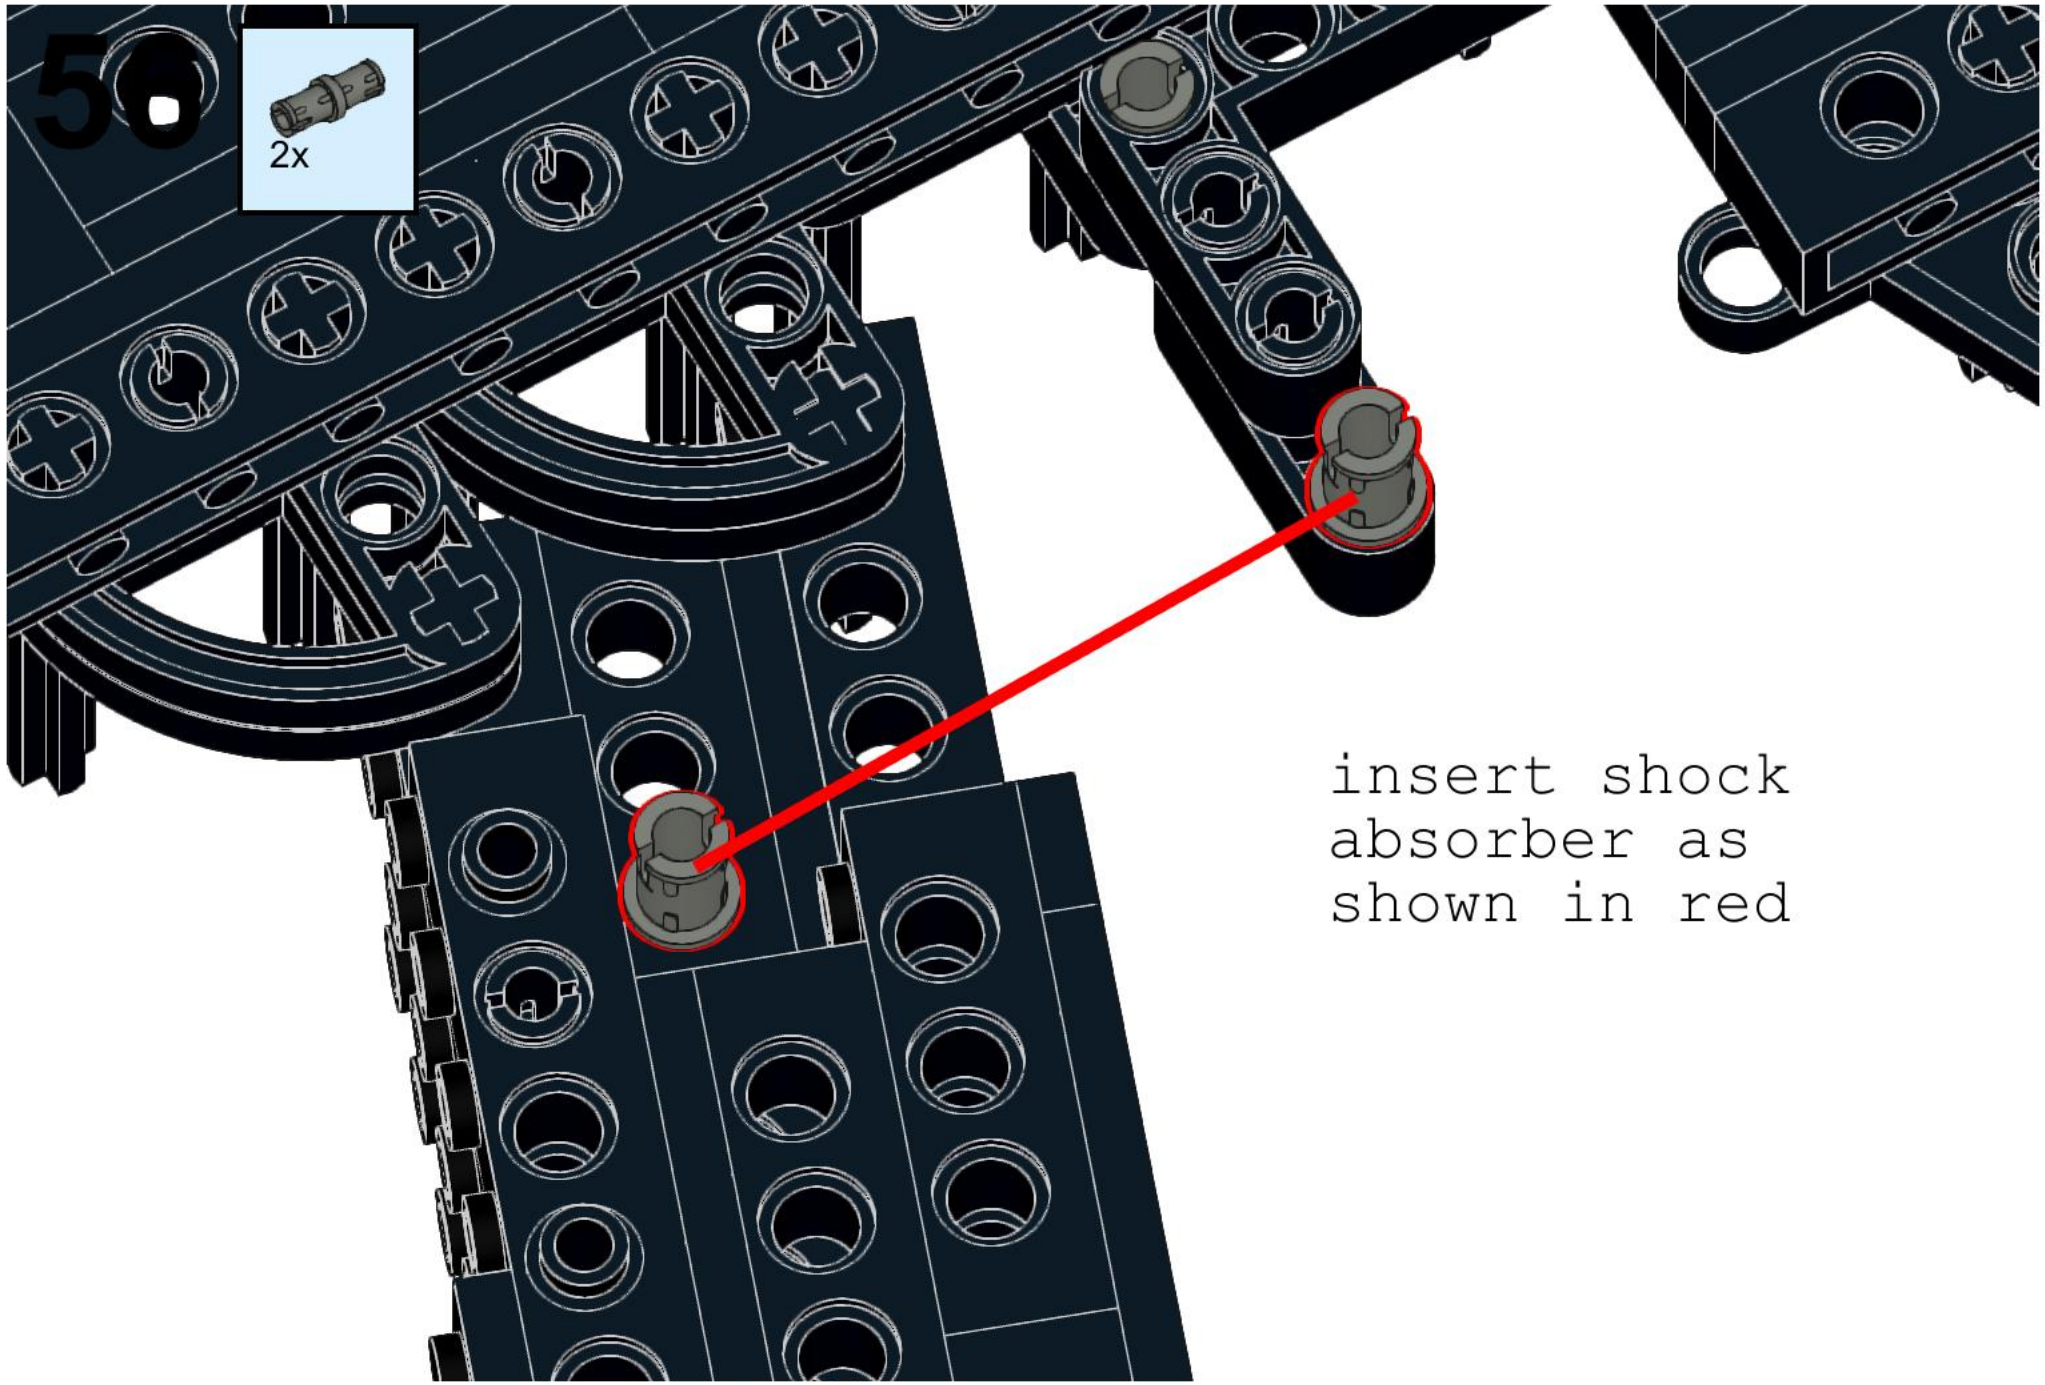


insert shock
absorber as
shown in red



57

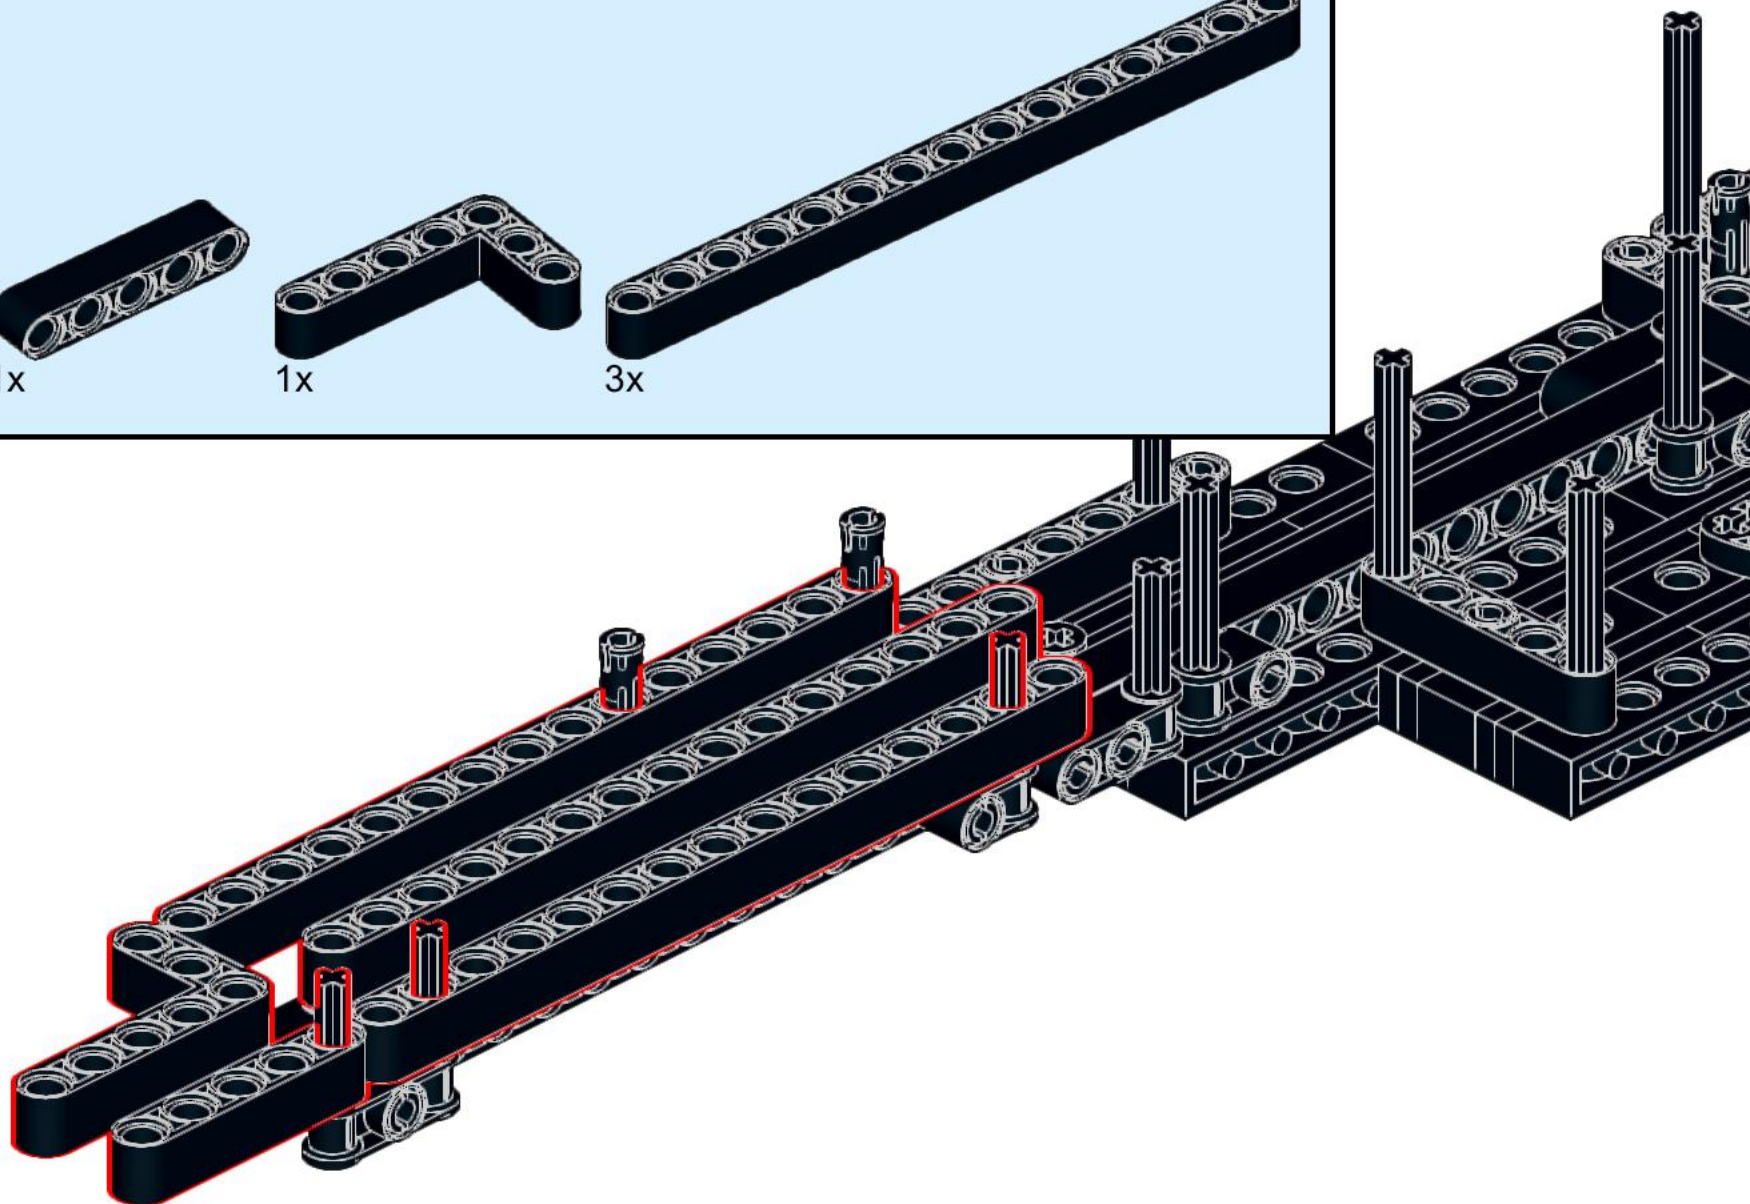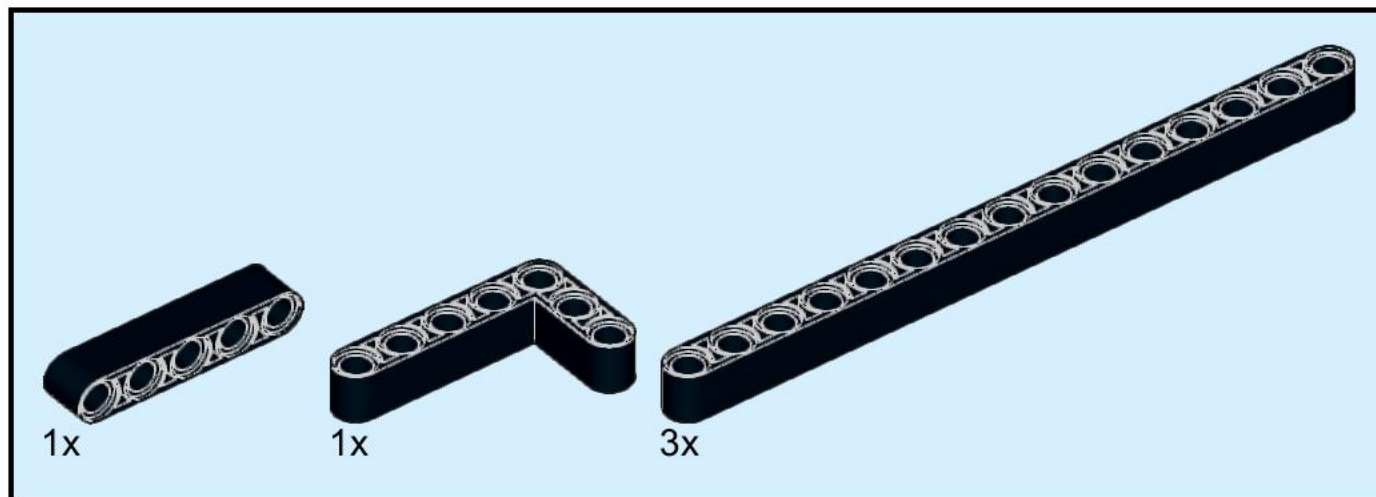



58

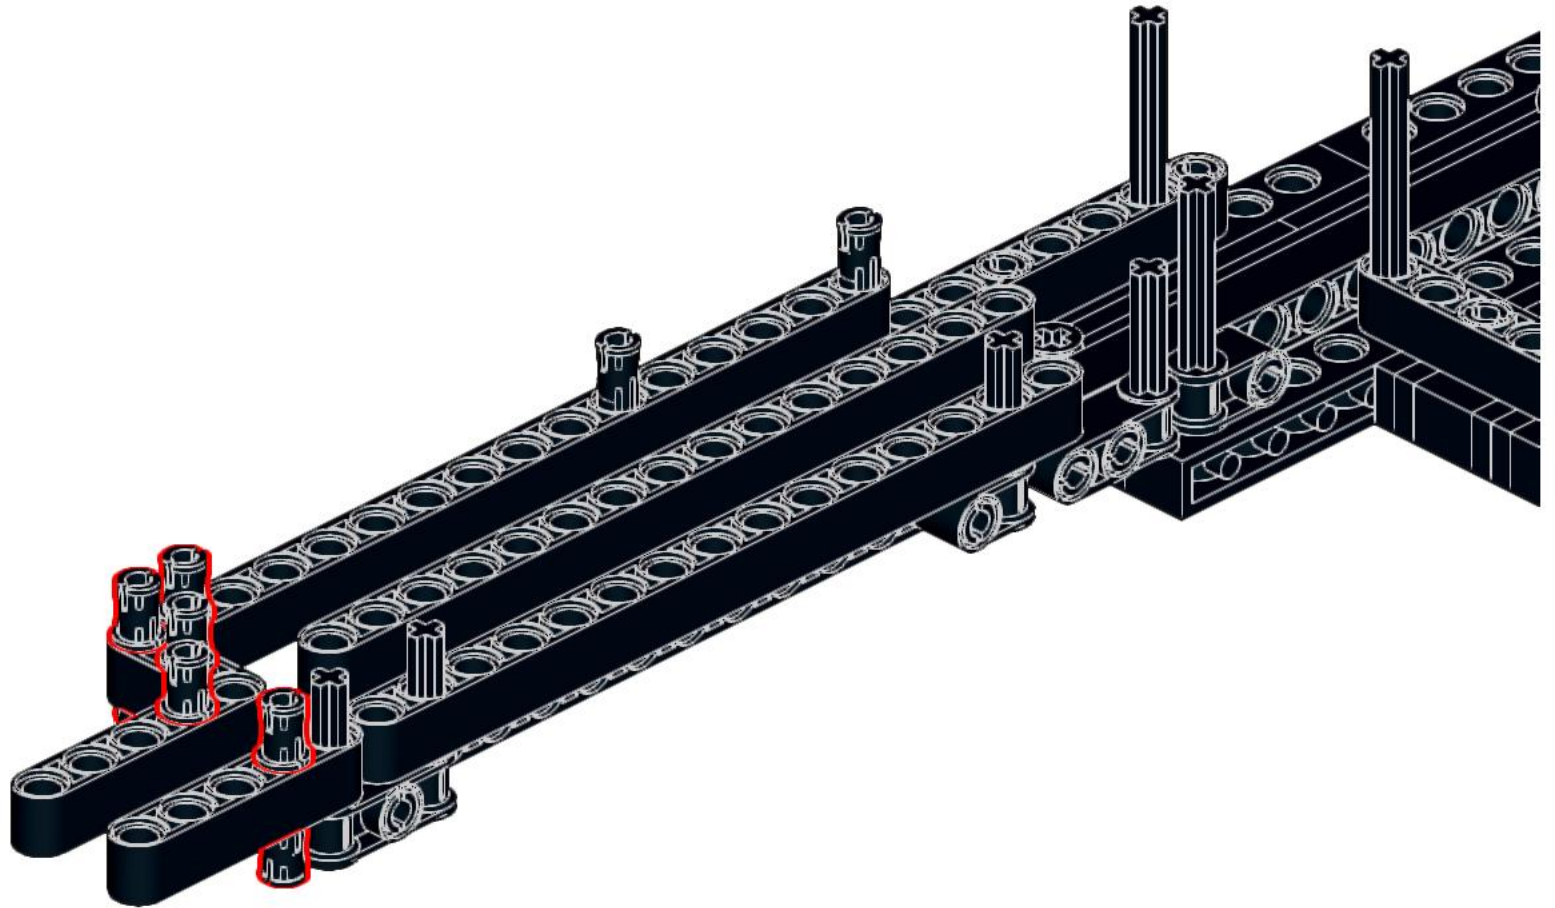


59

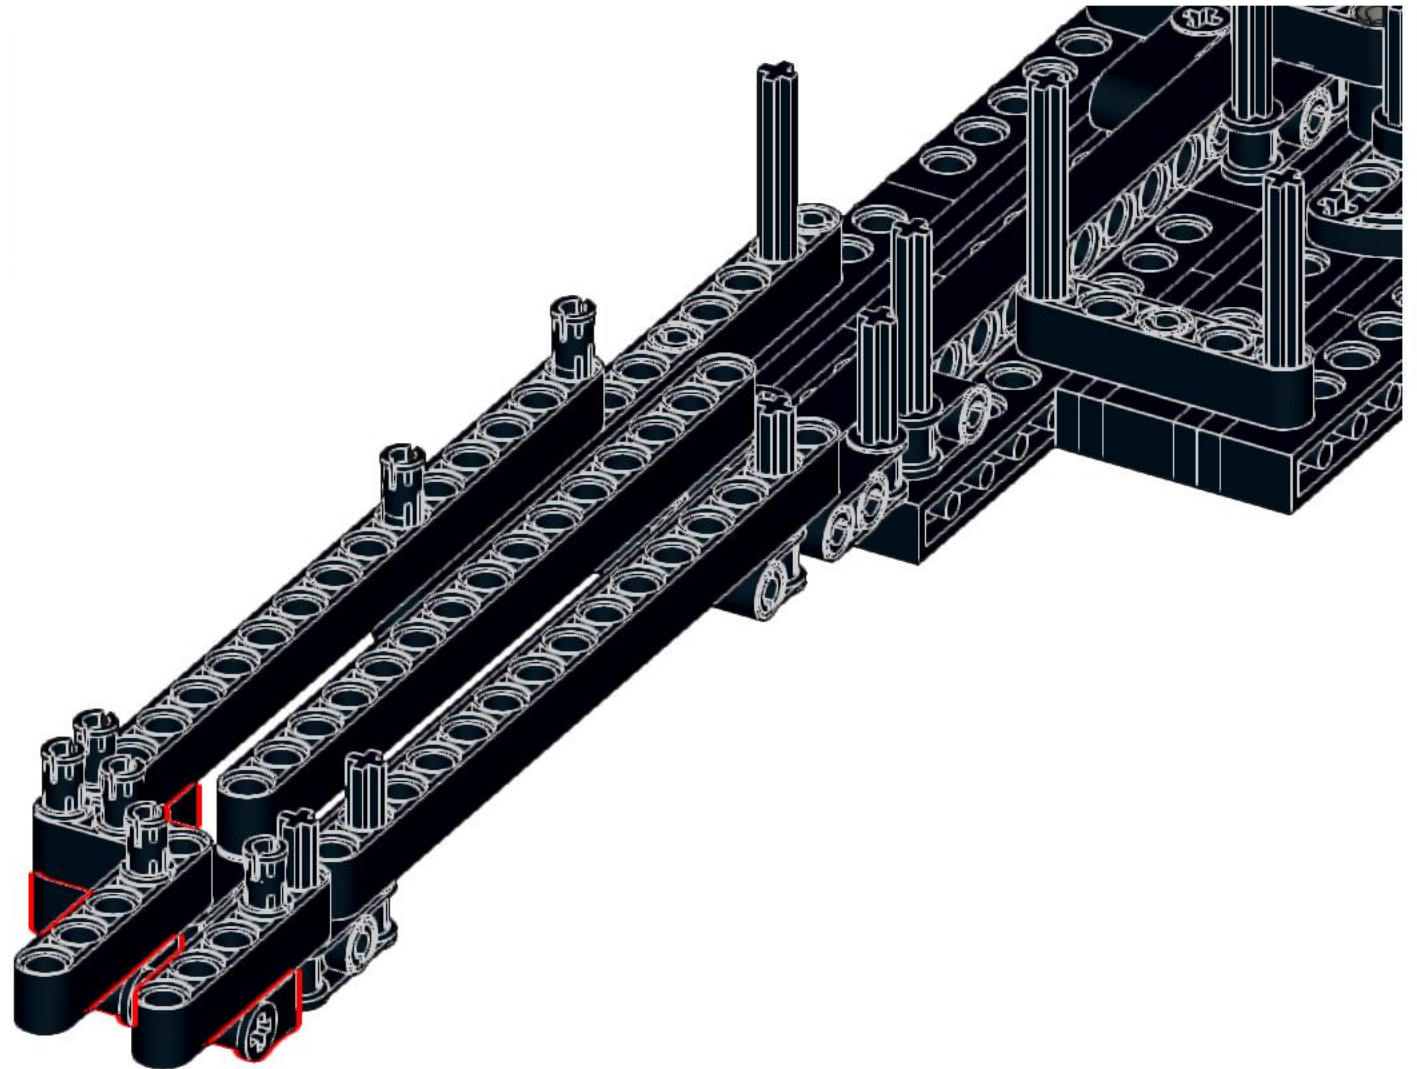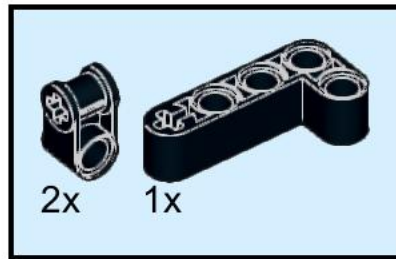



60

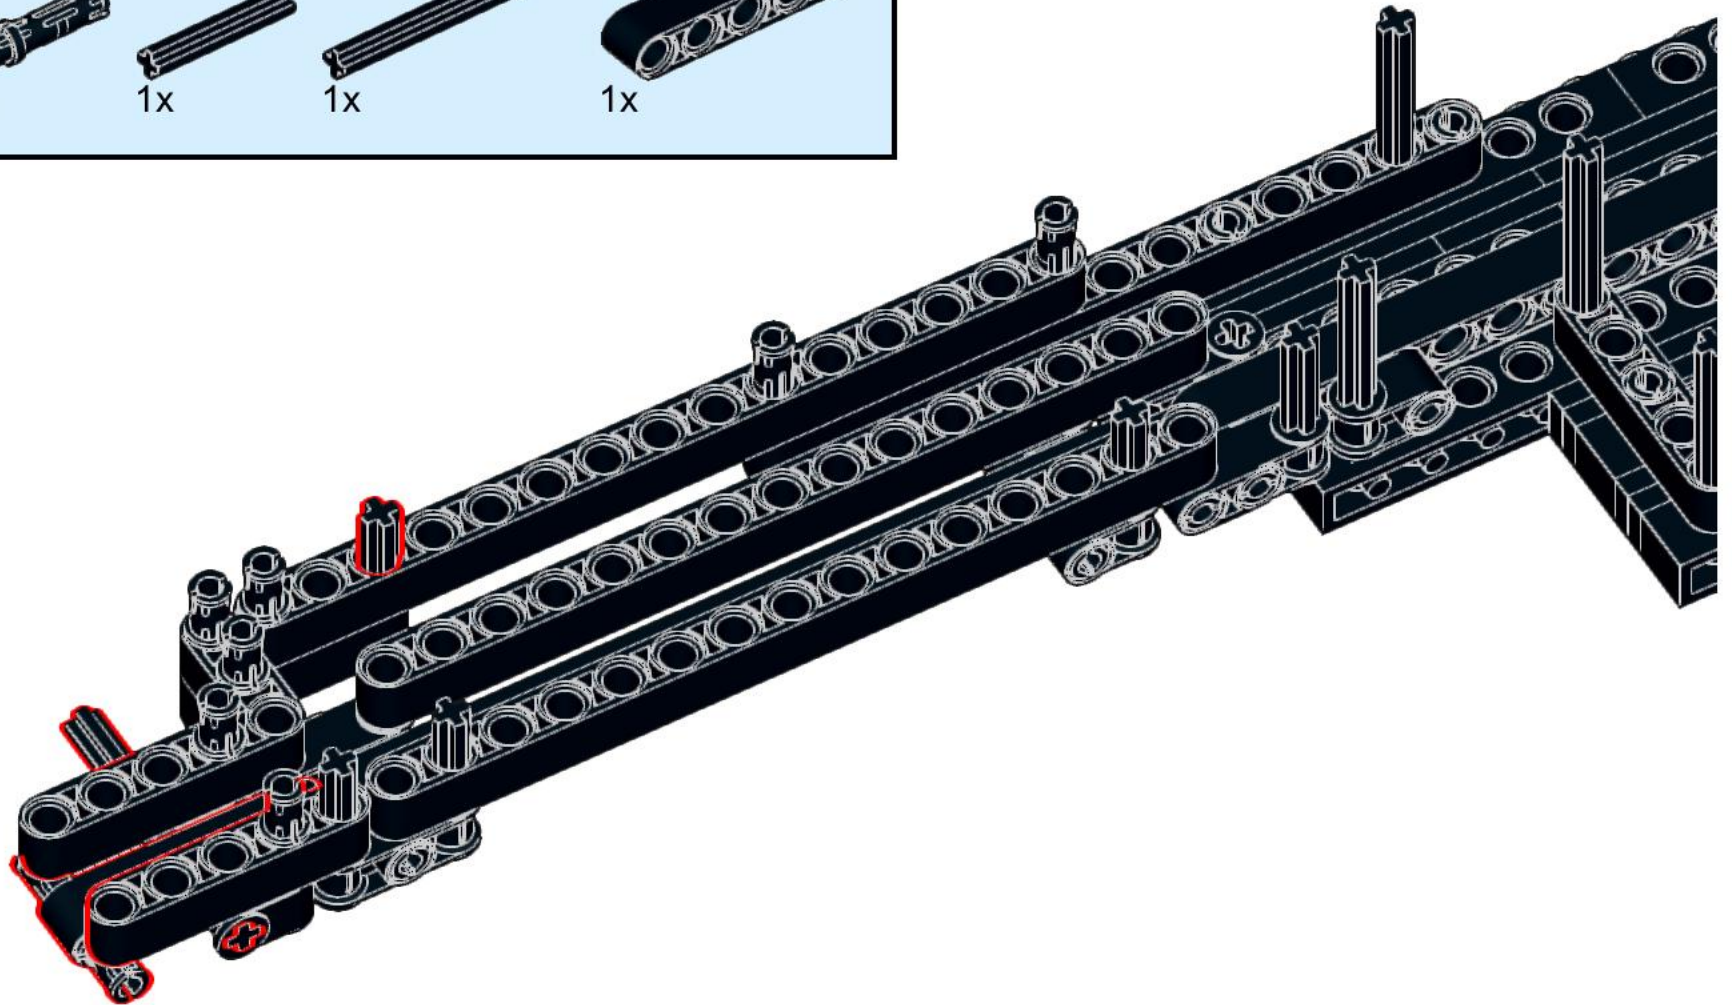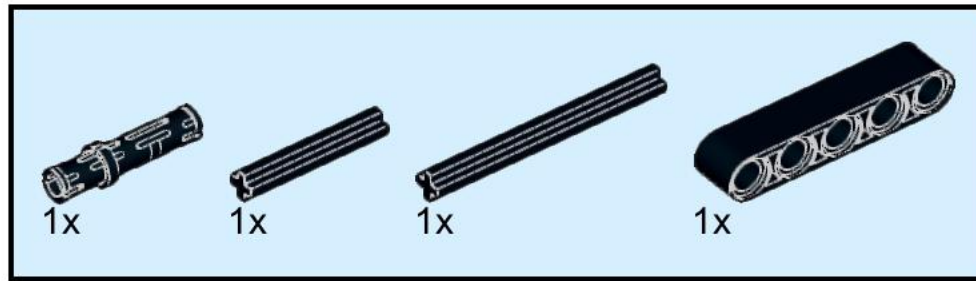



61

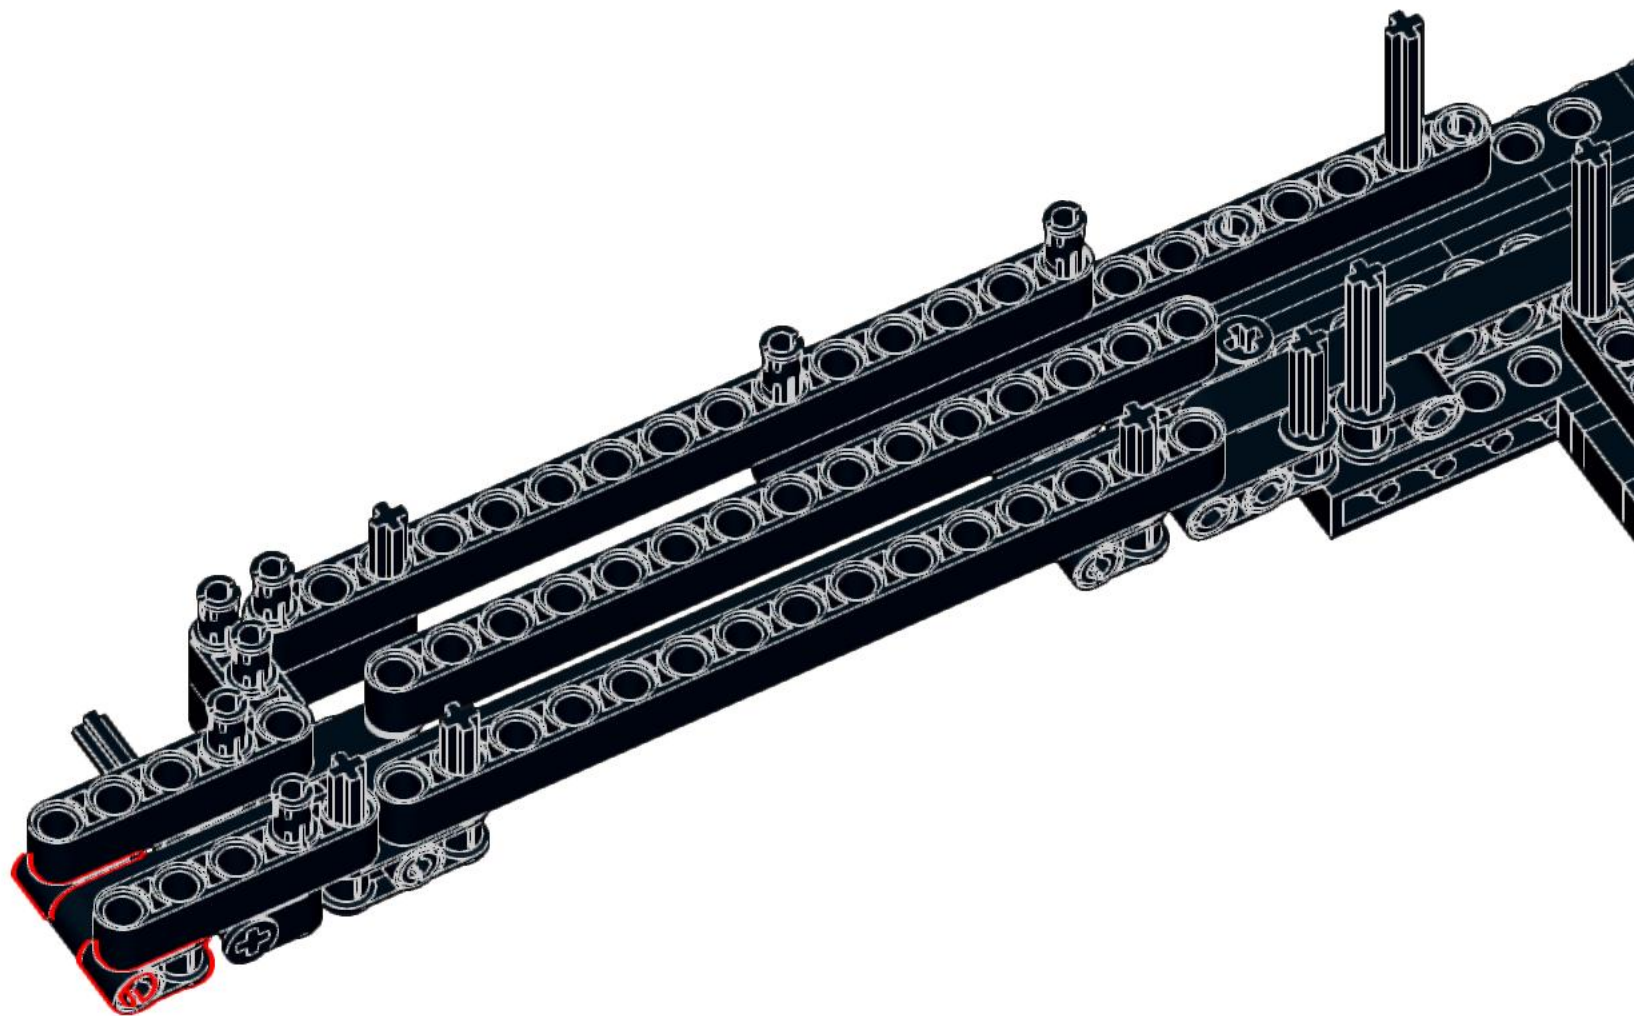



62

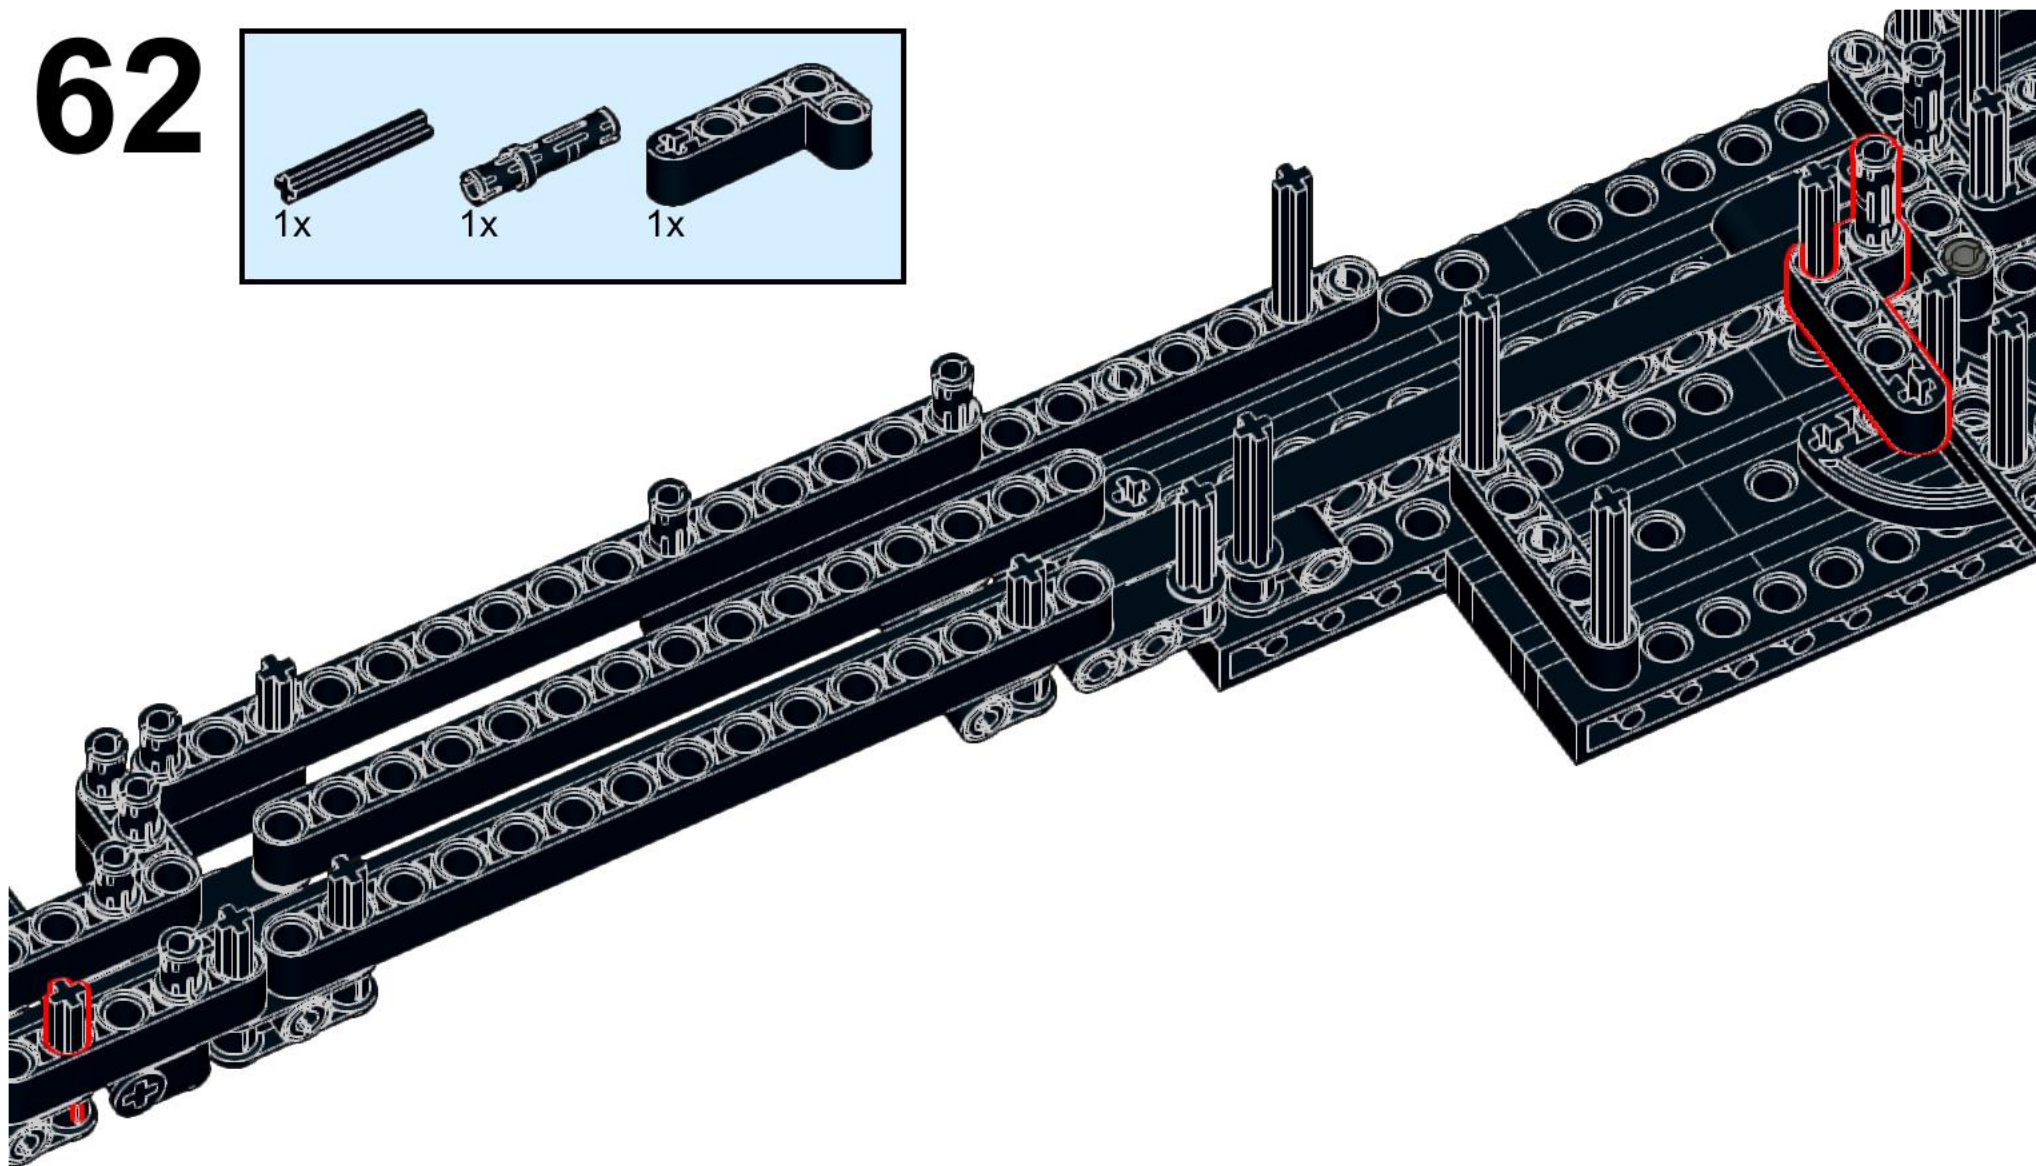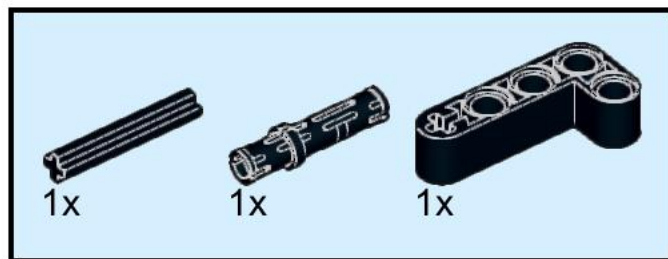



63

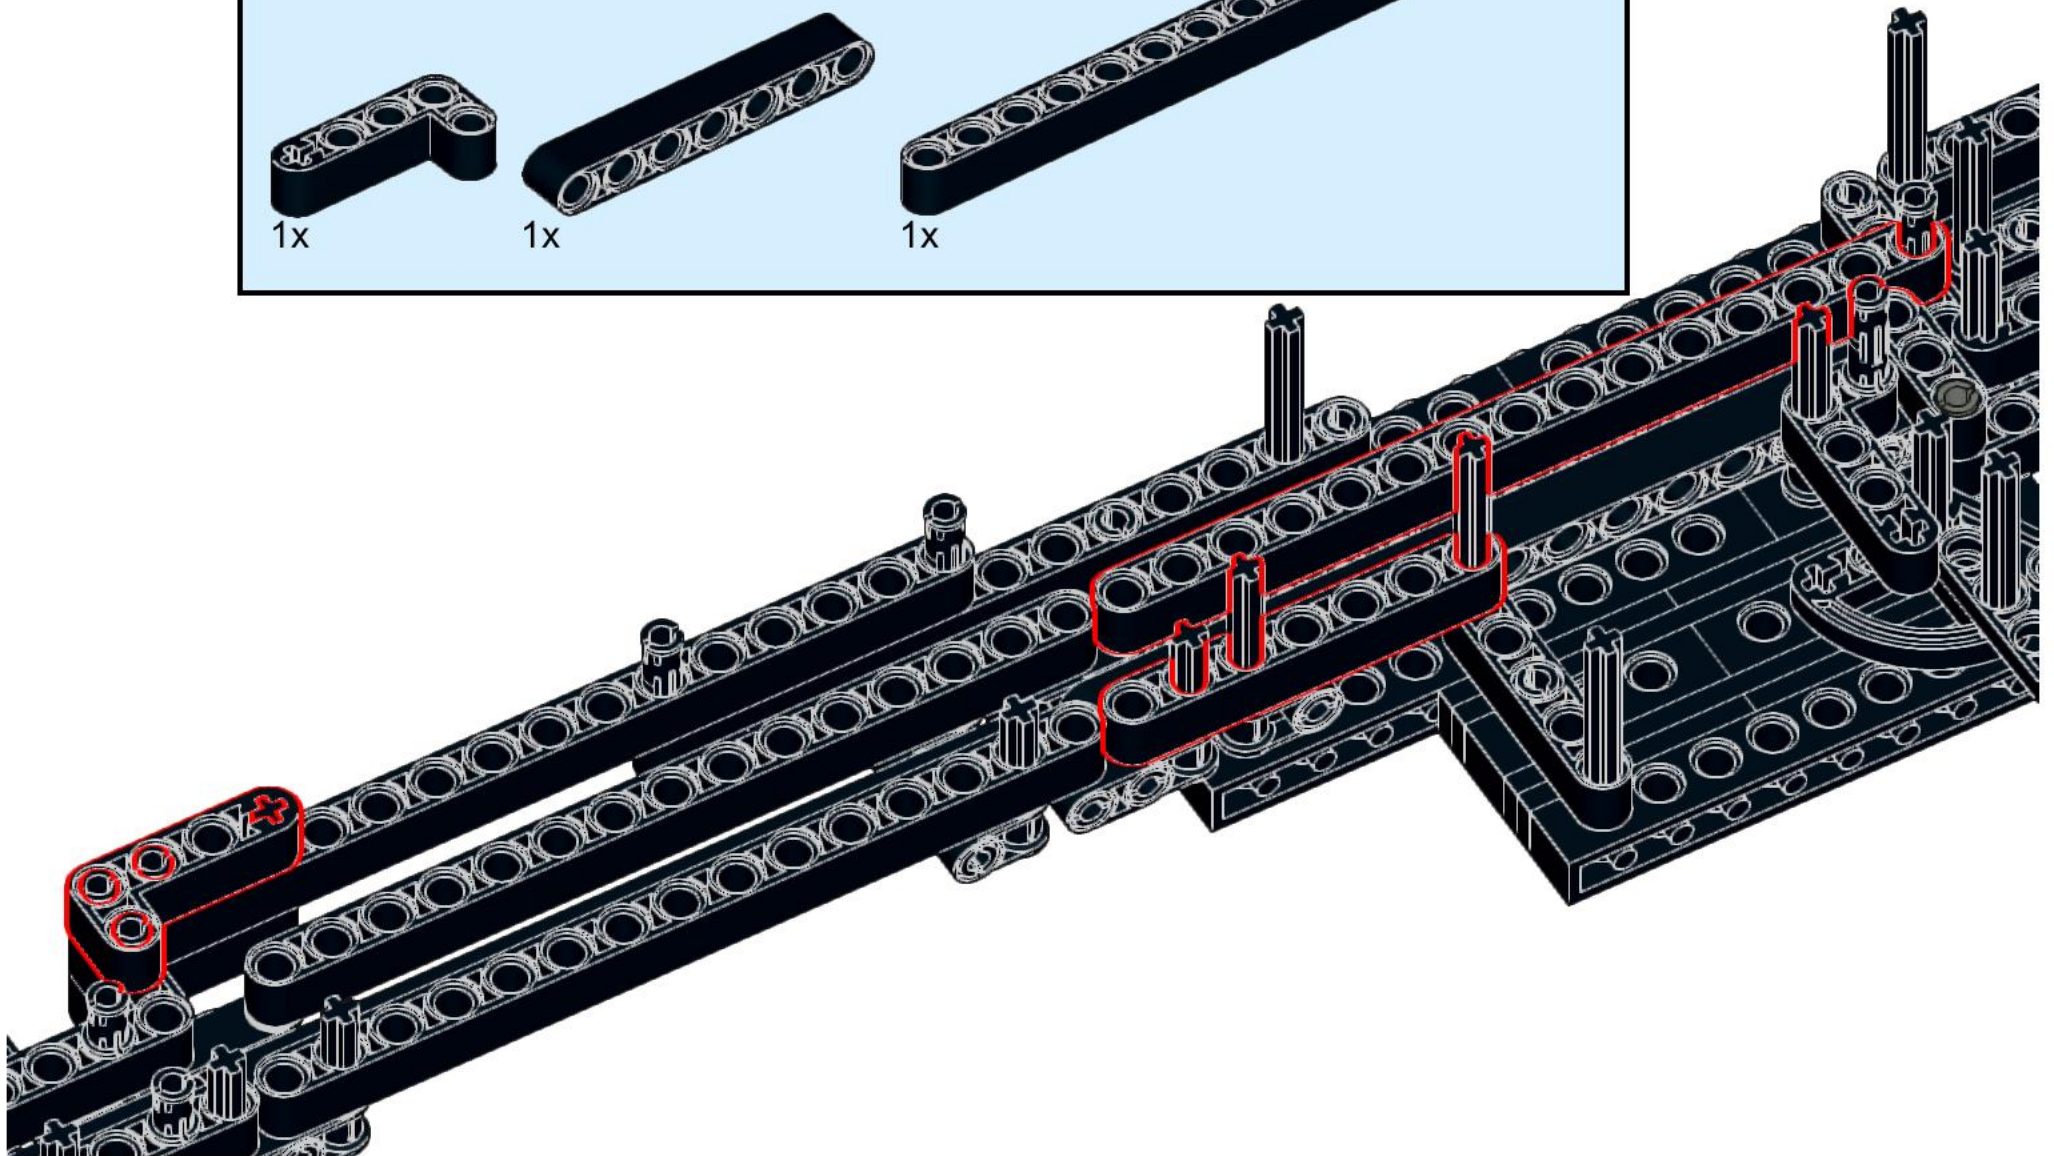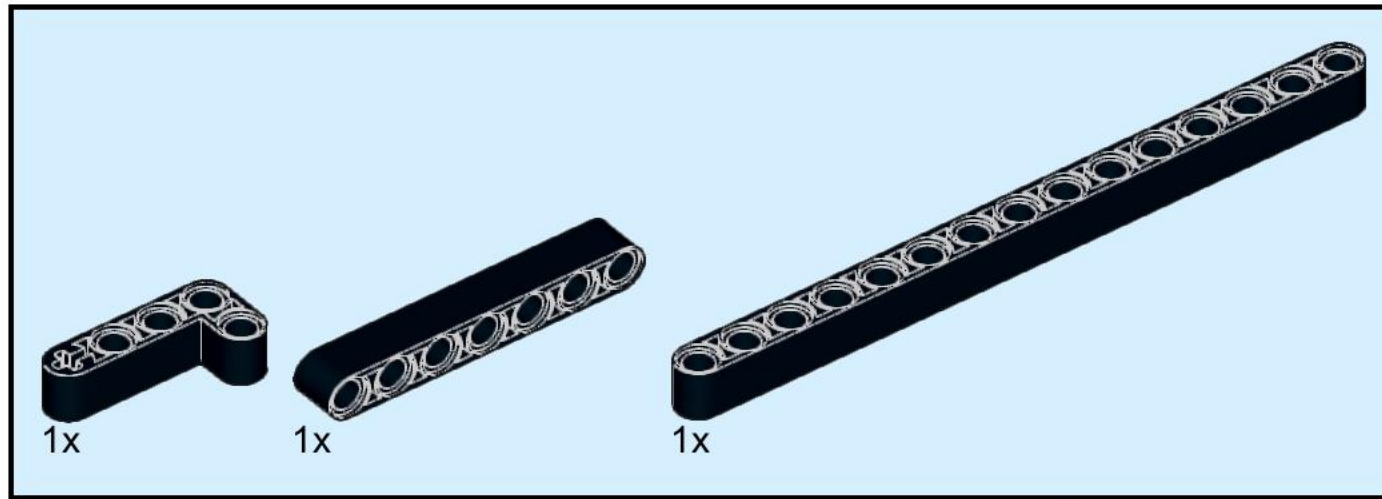



64

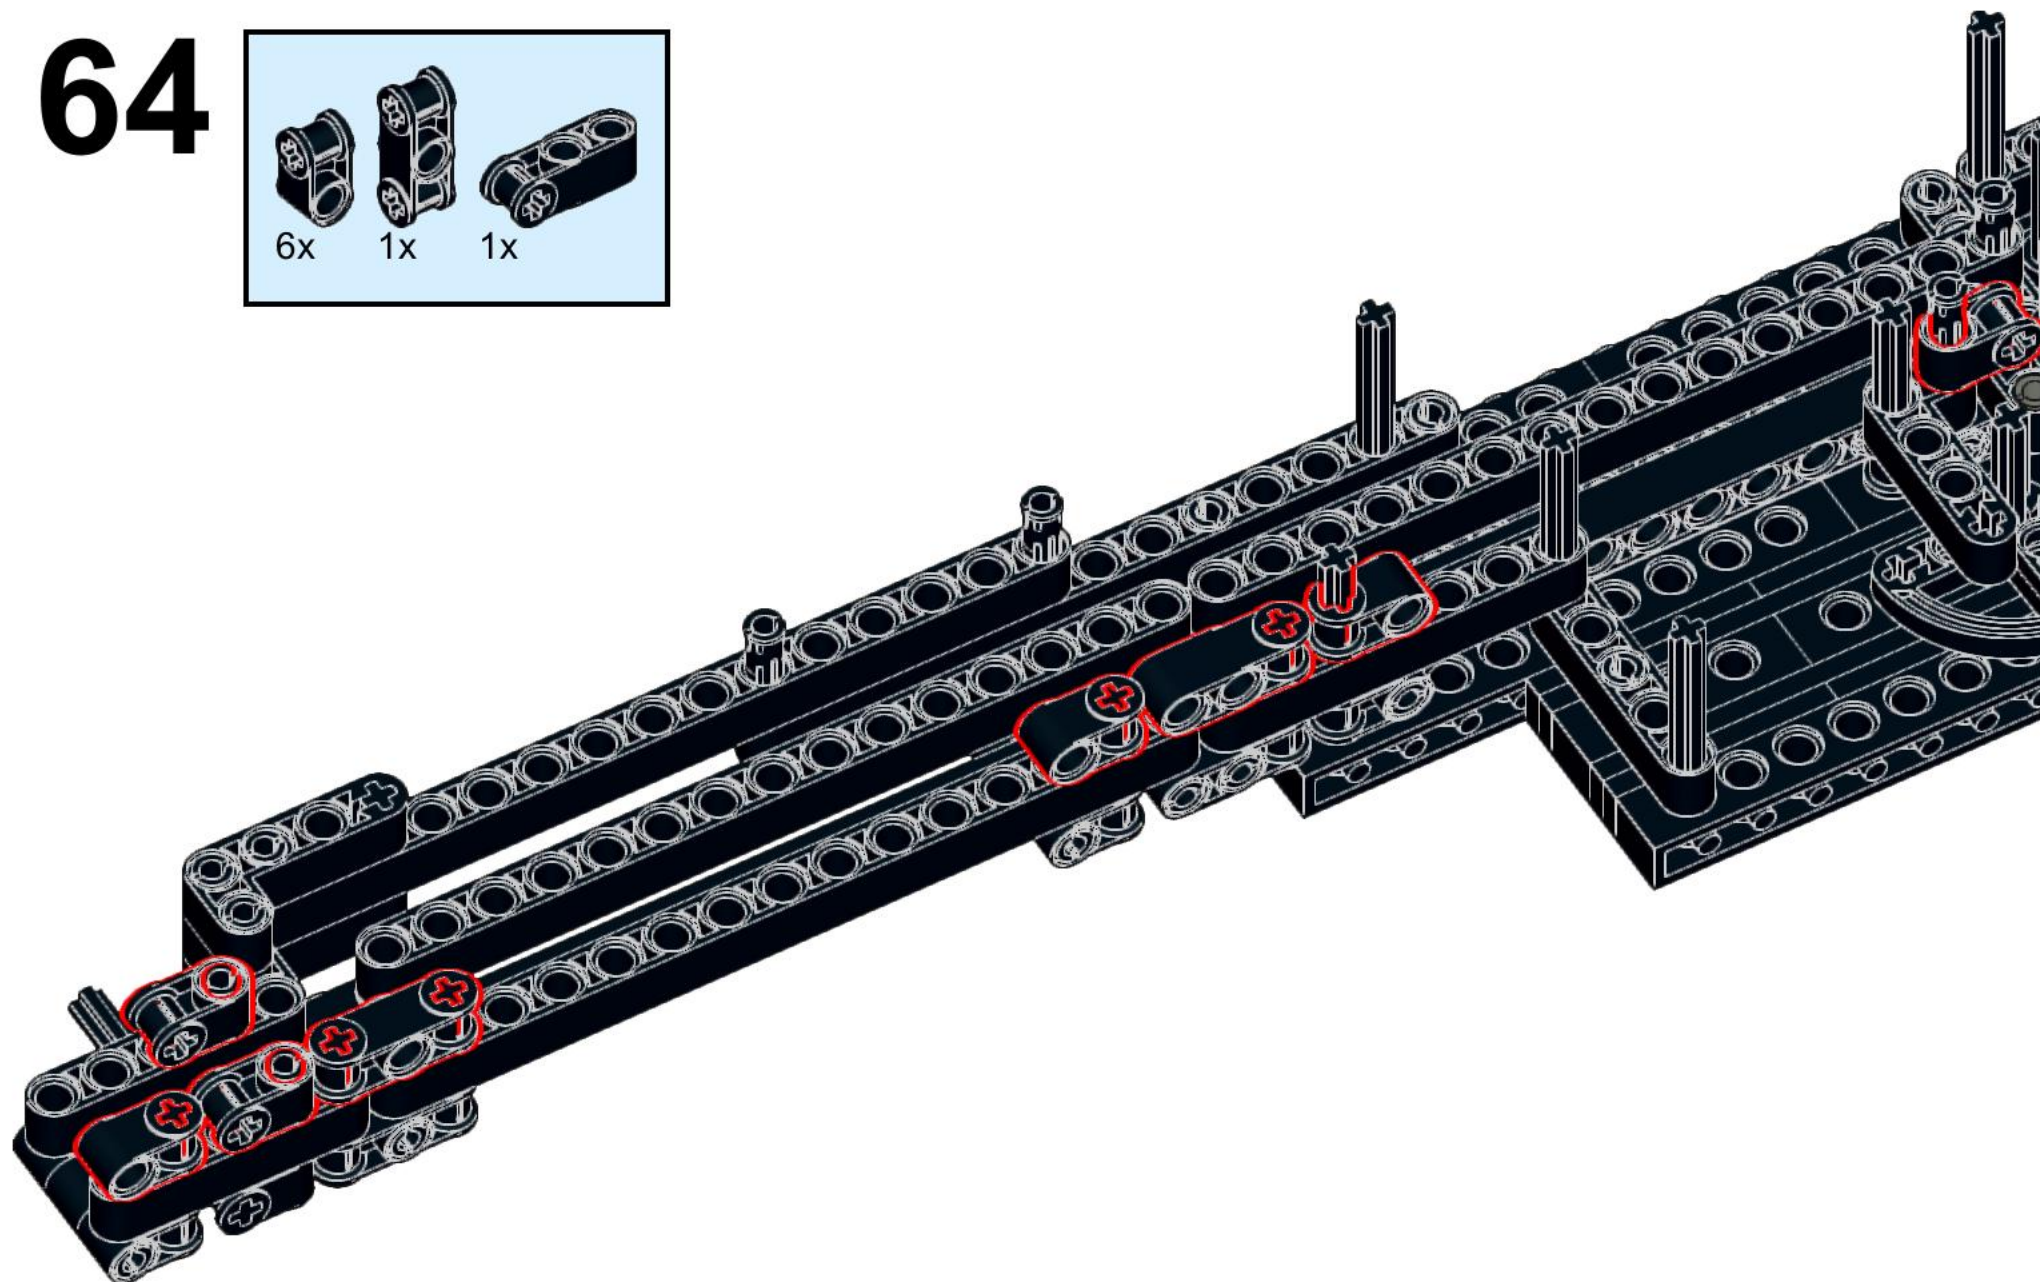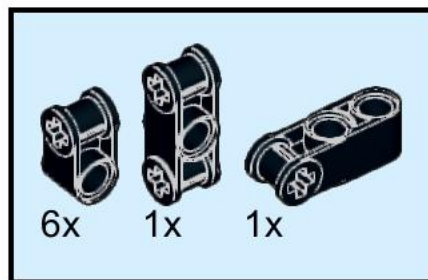



65

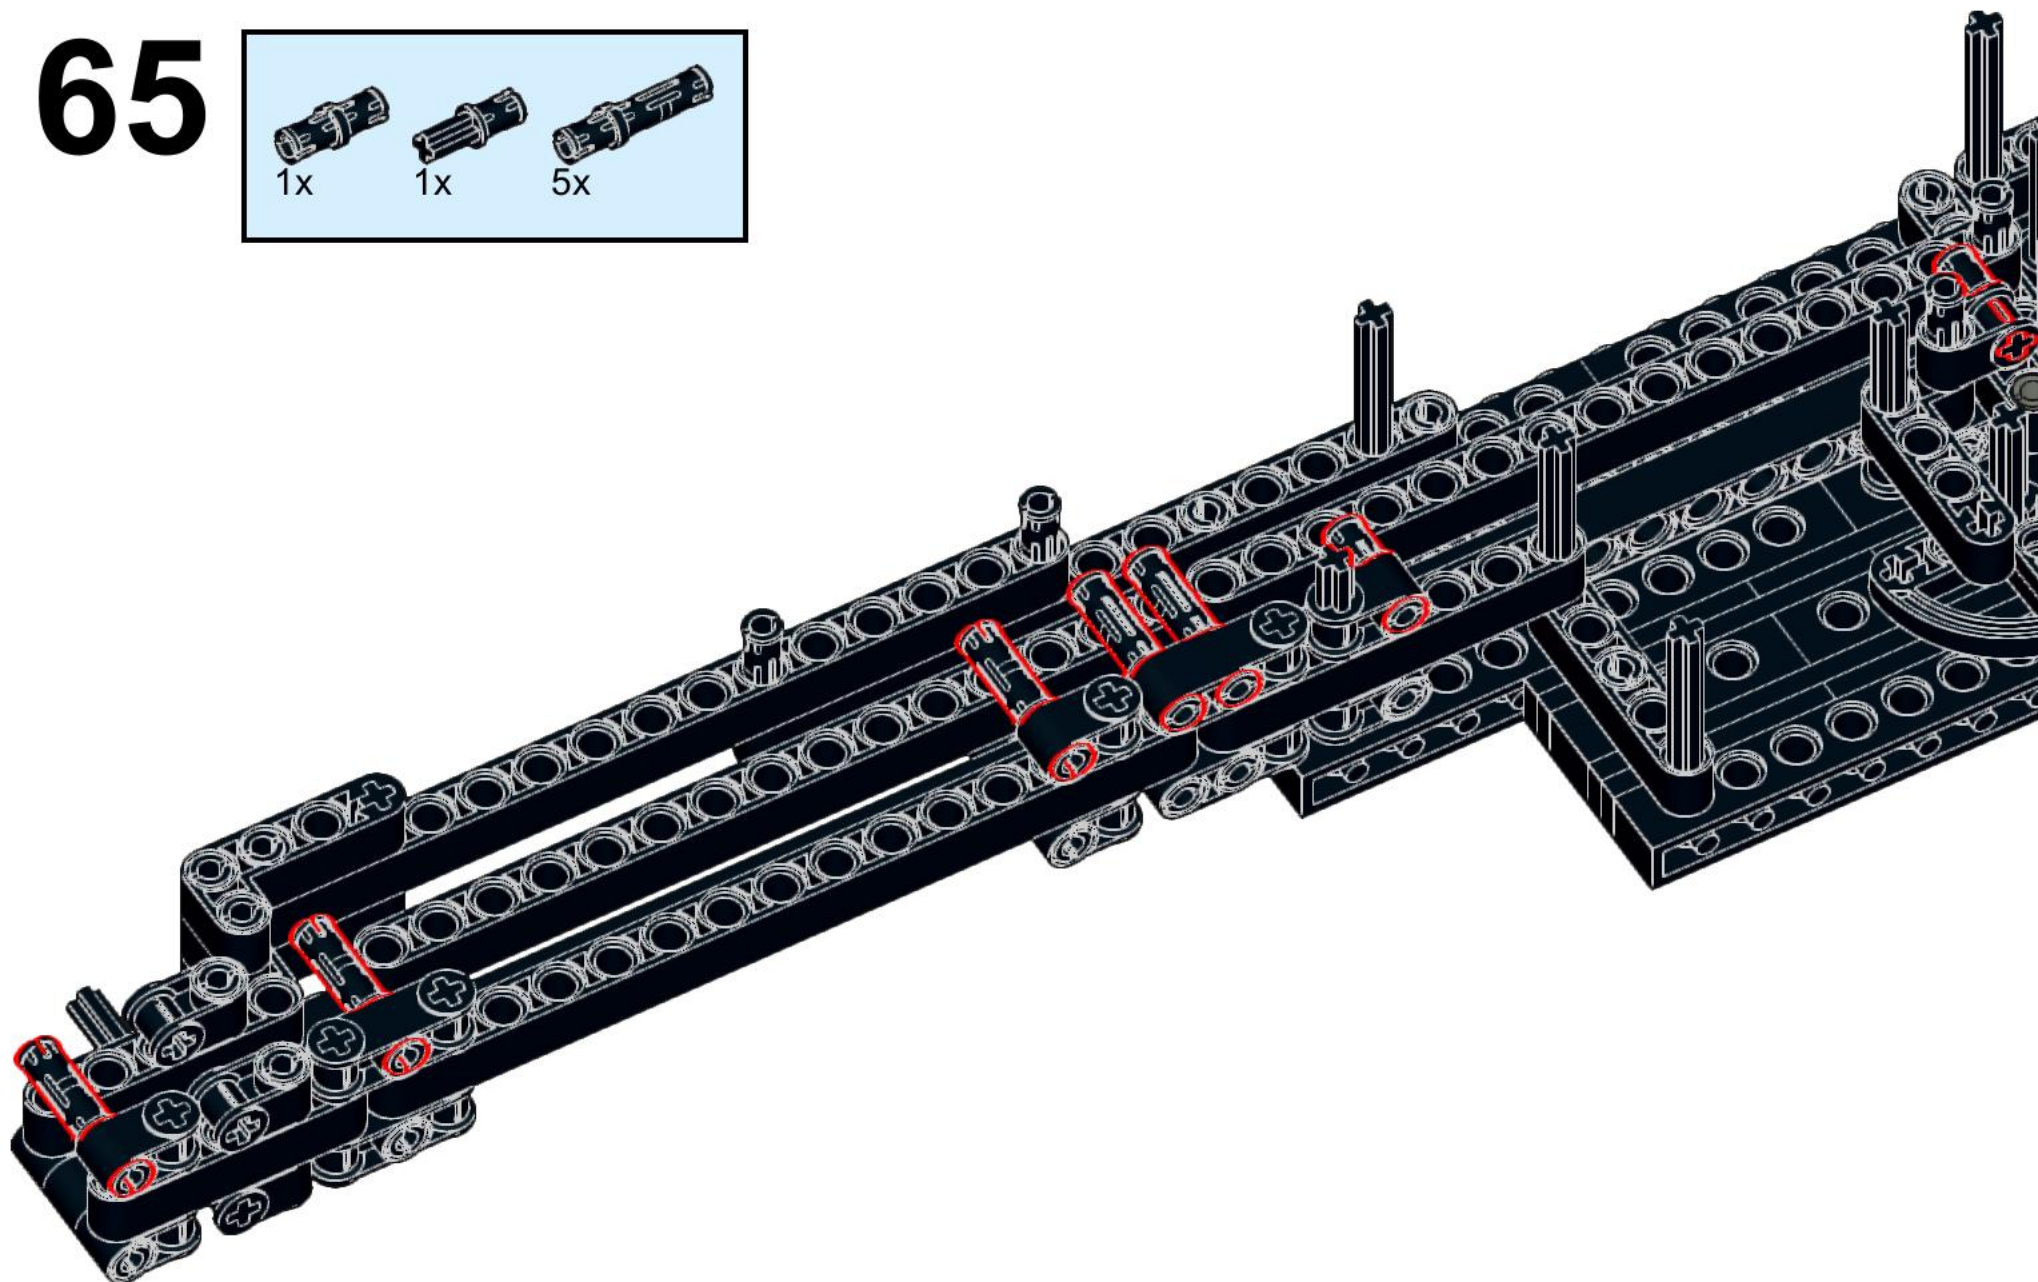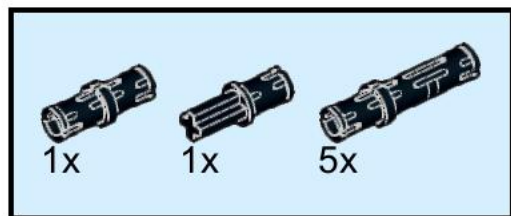



66

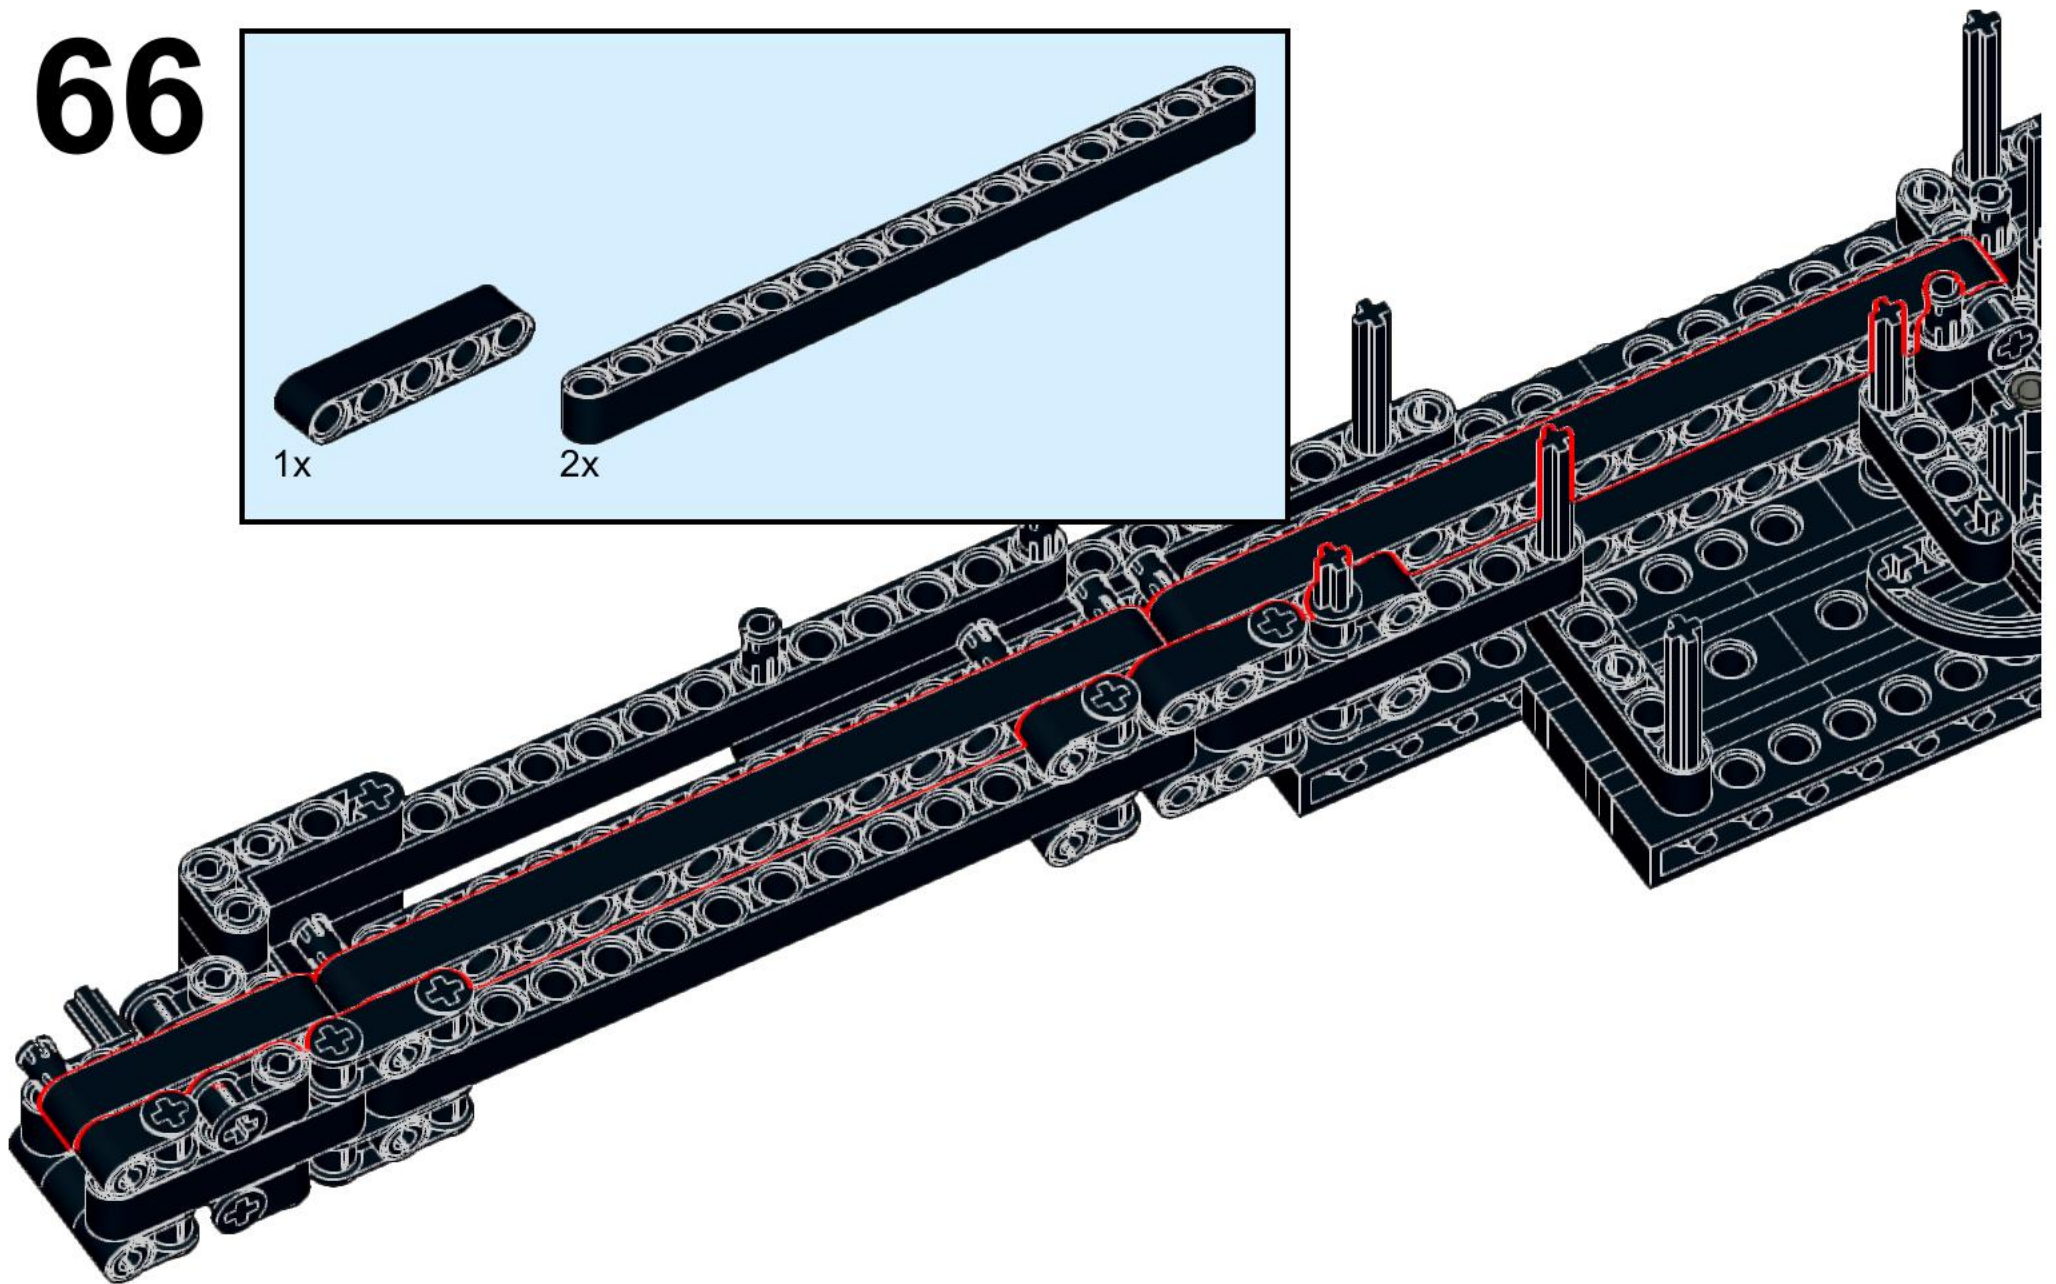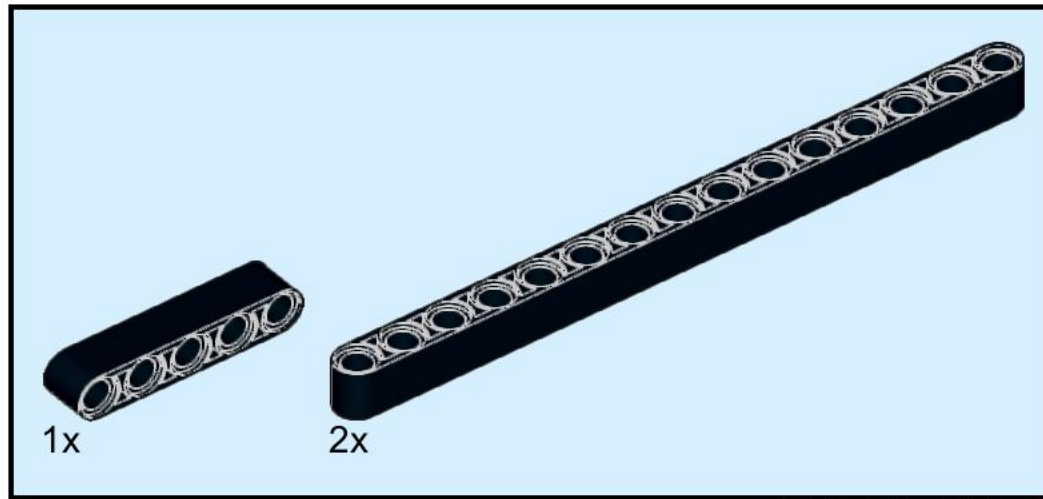



67

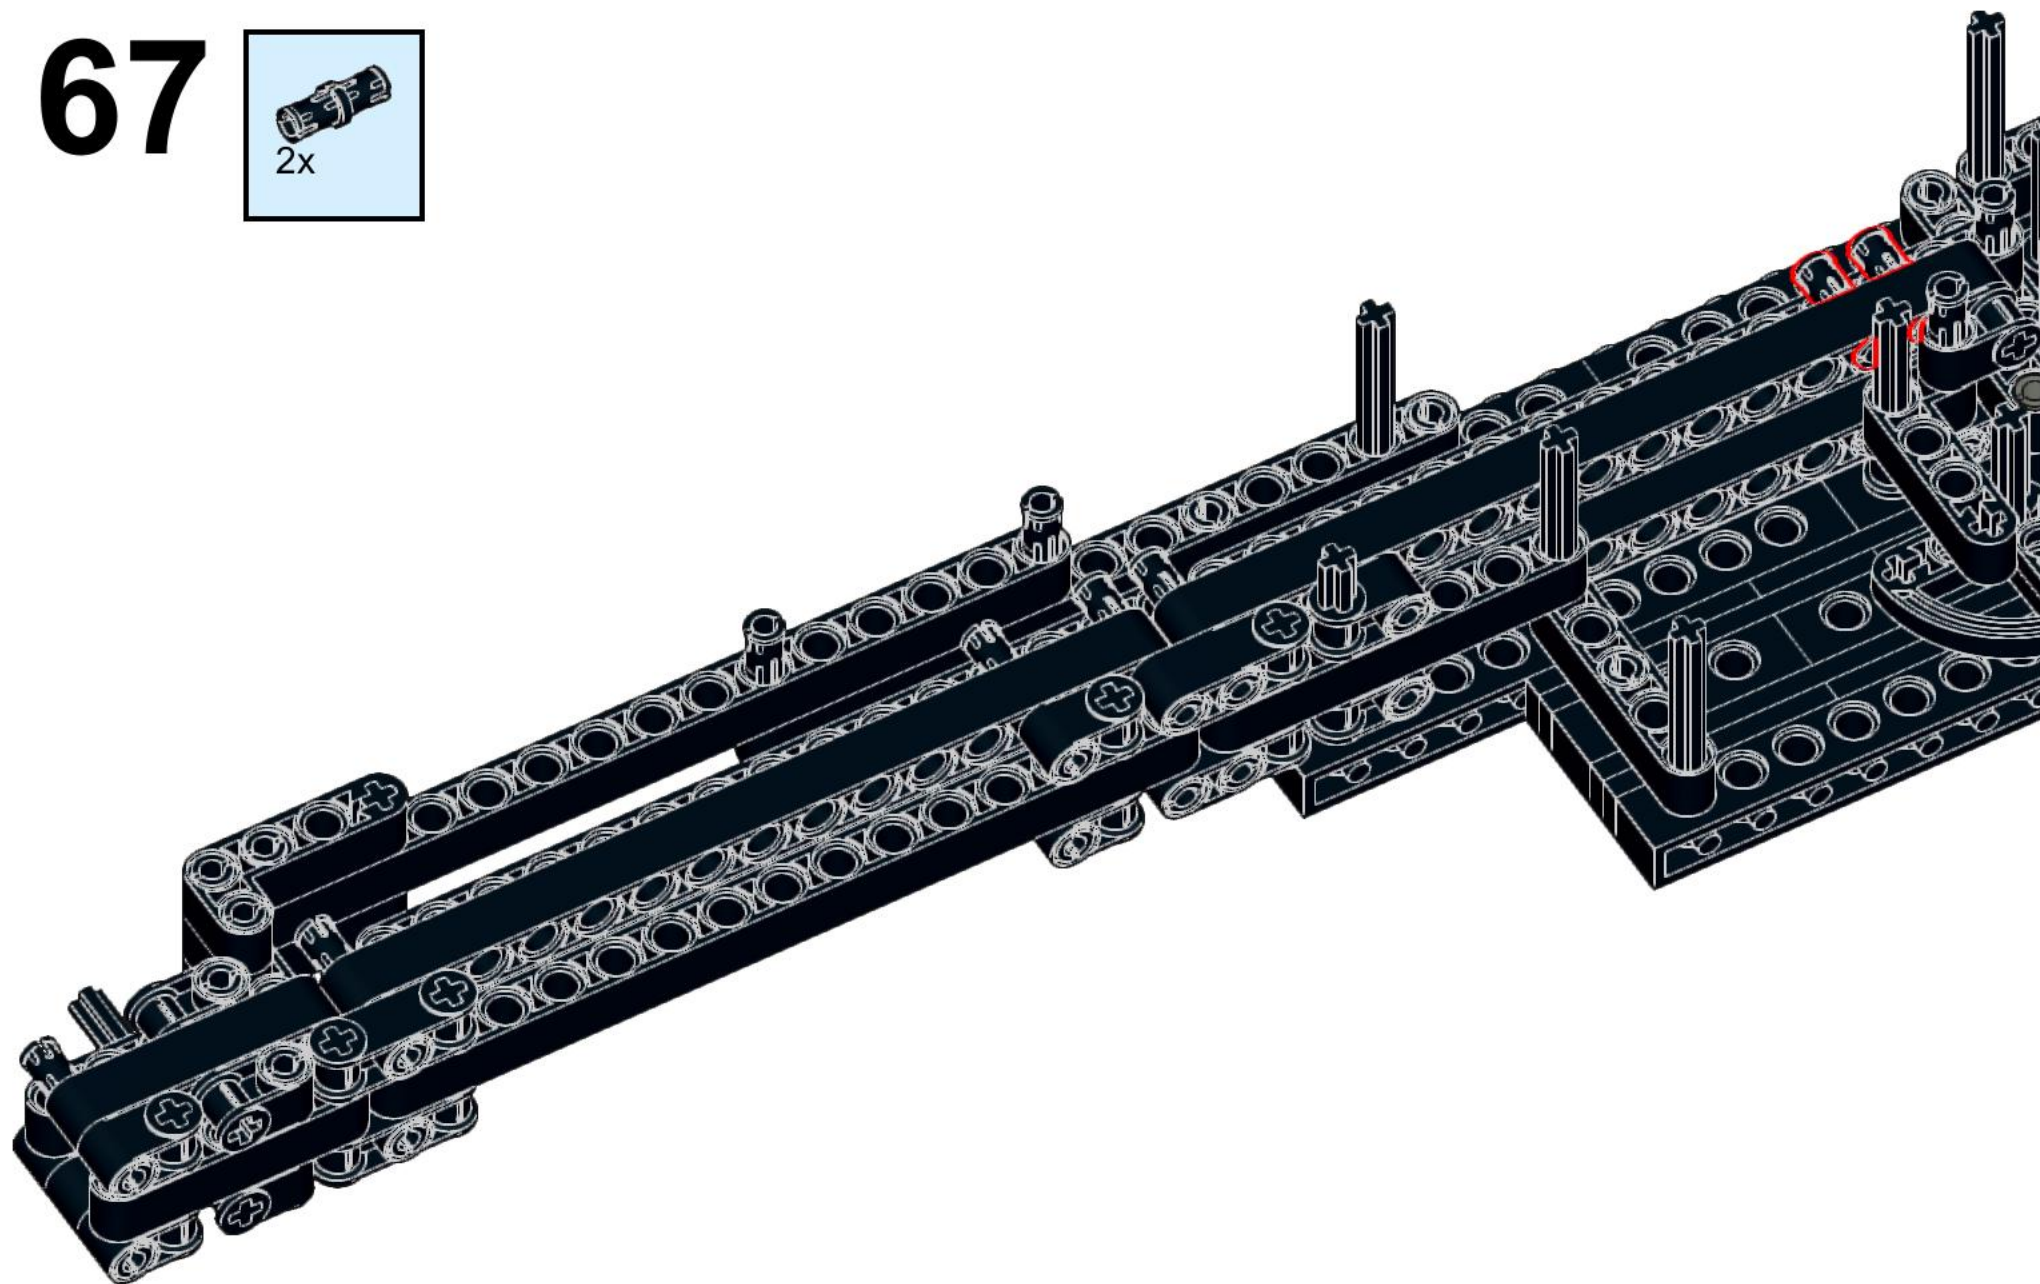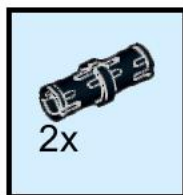



68

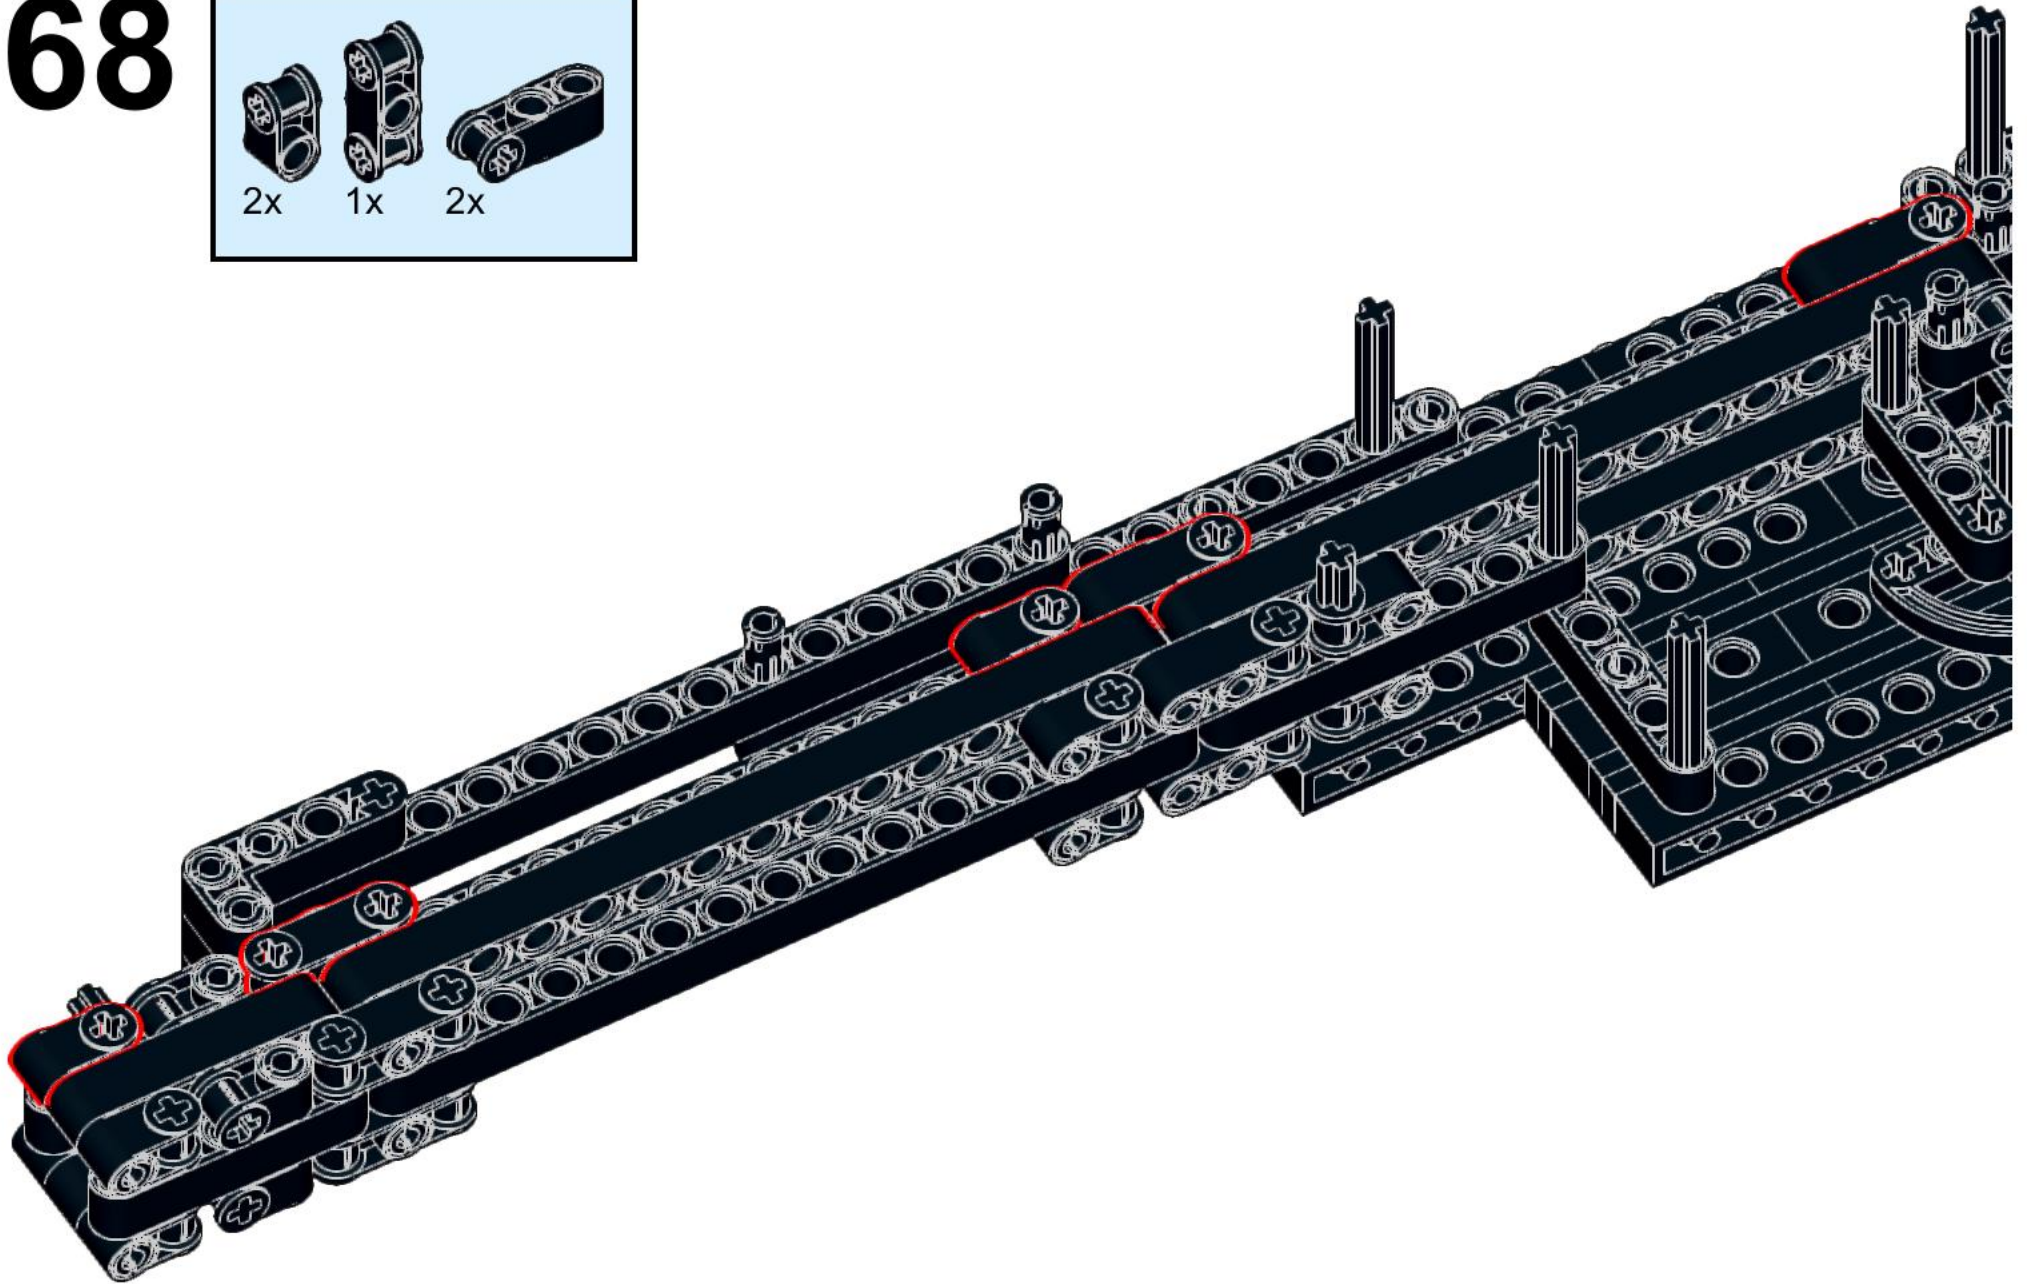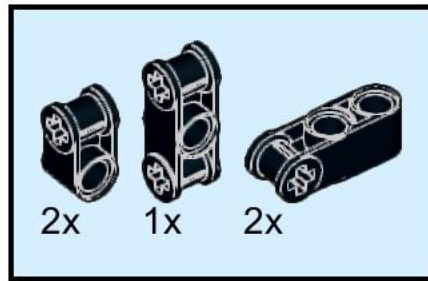


69

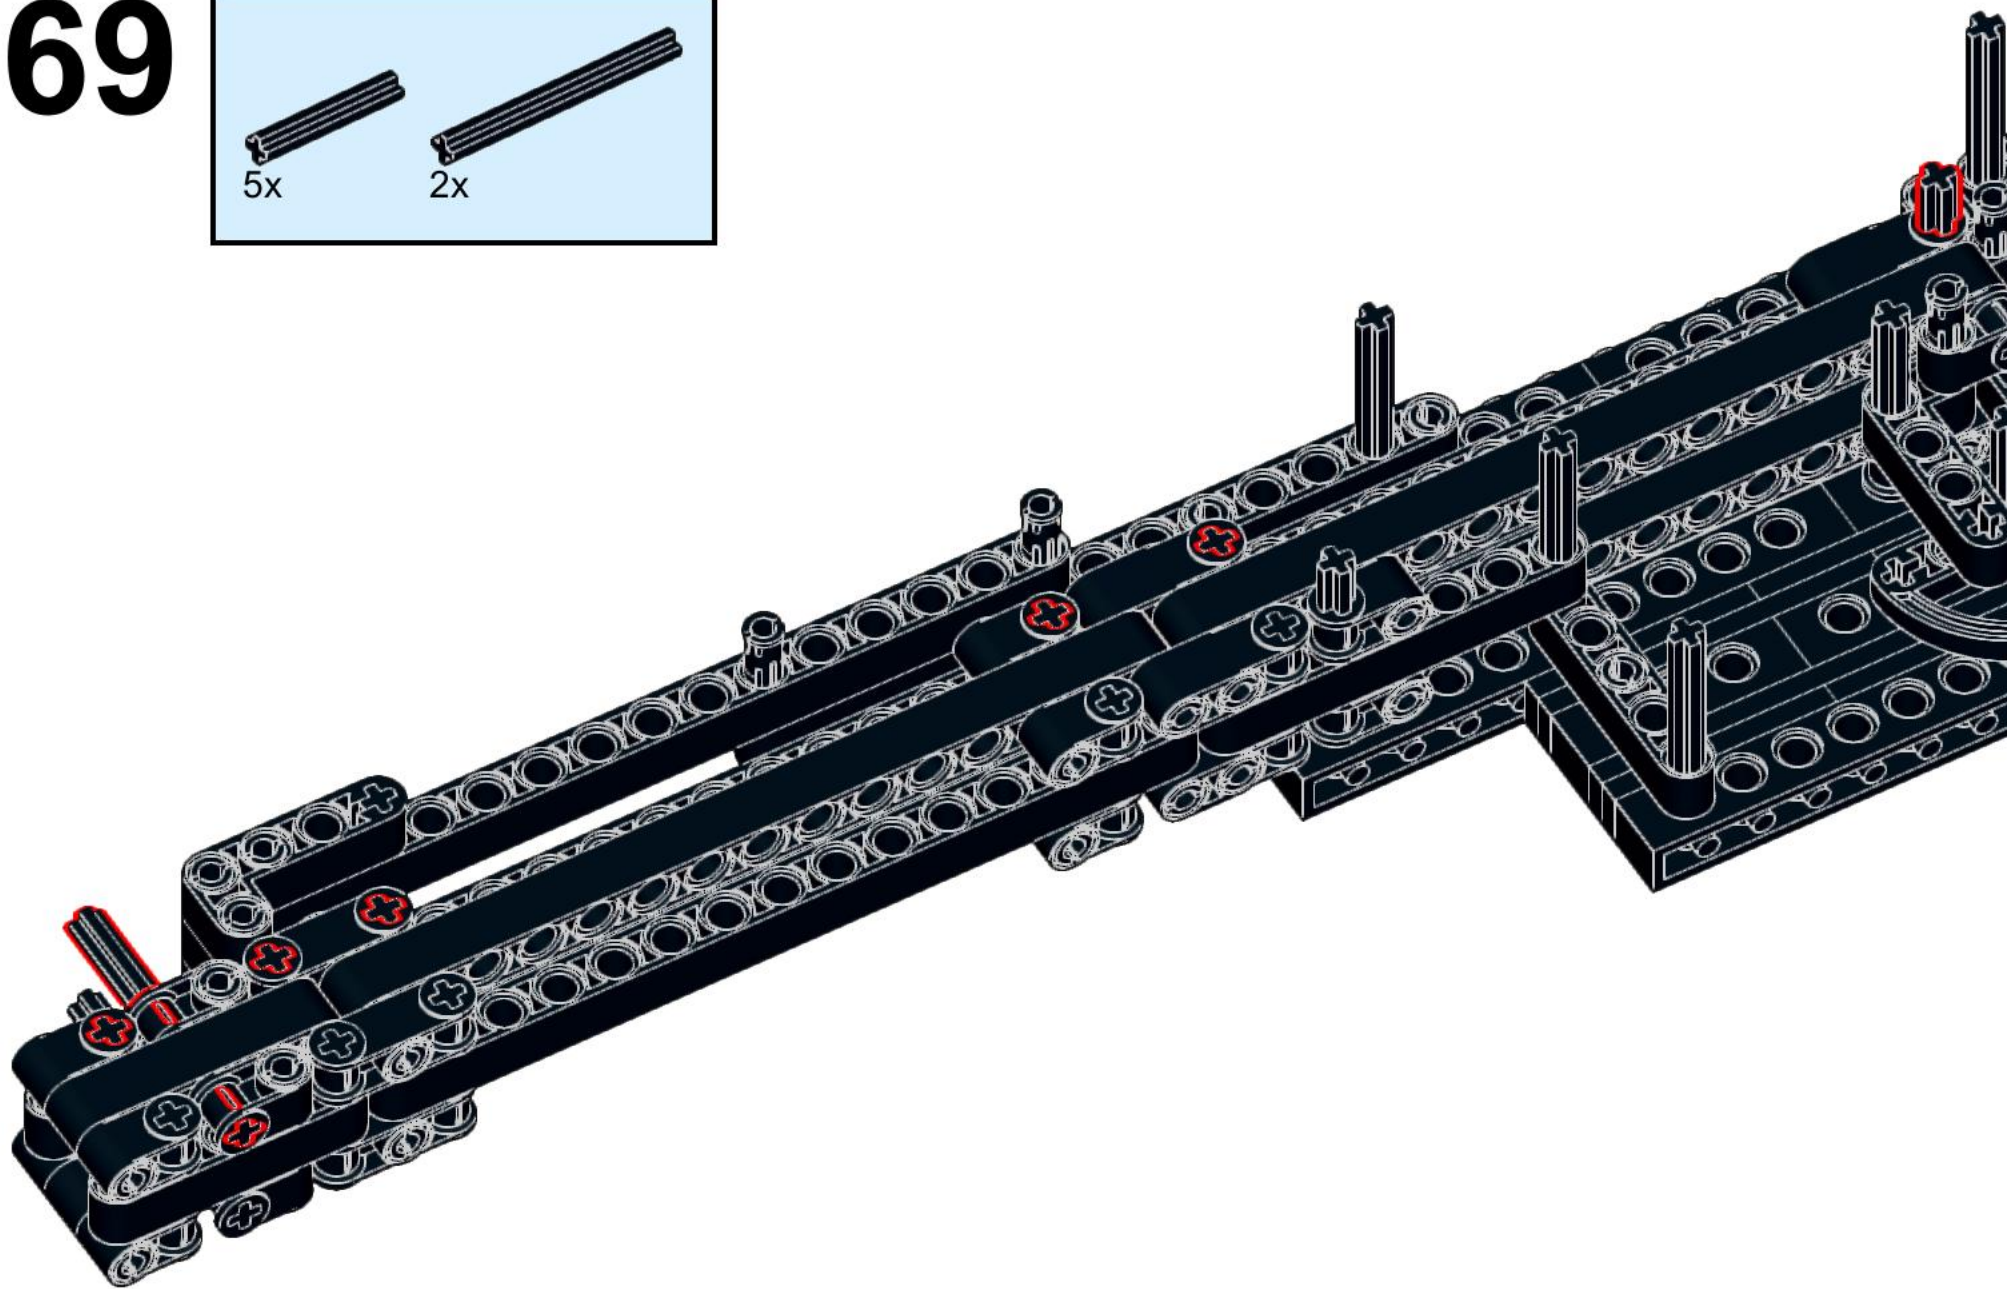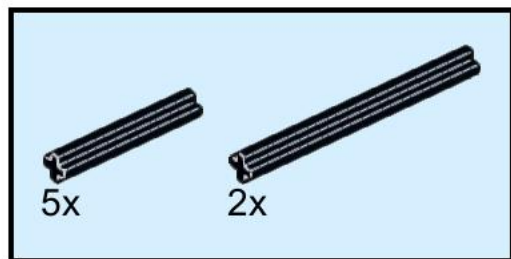



70

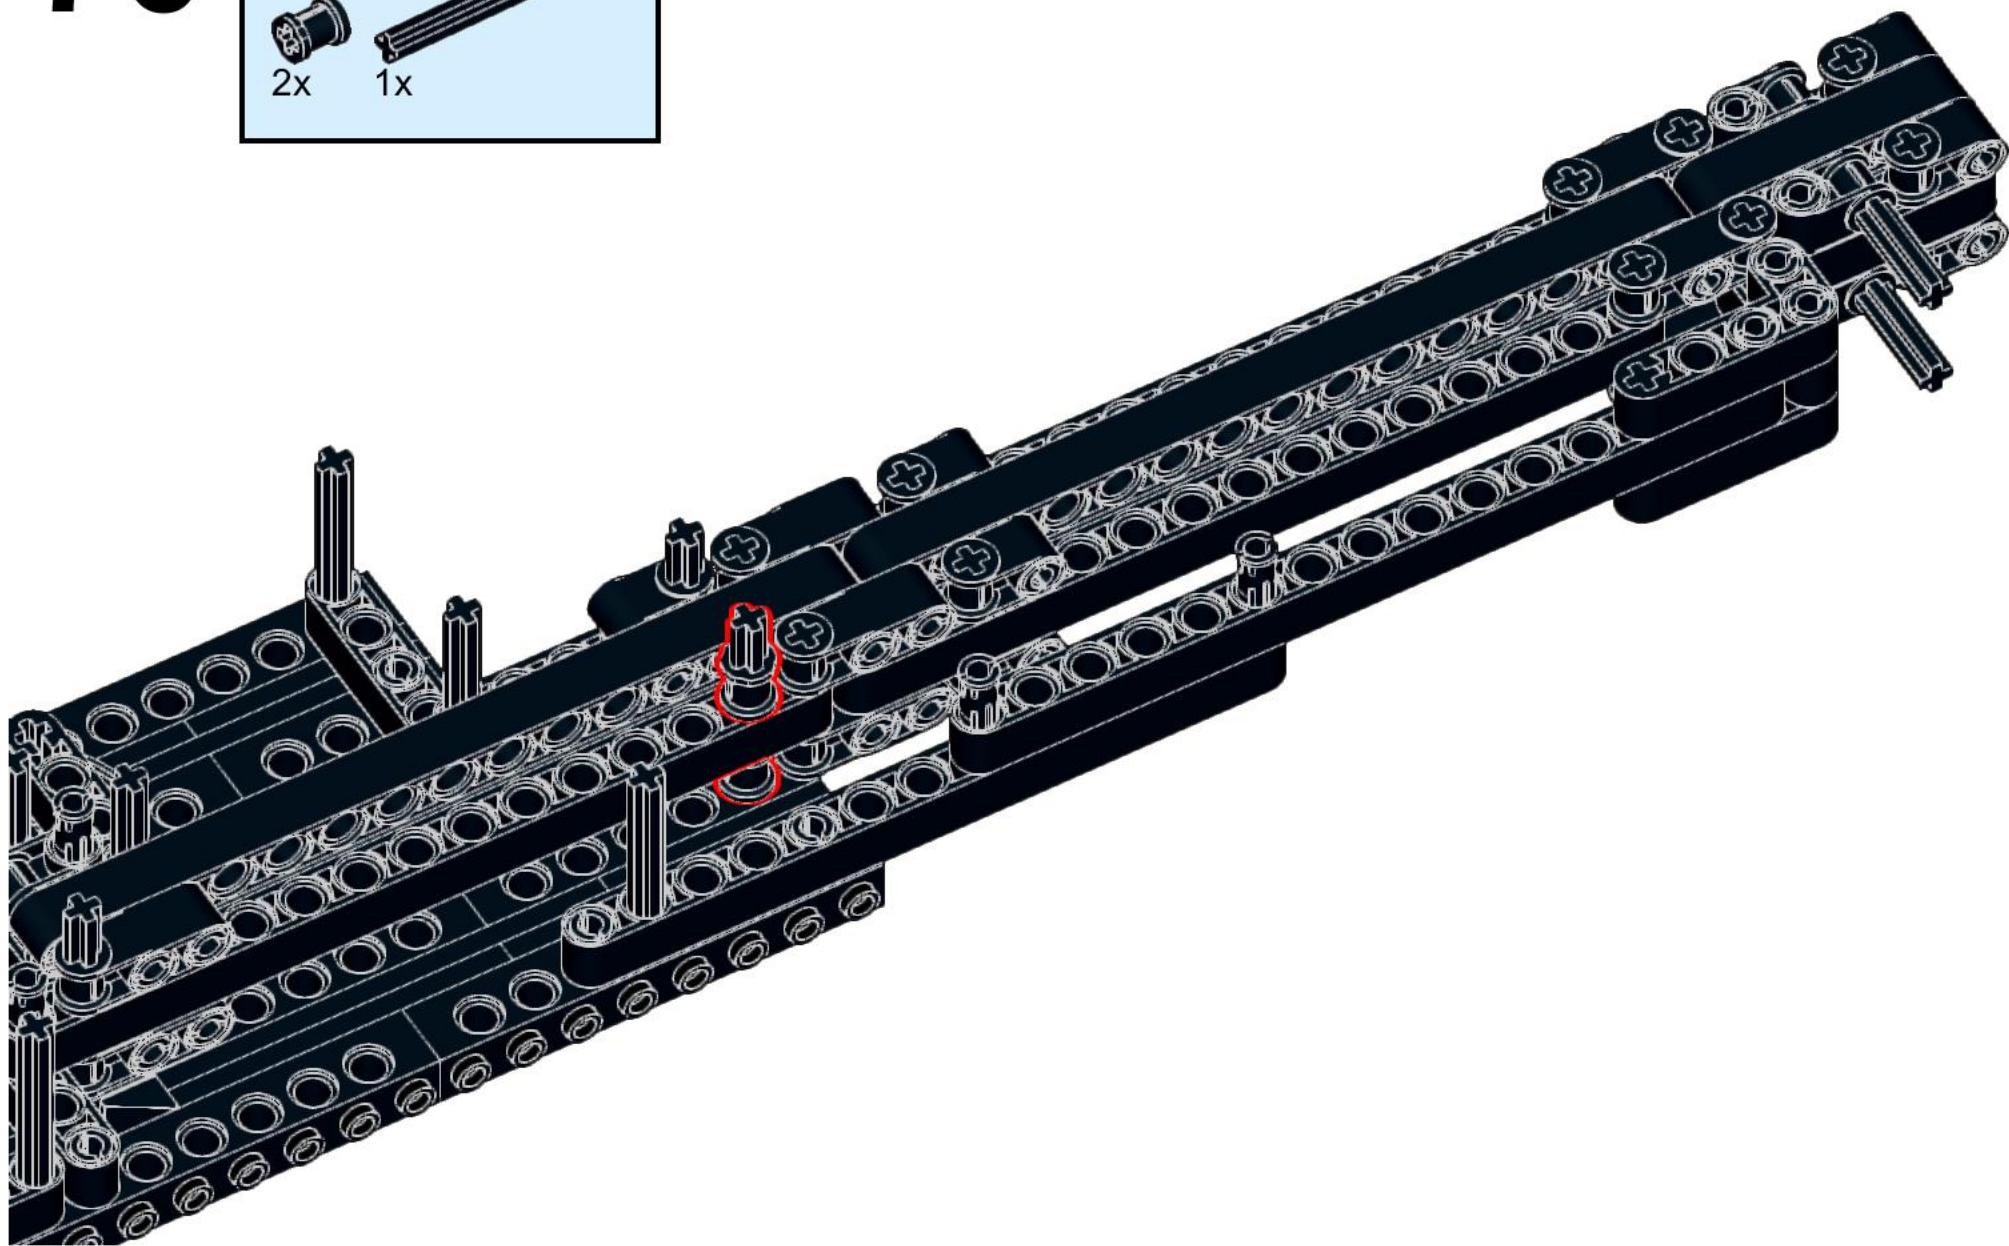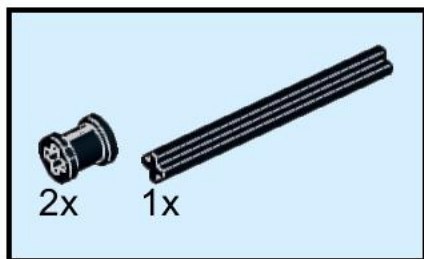



71

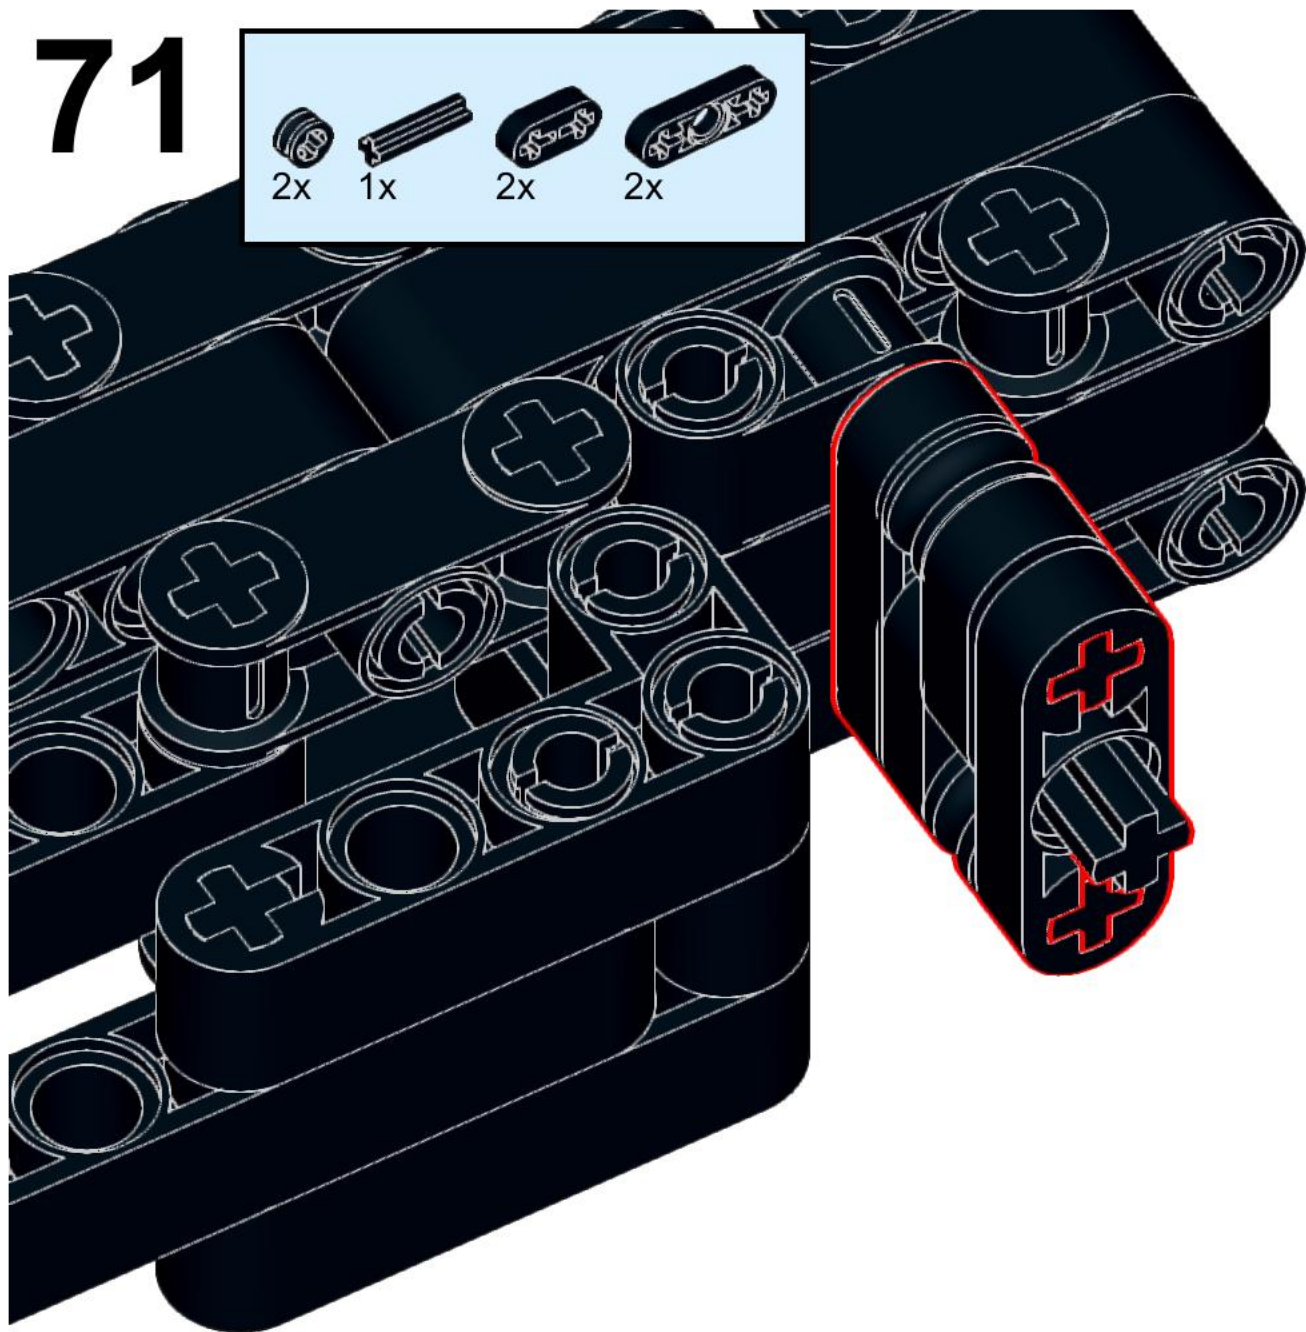



72

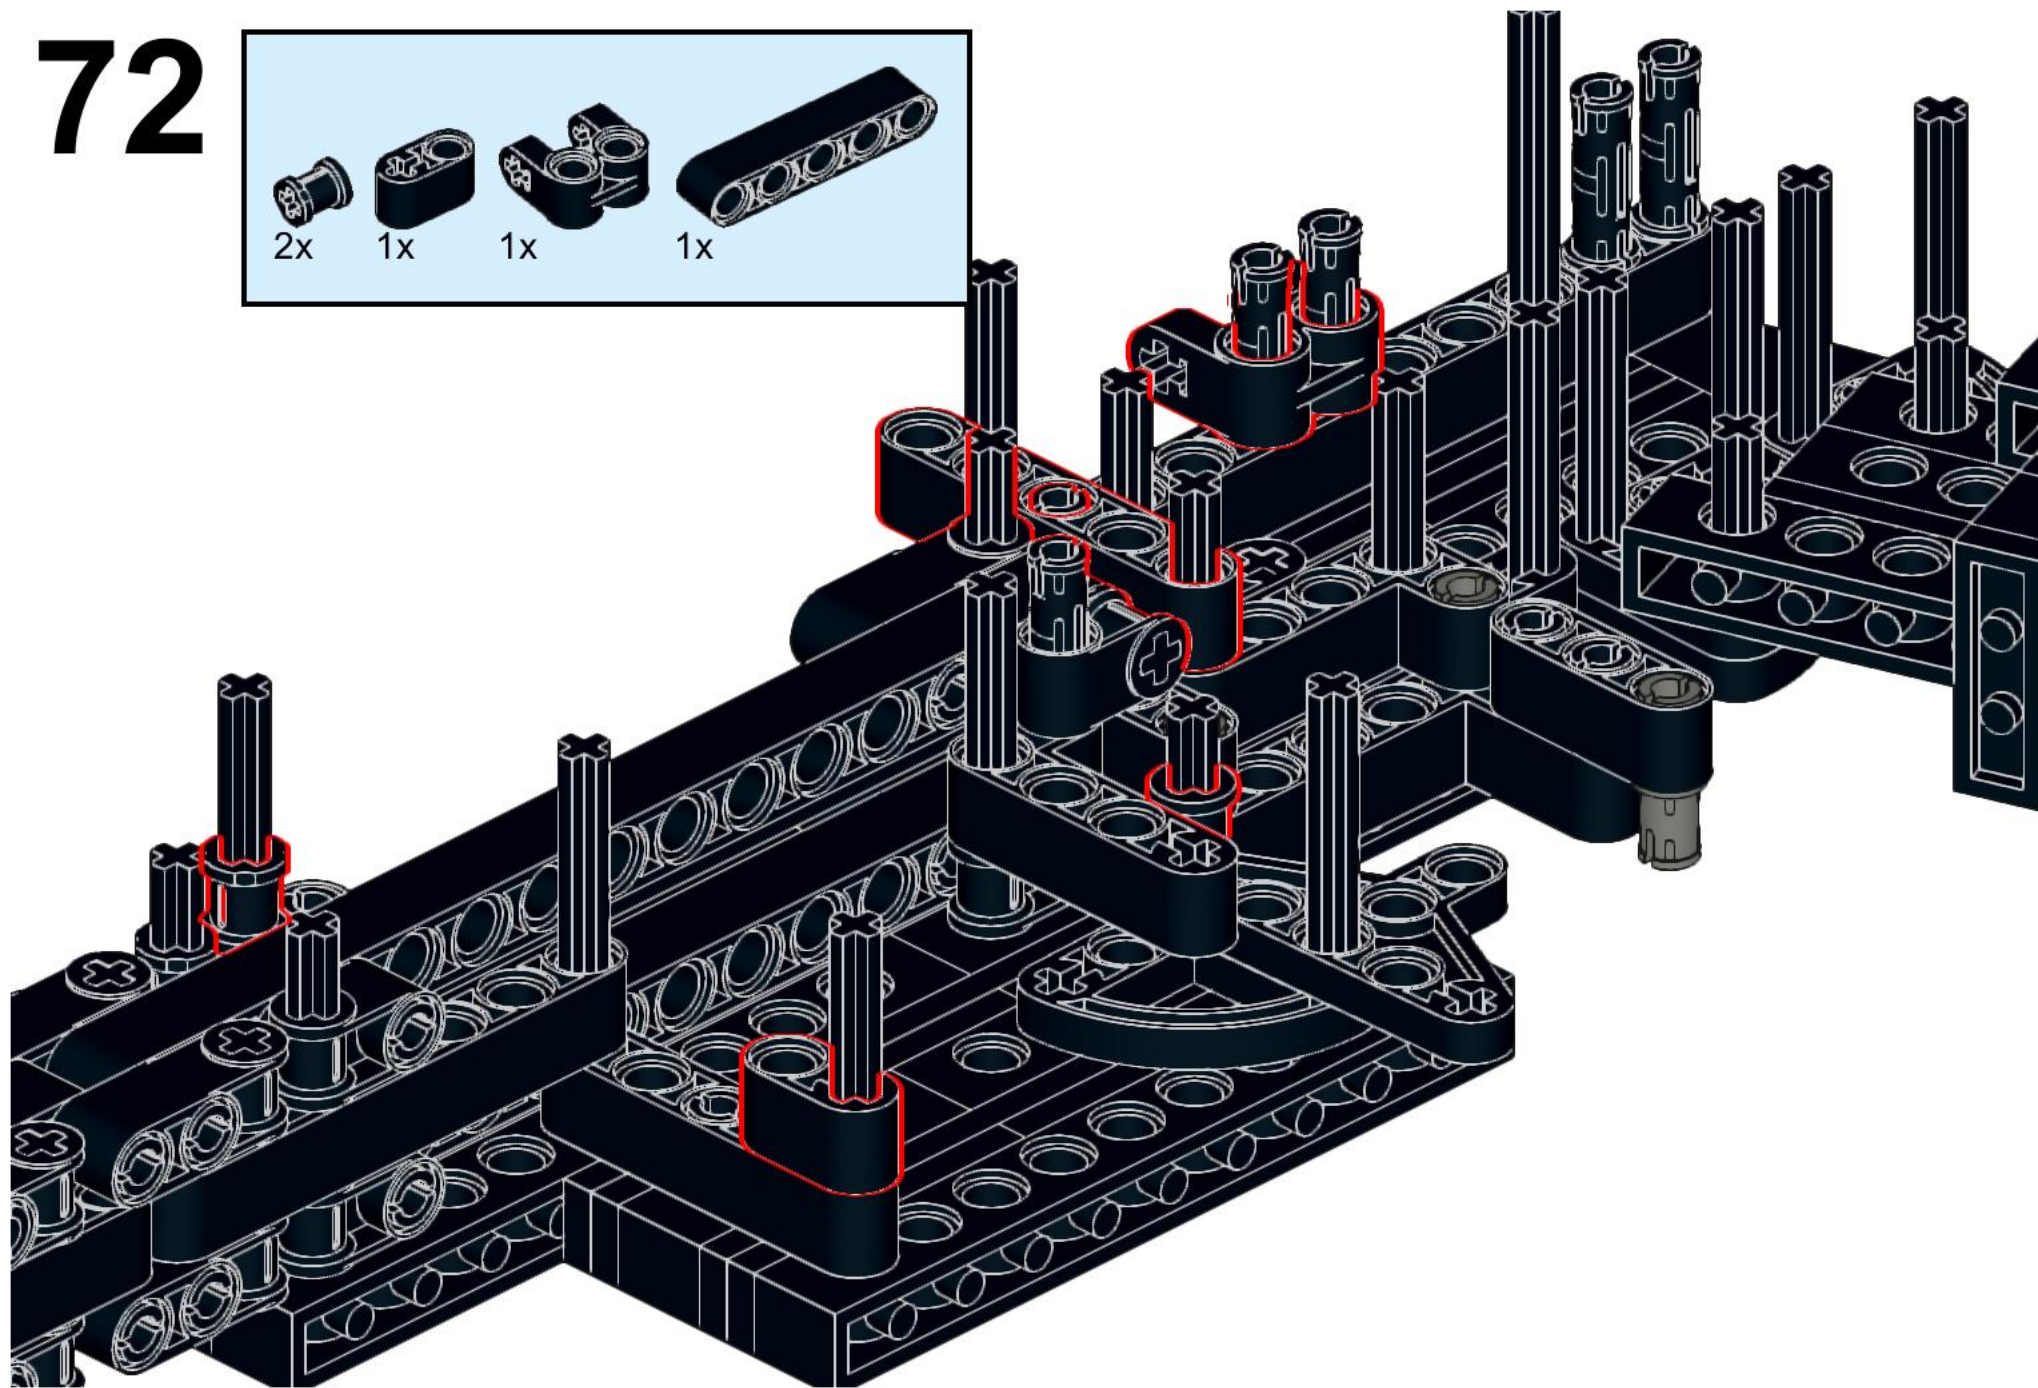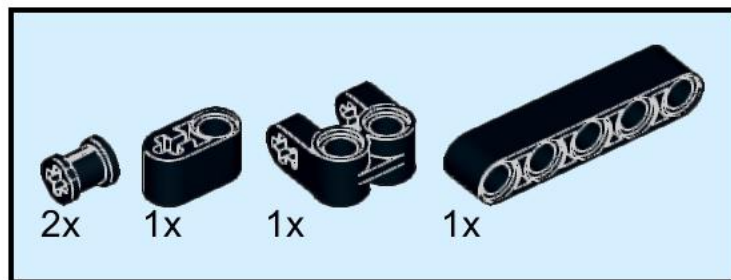



73

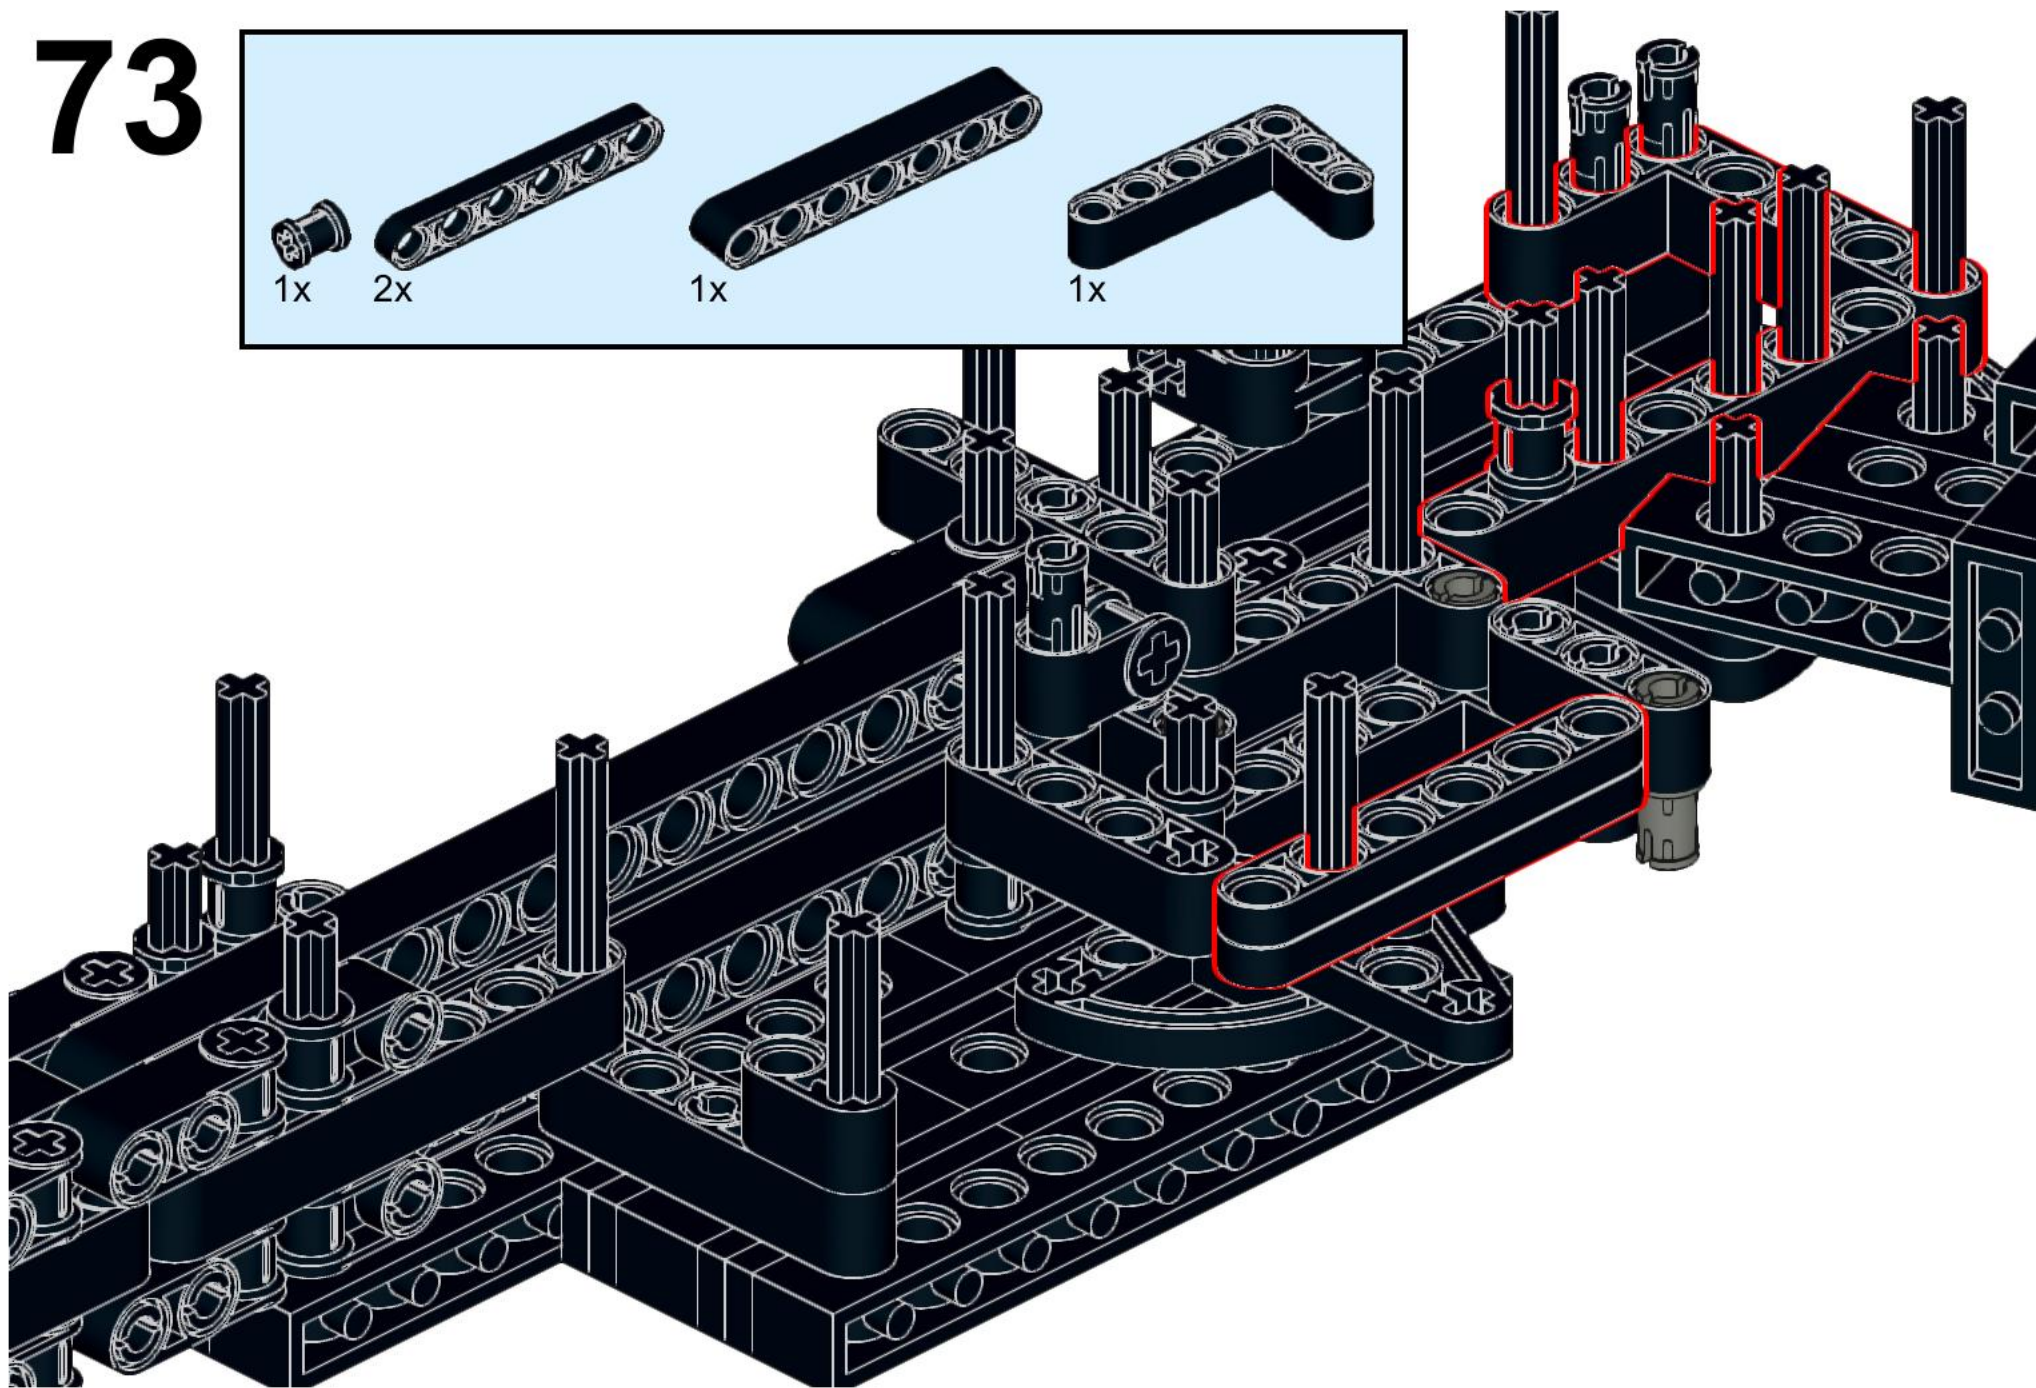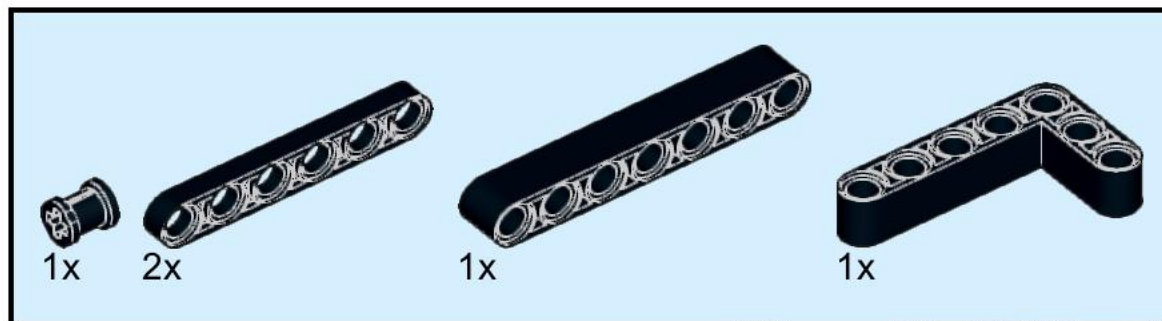



74

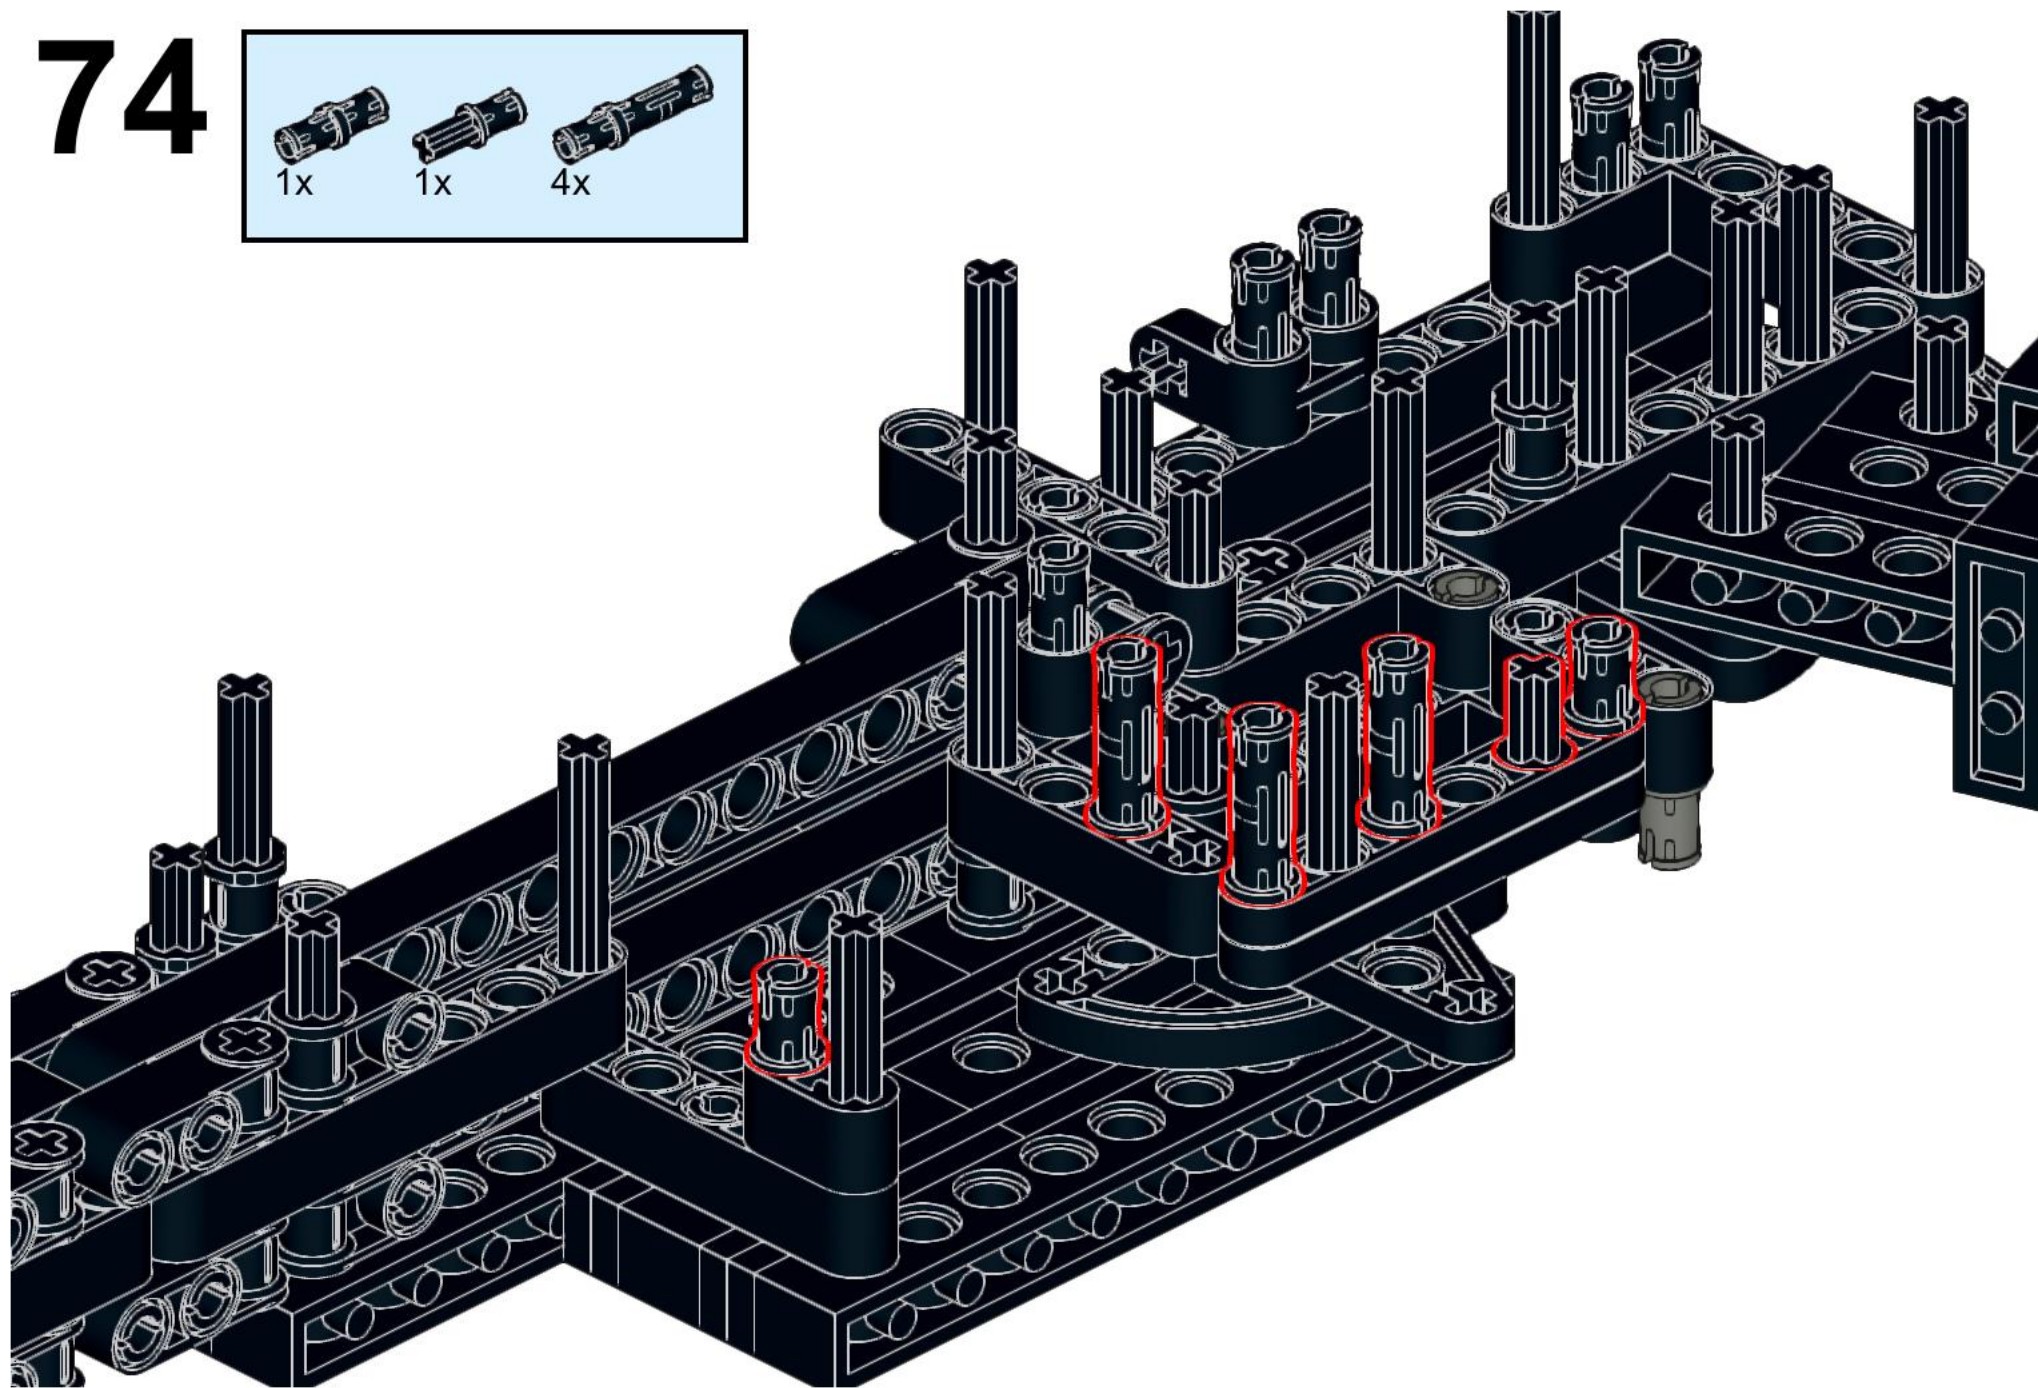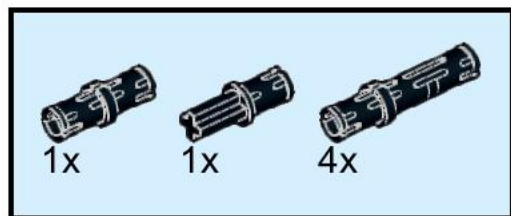



75

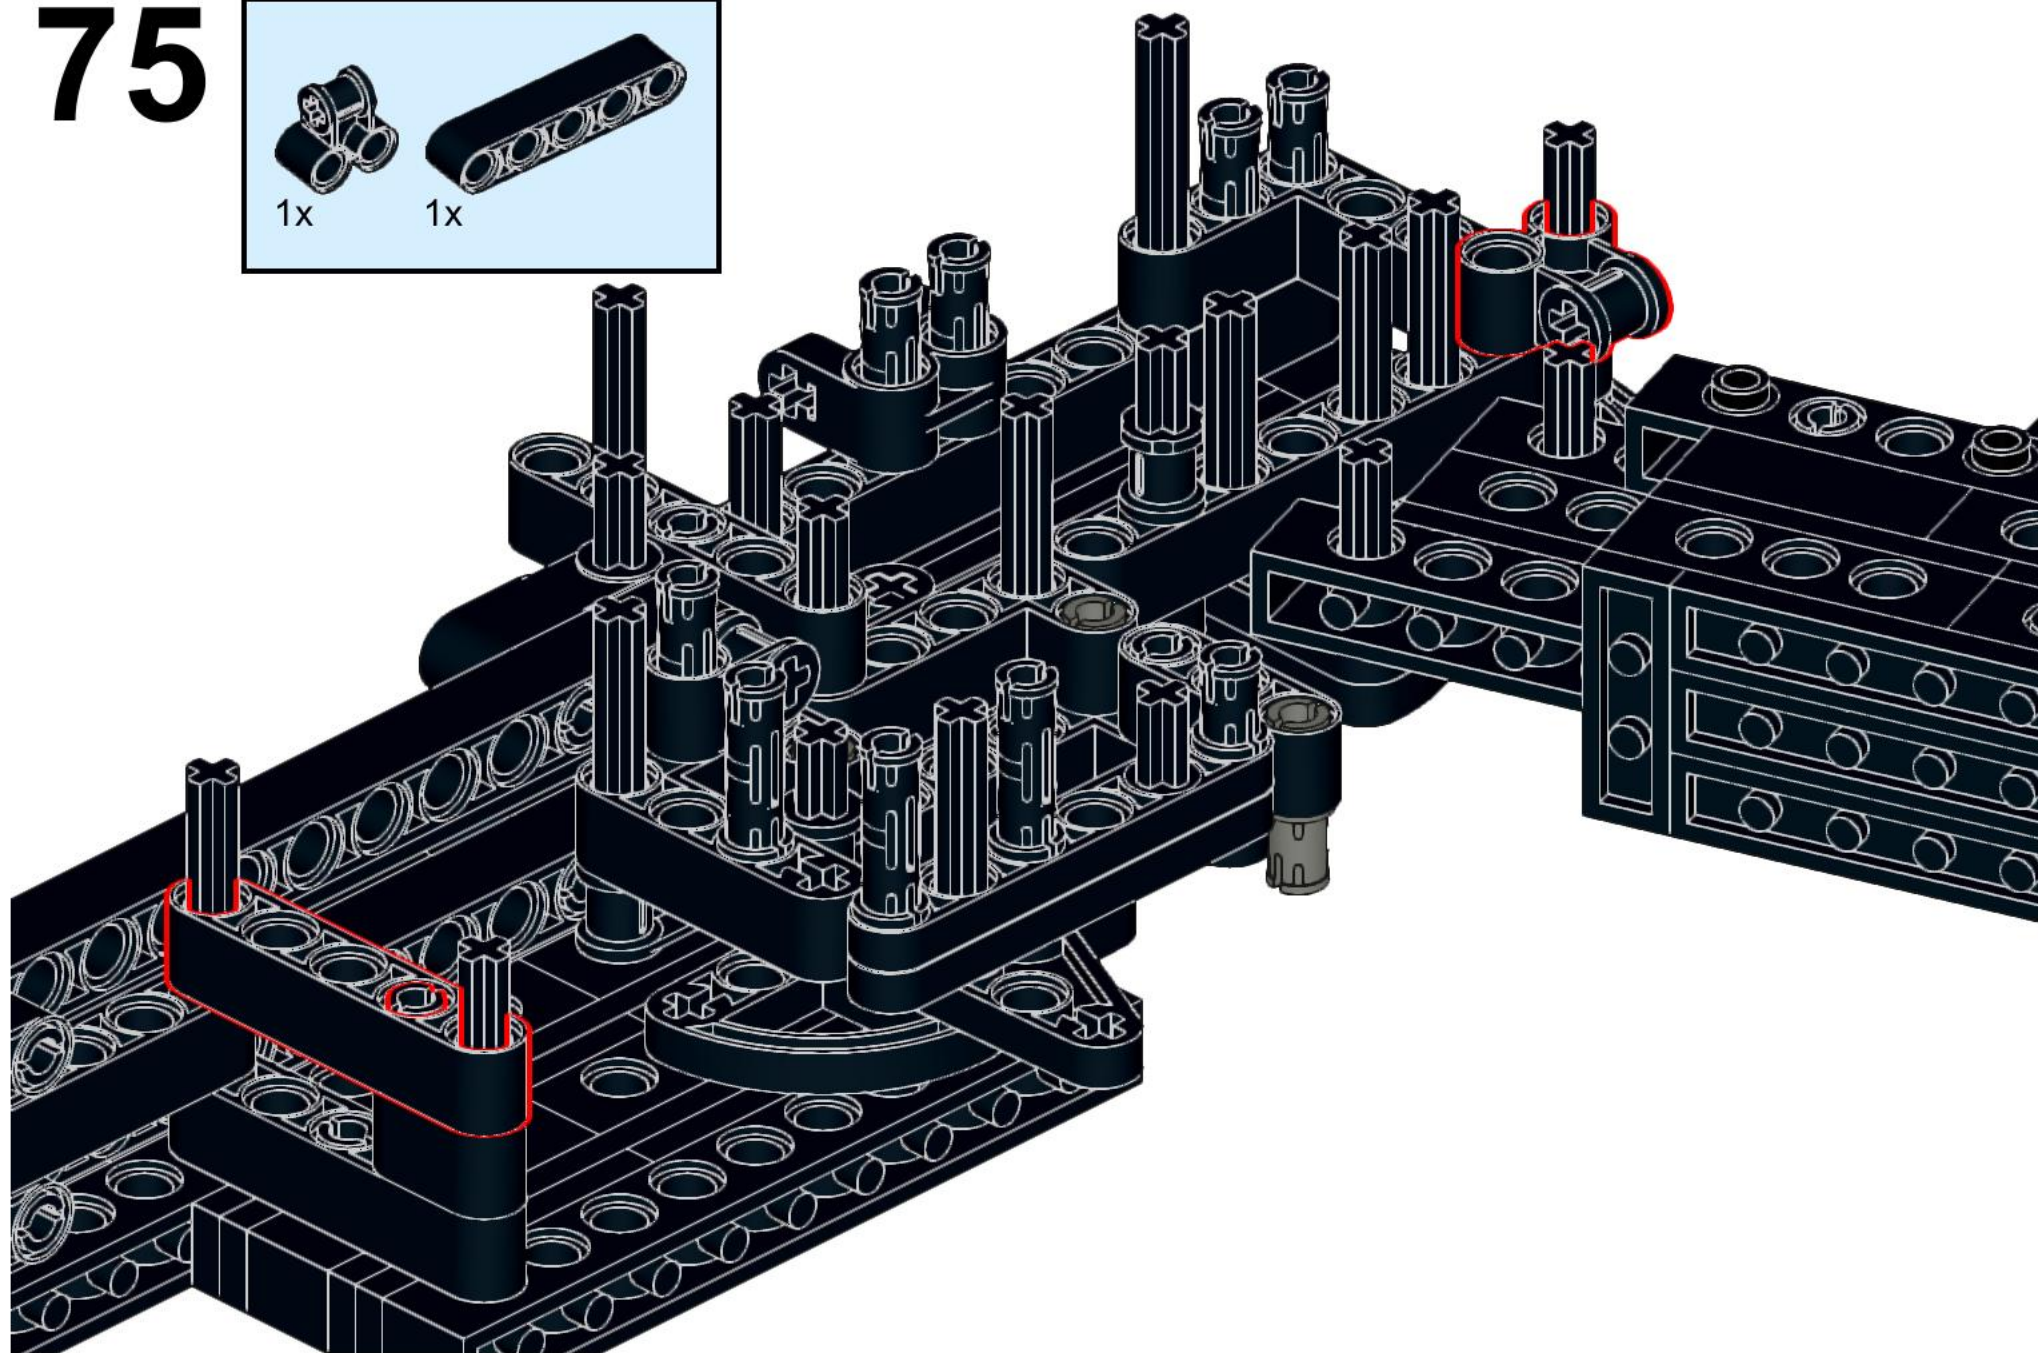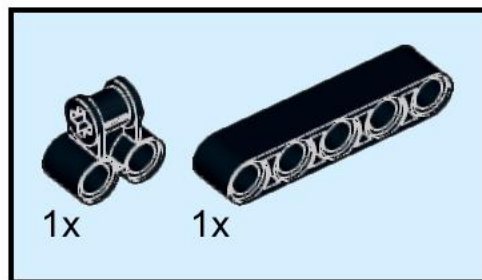



76

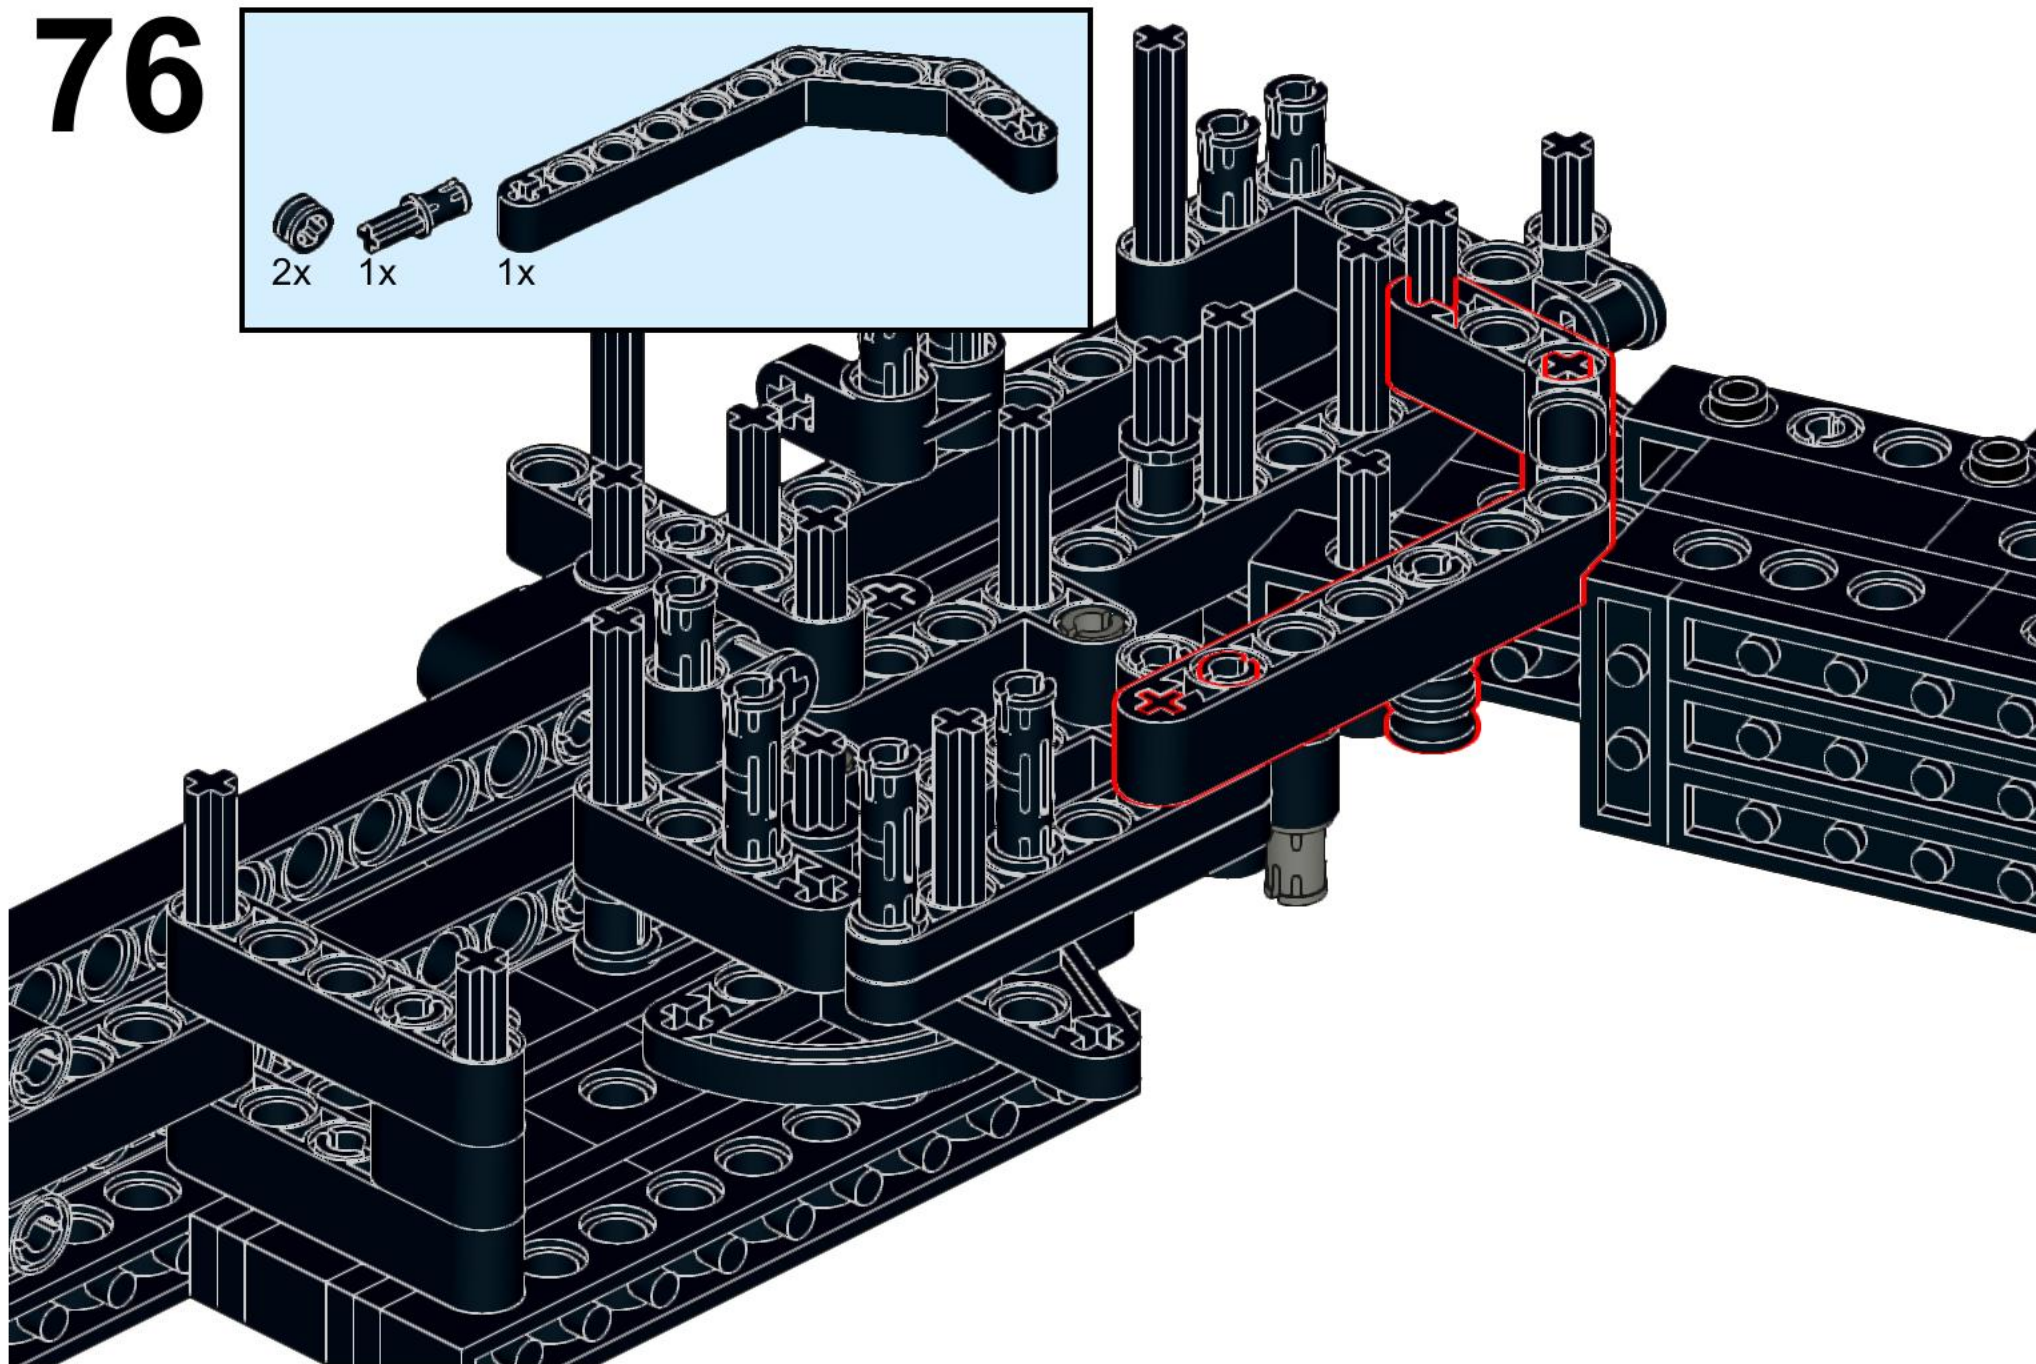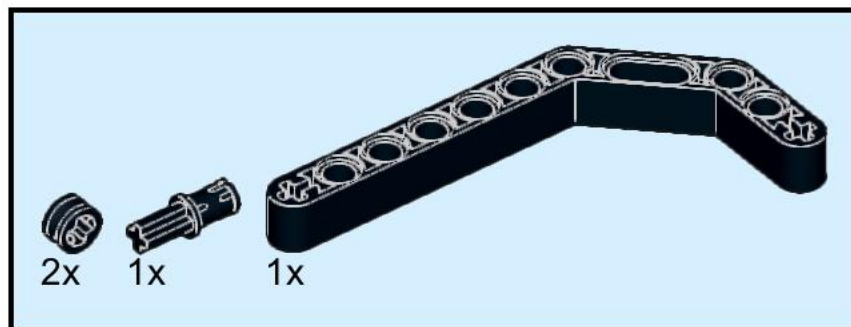



77

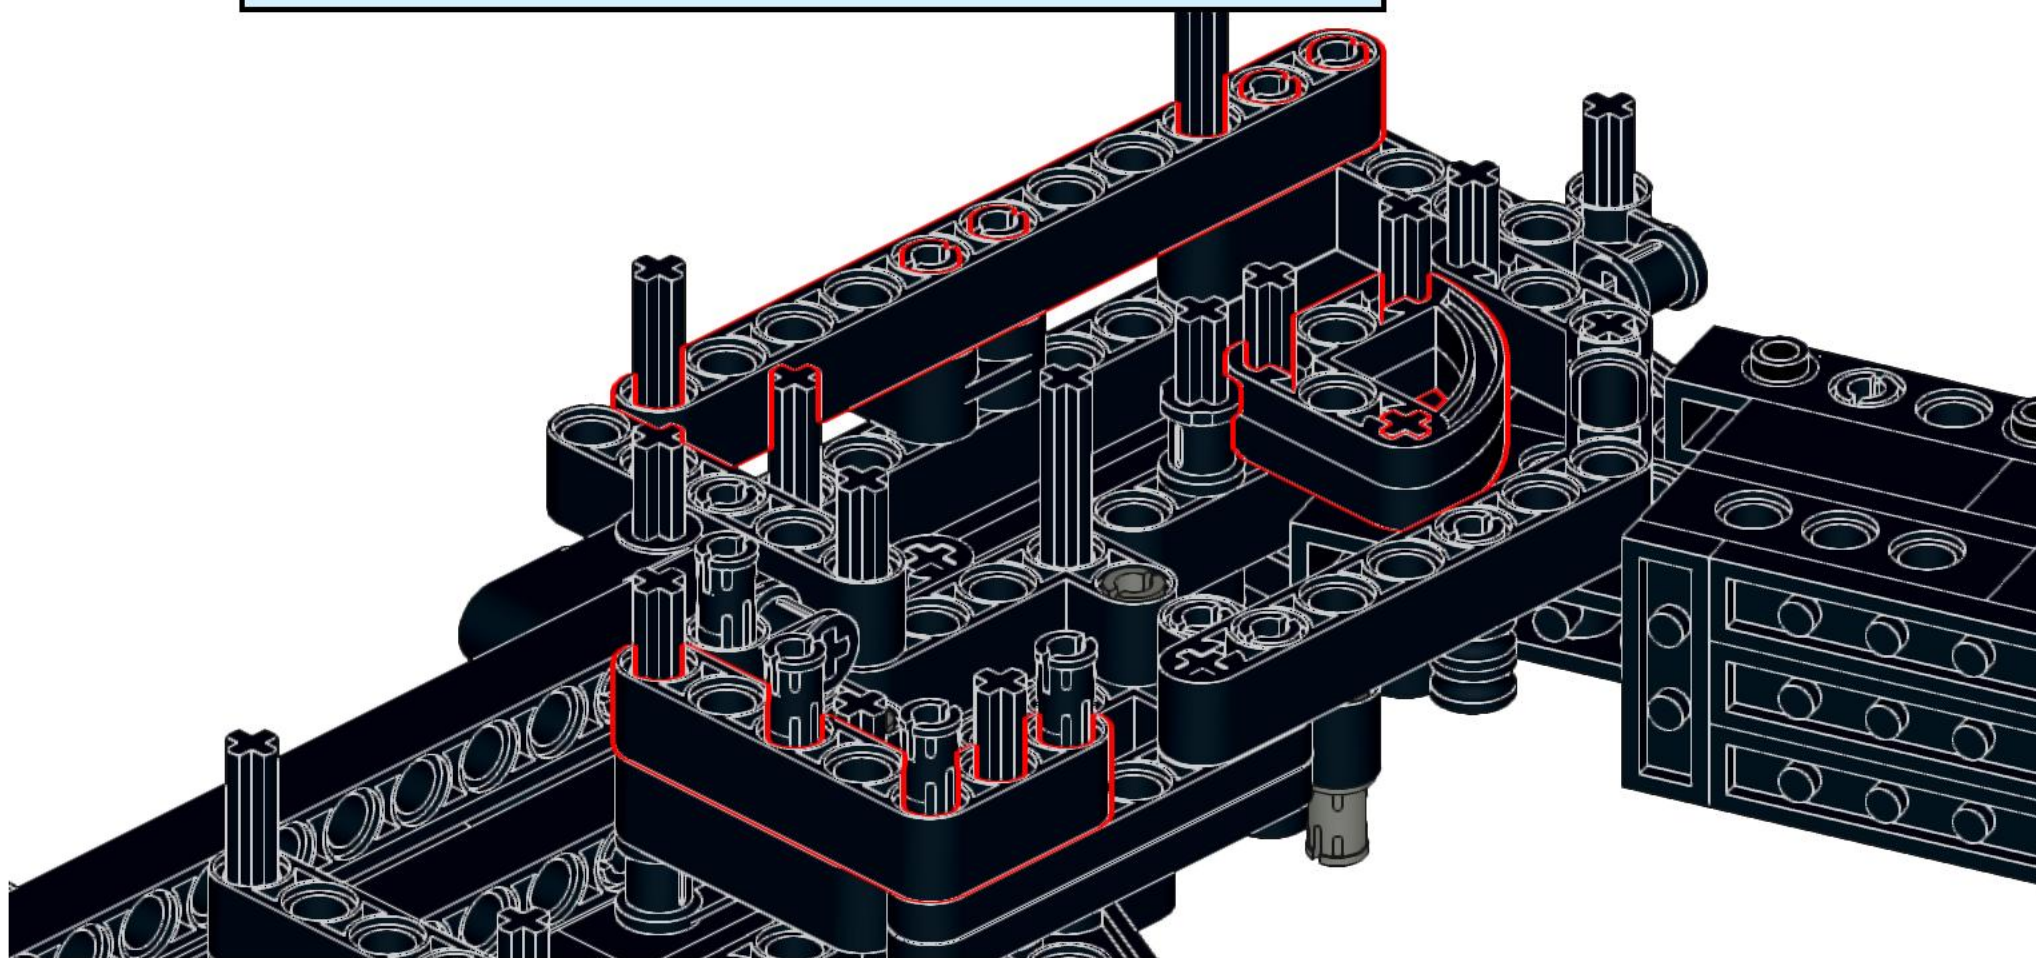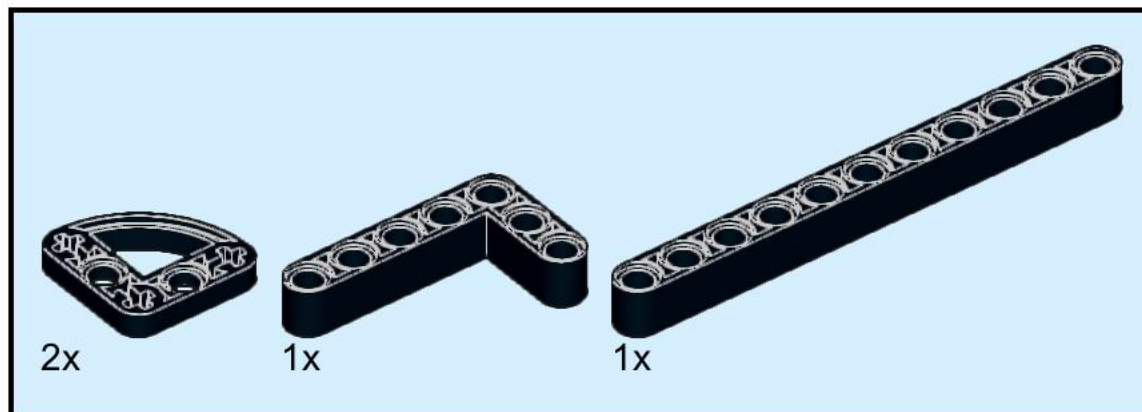

78


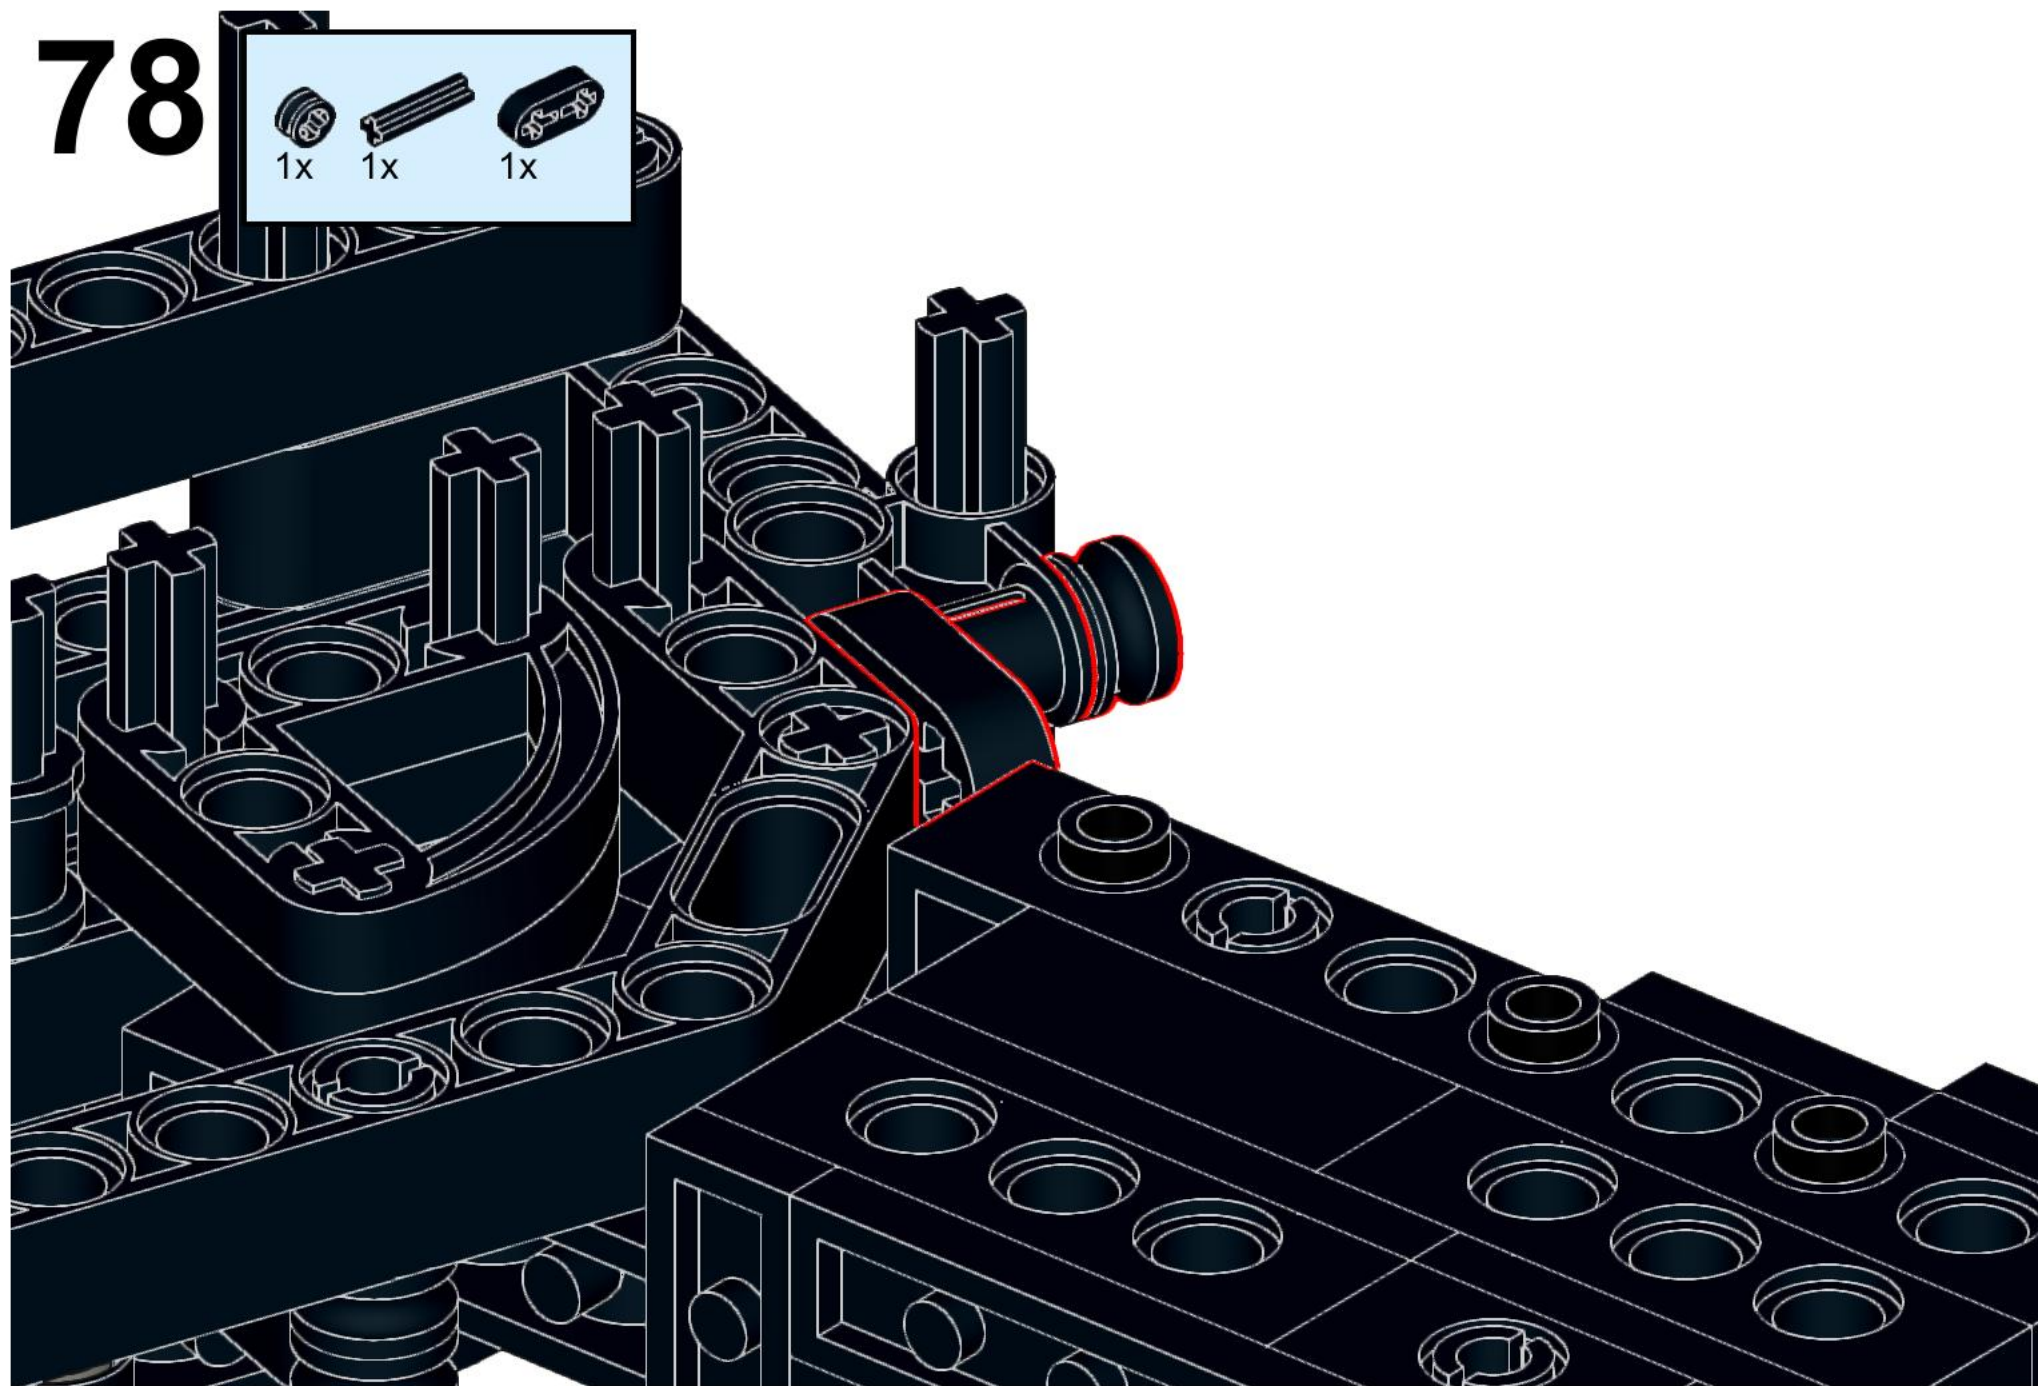
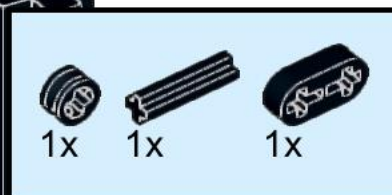


79

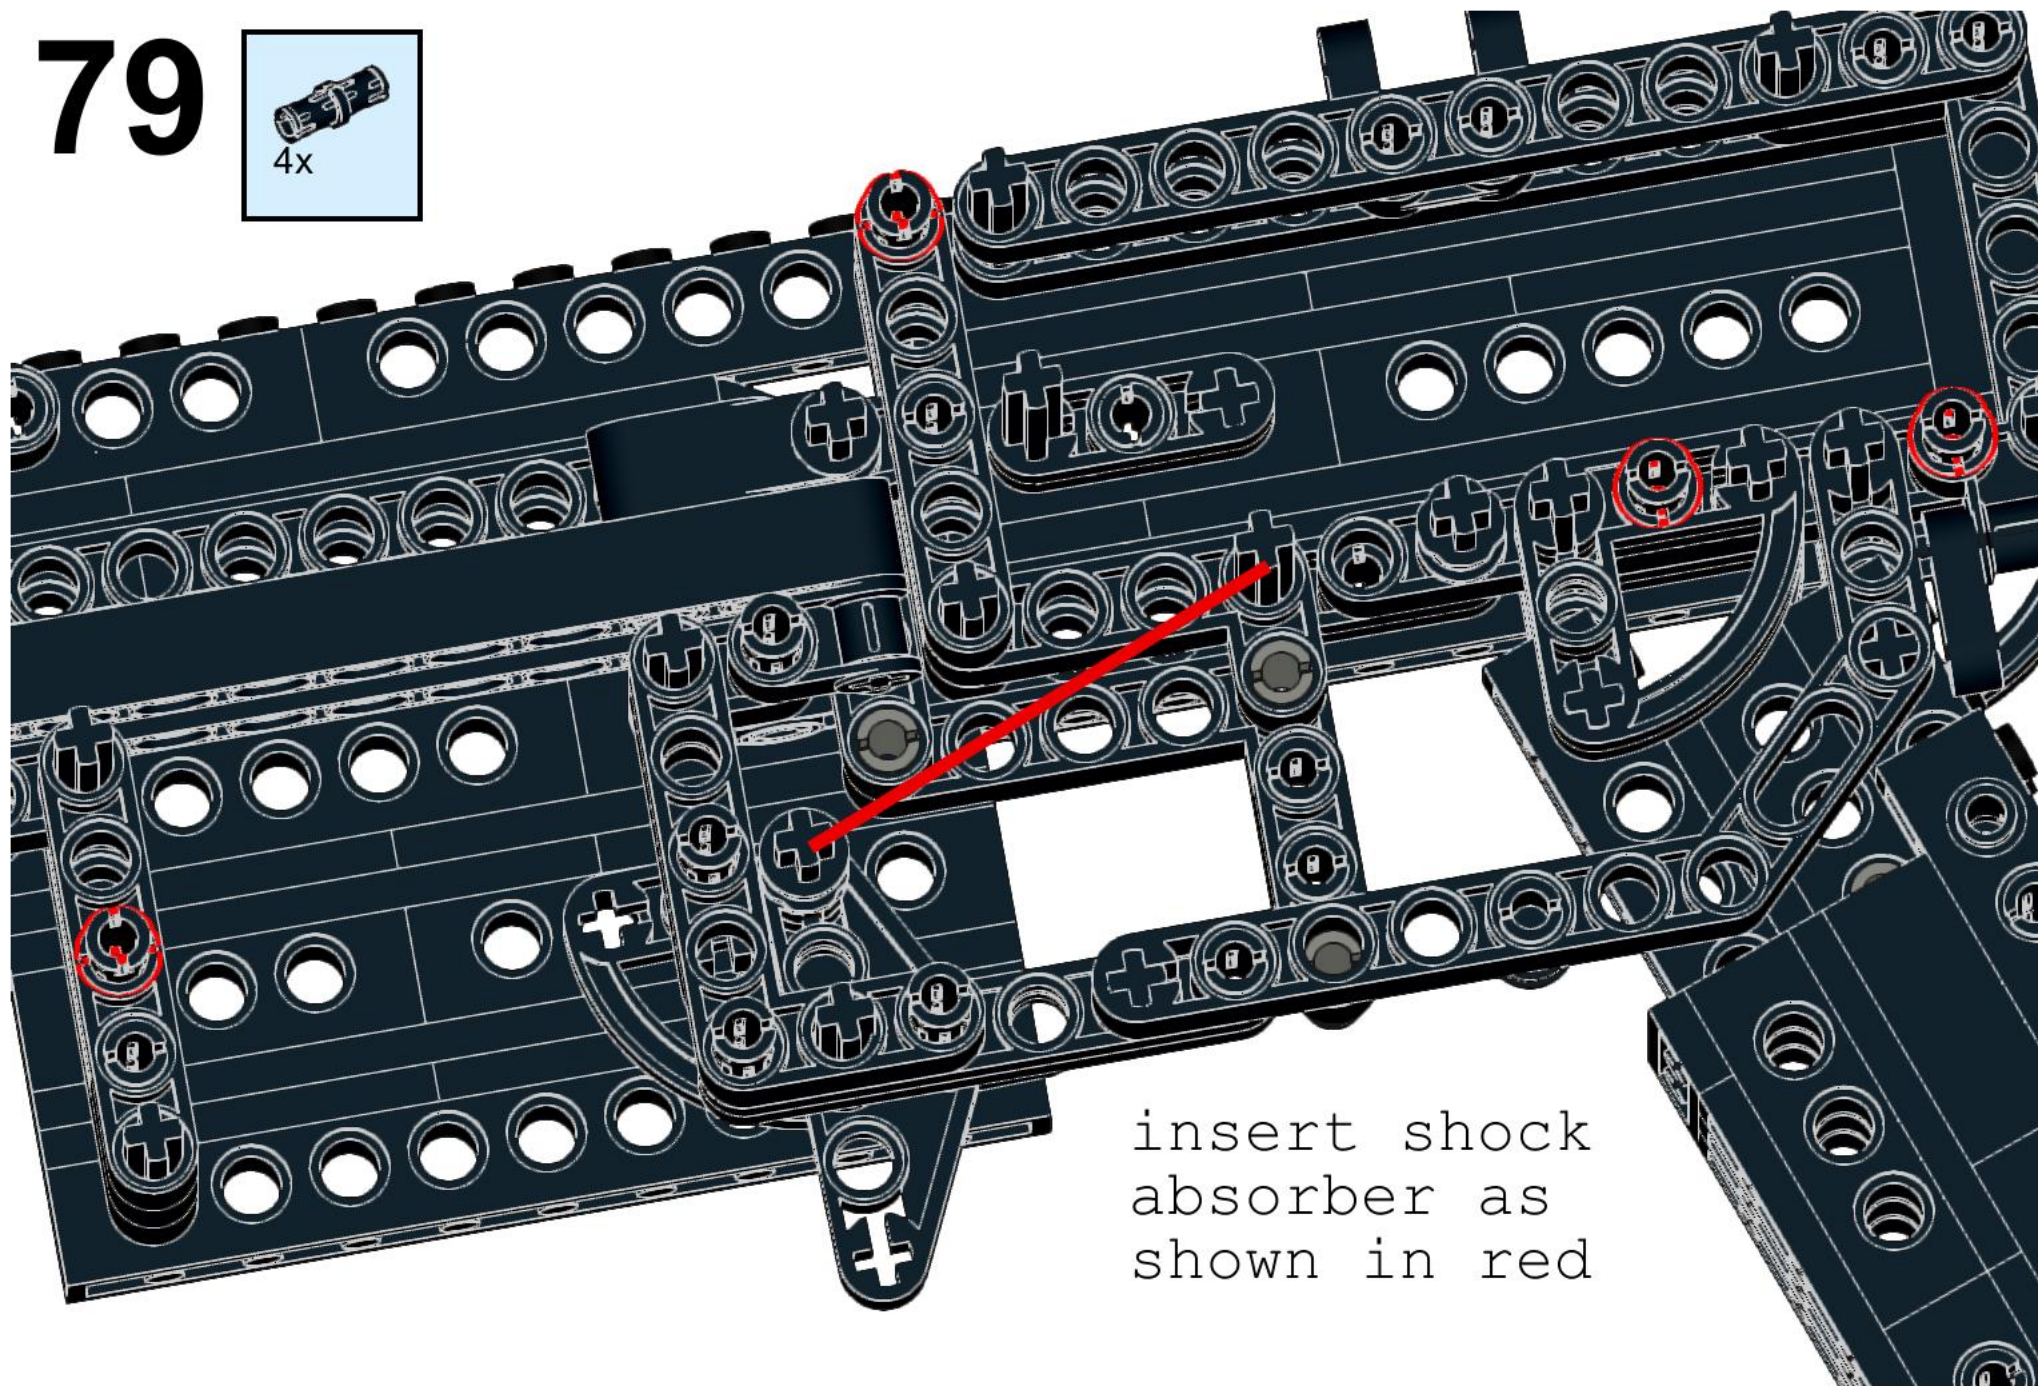
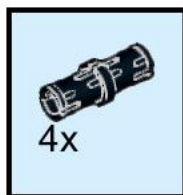


insert shock
absorber as
shown in red



80

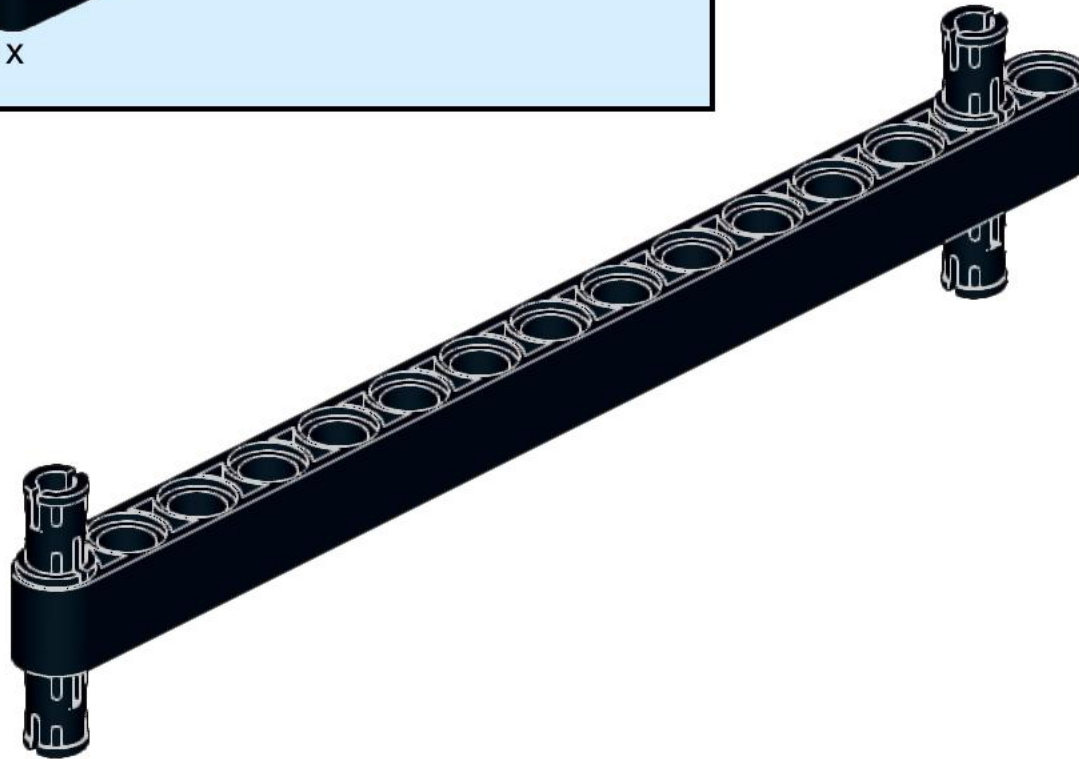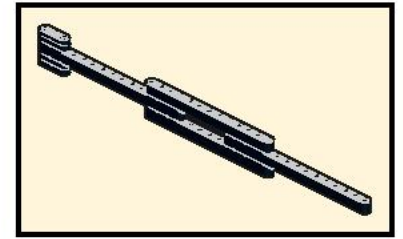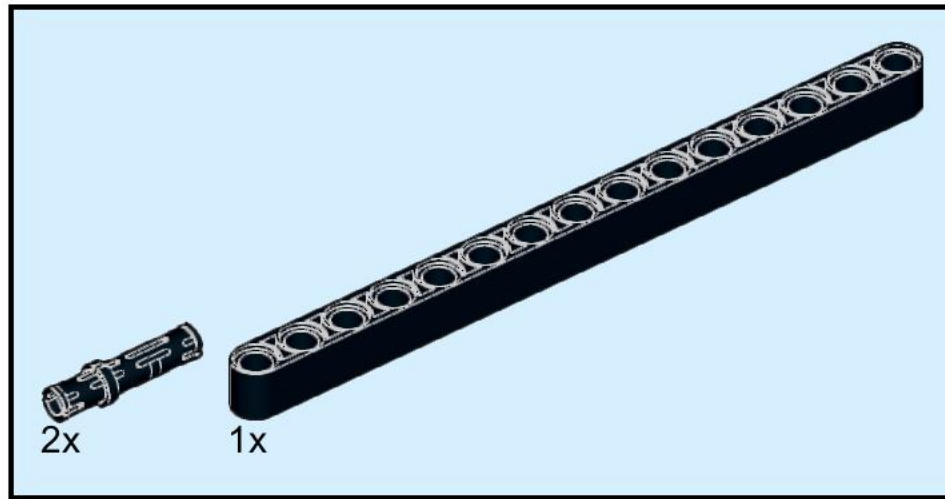



81

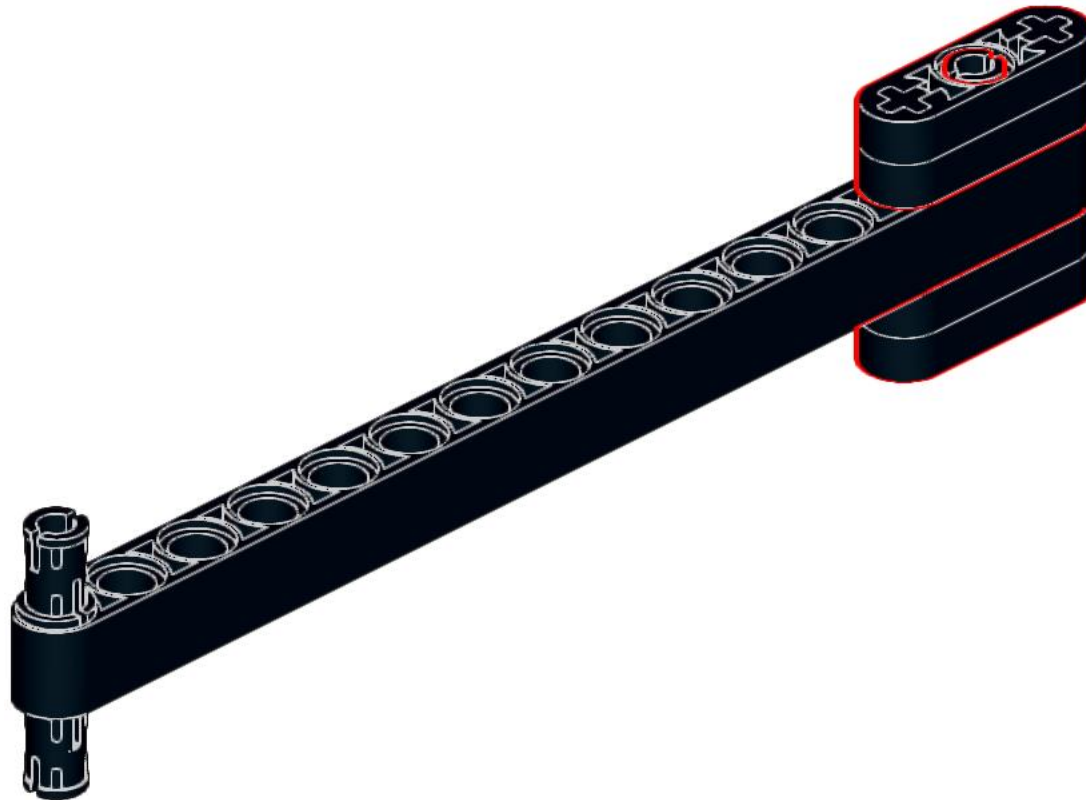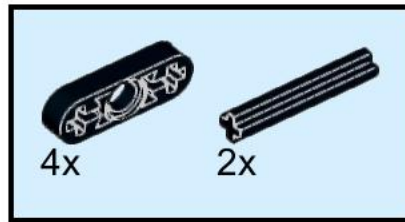


82

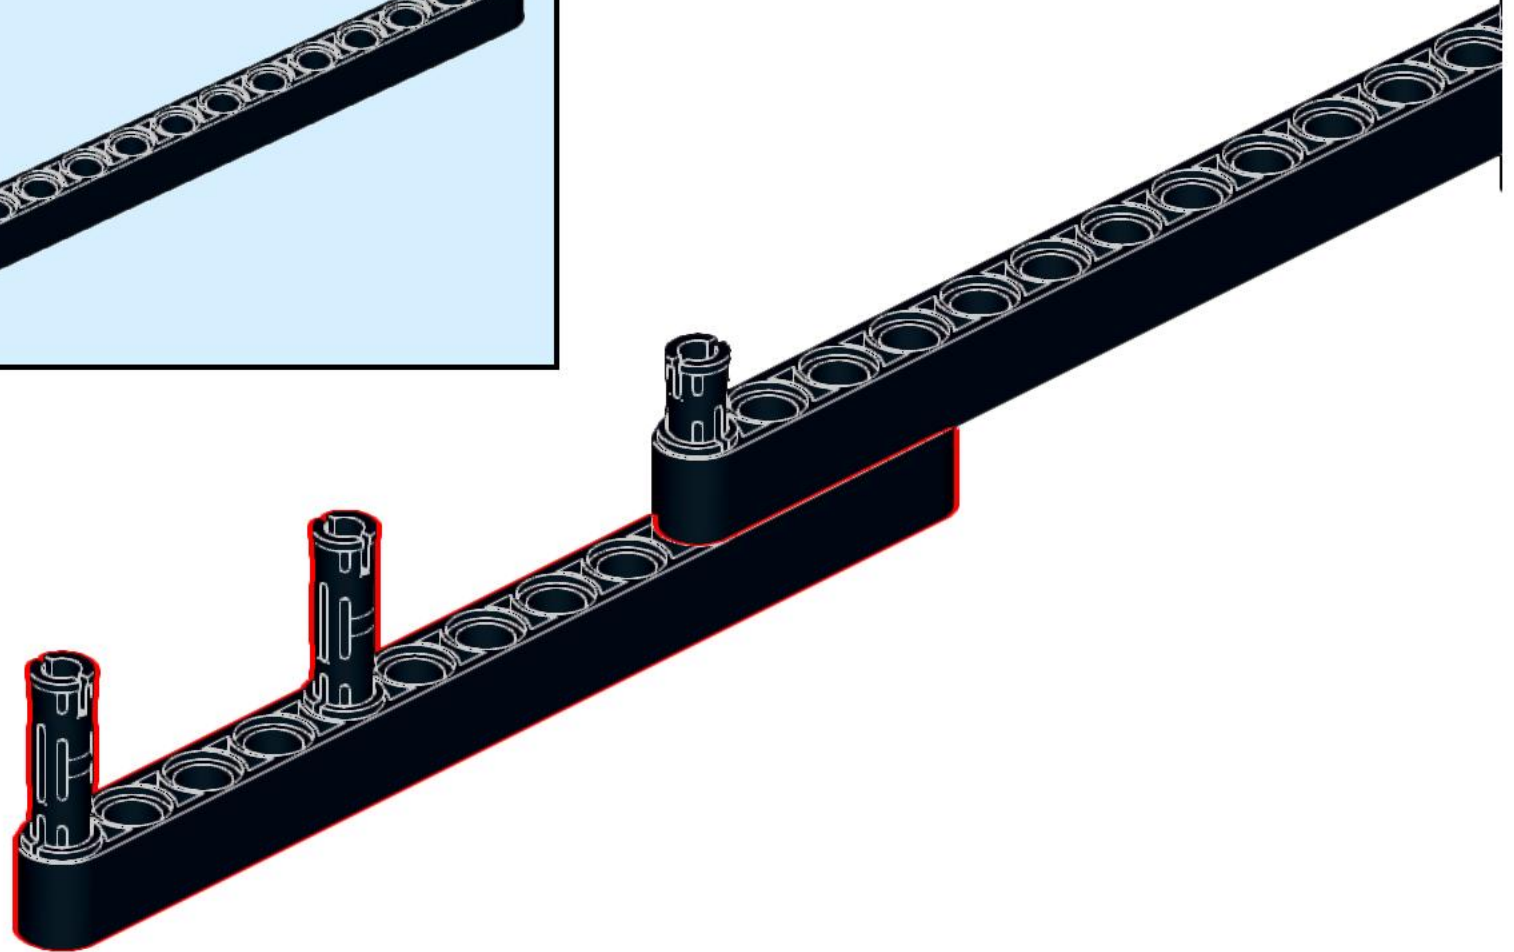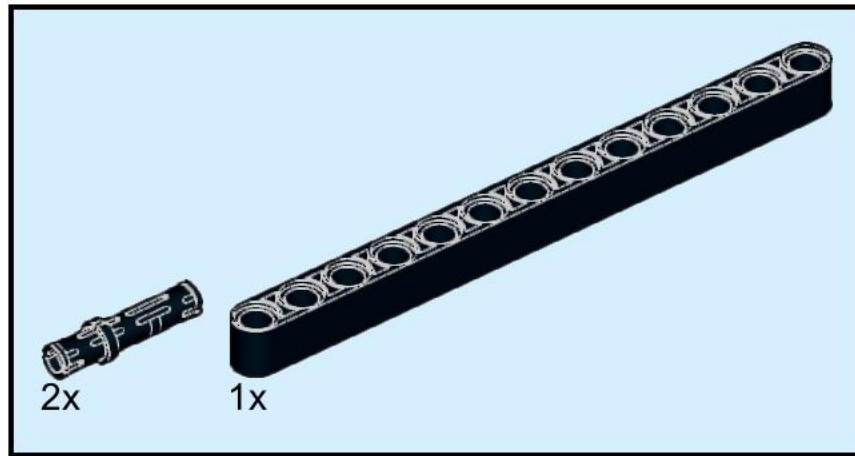



83

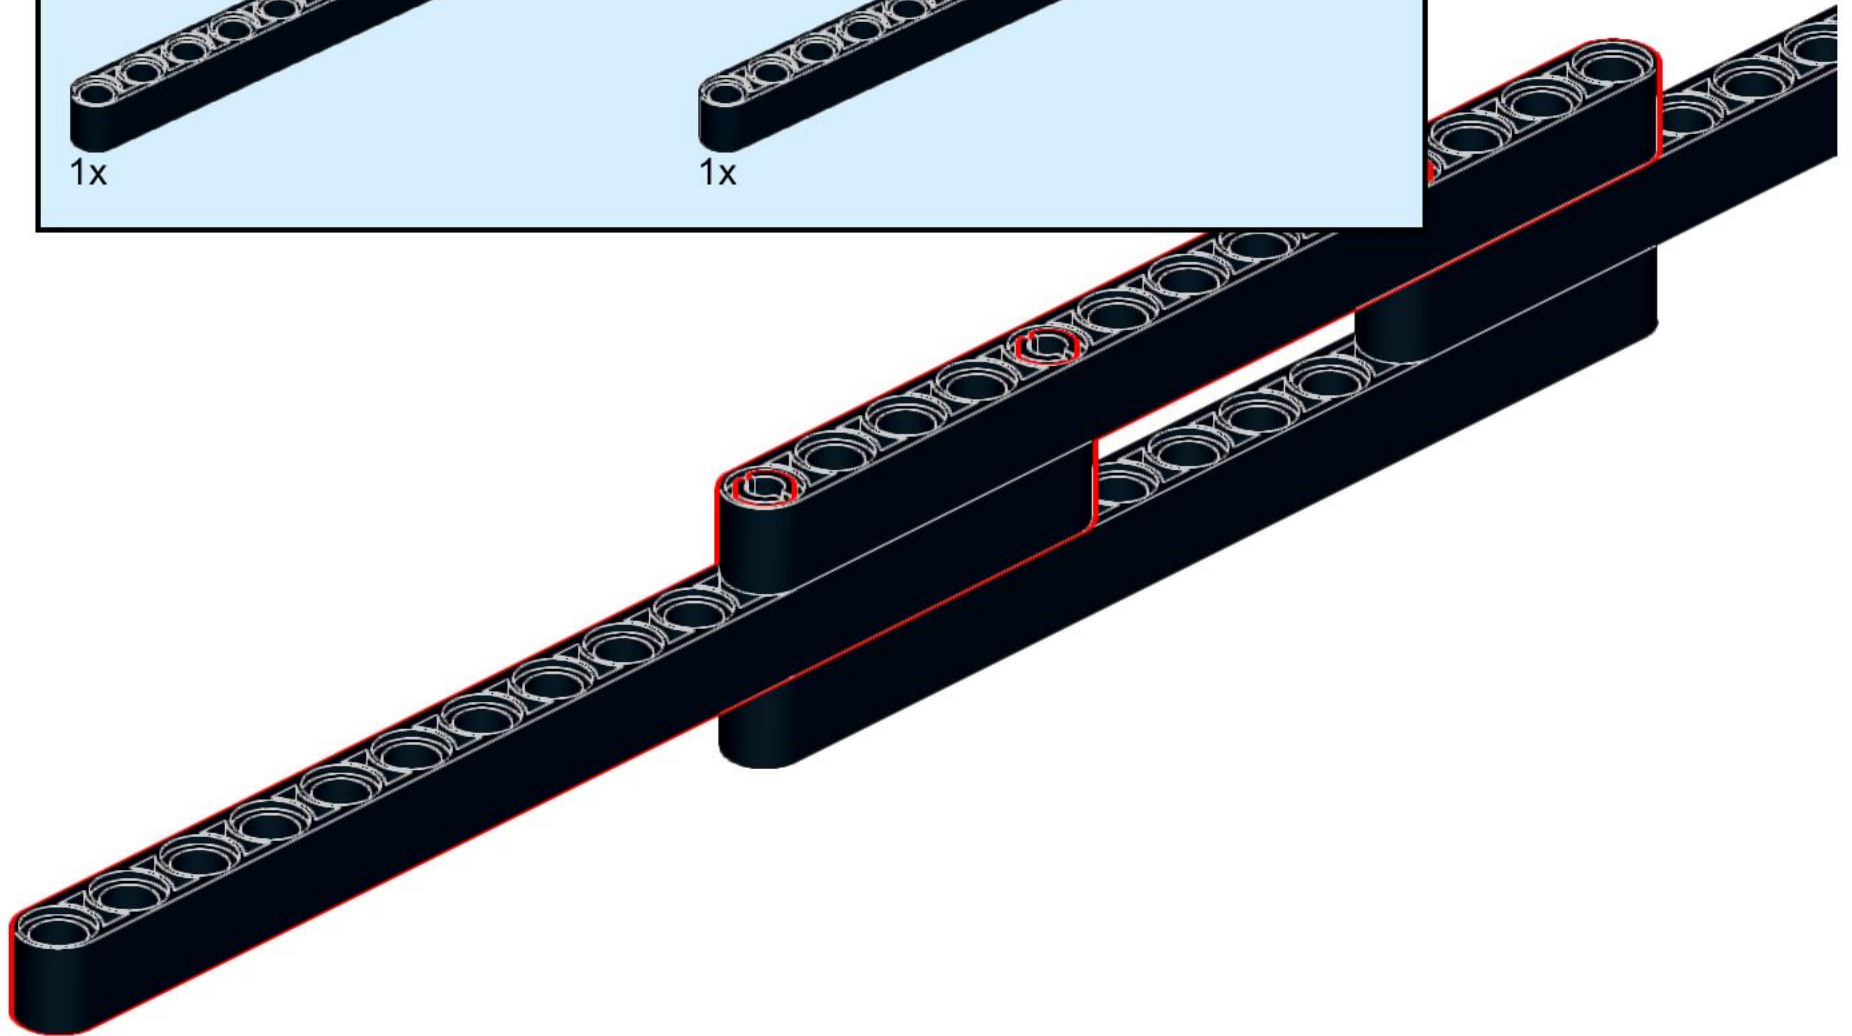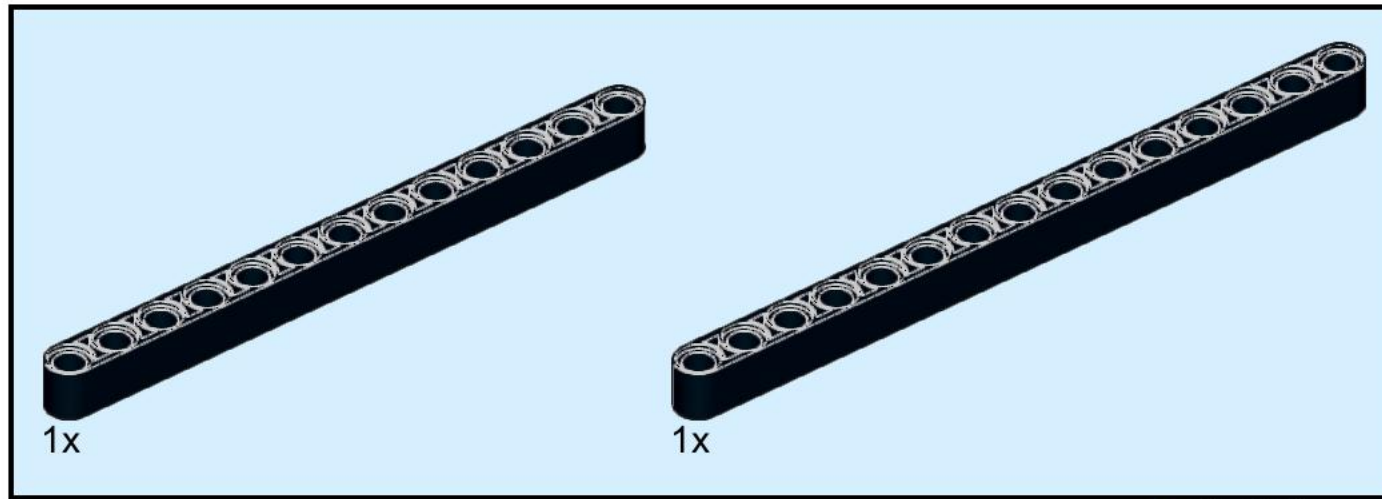




84

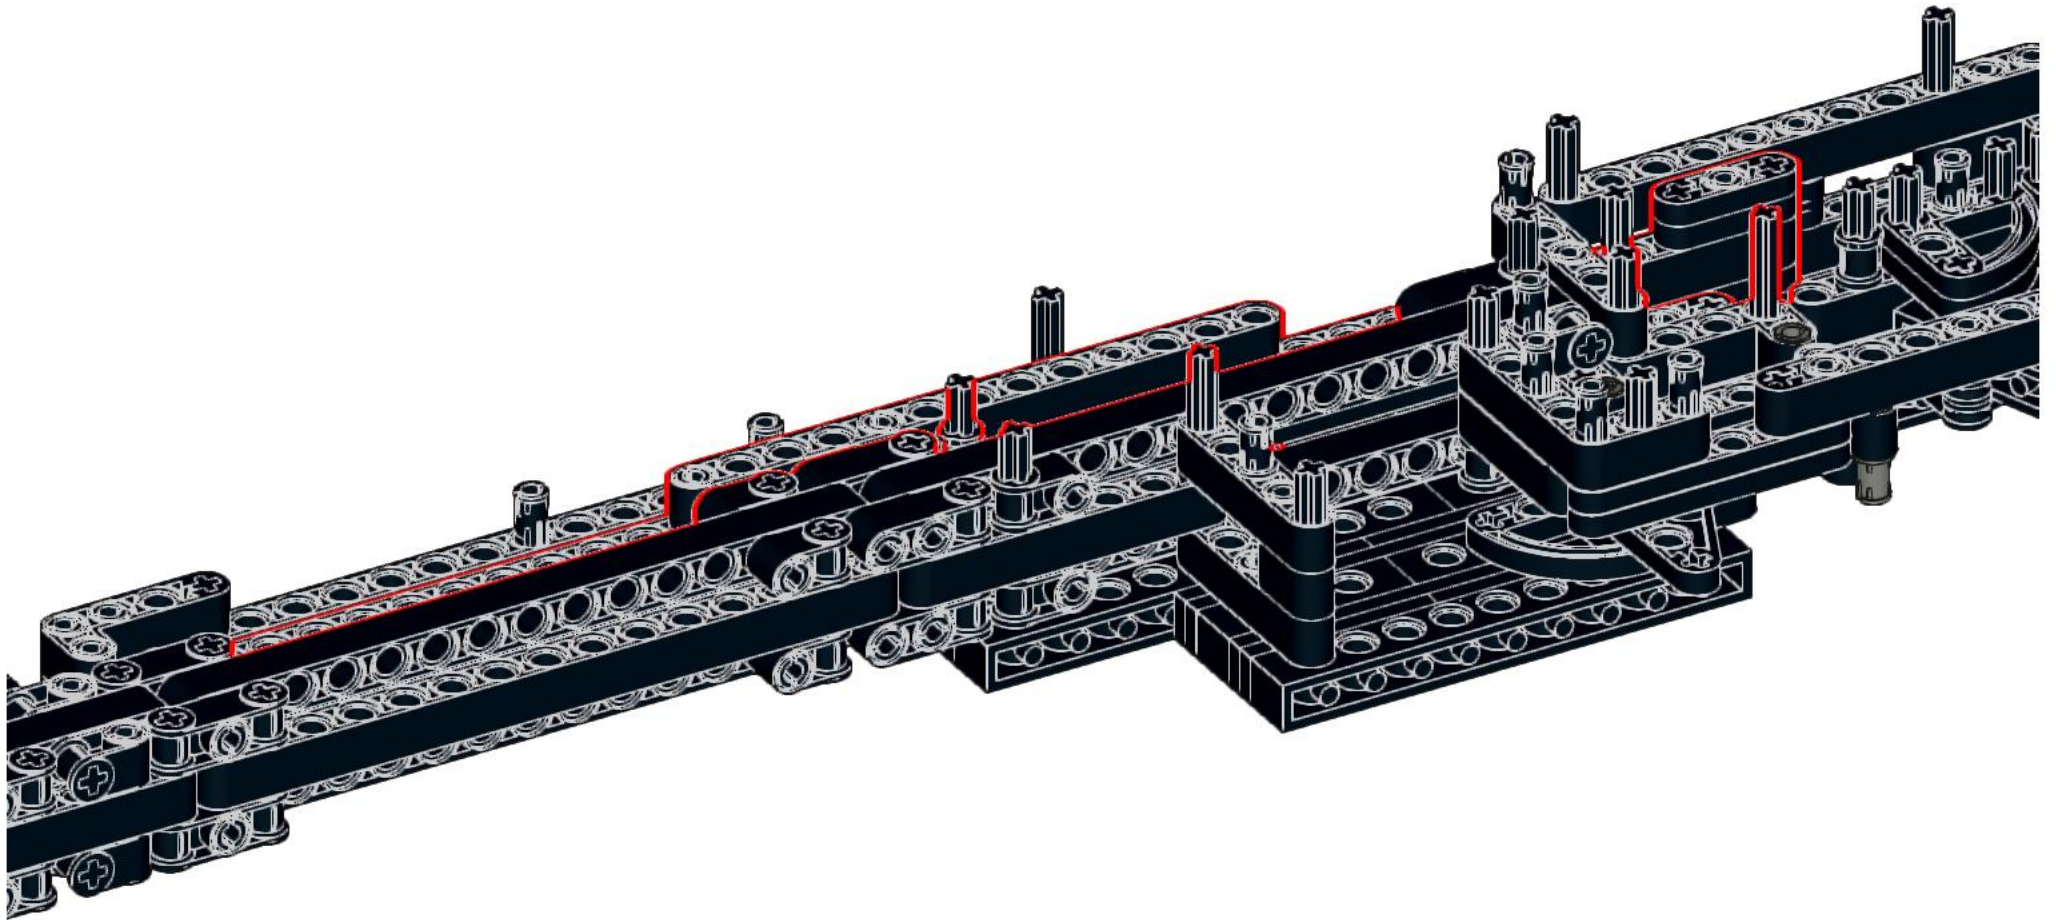



85

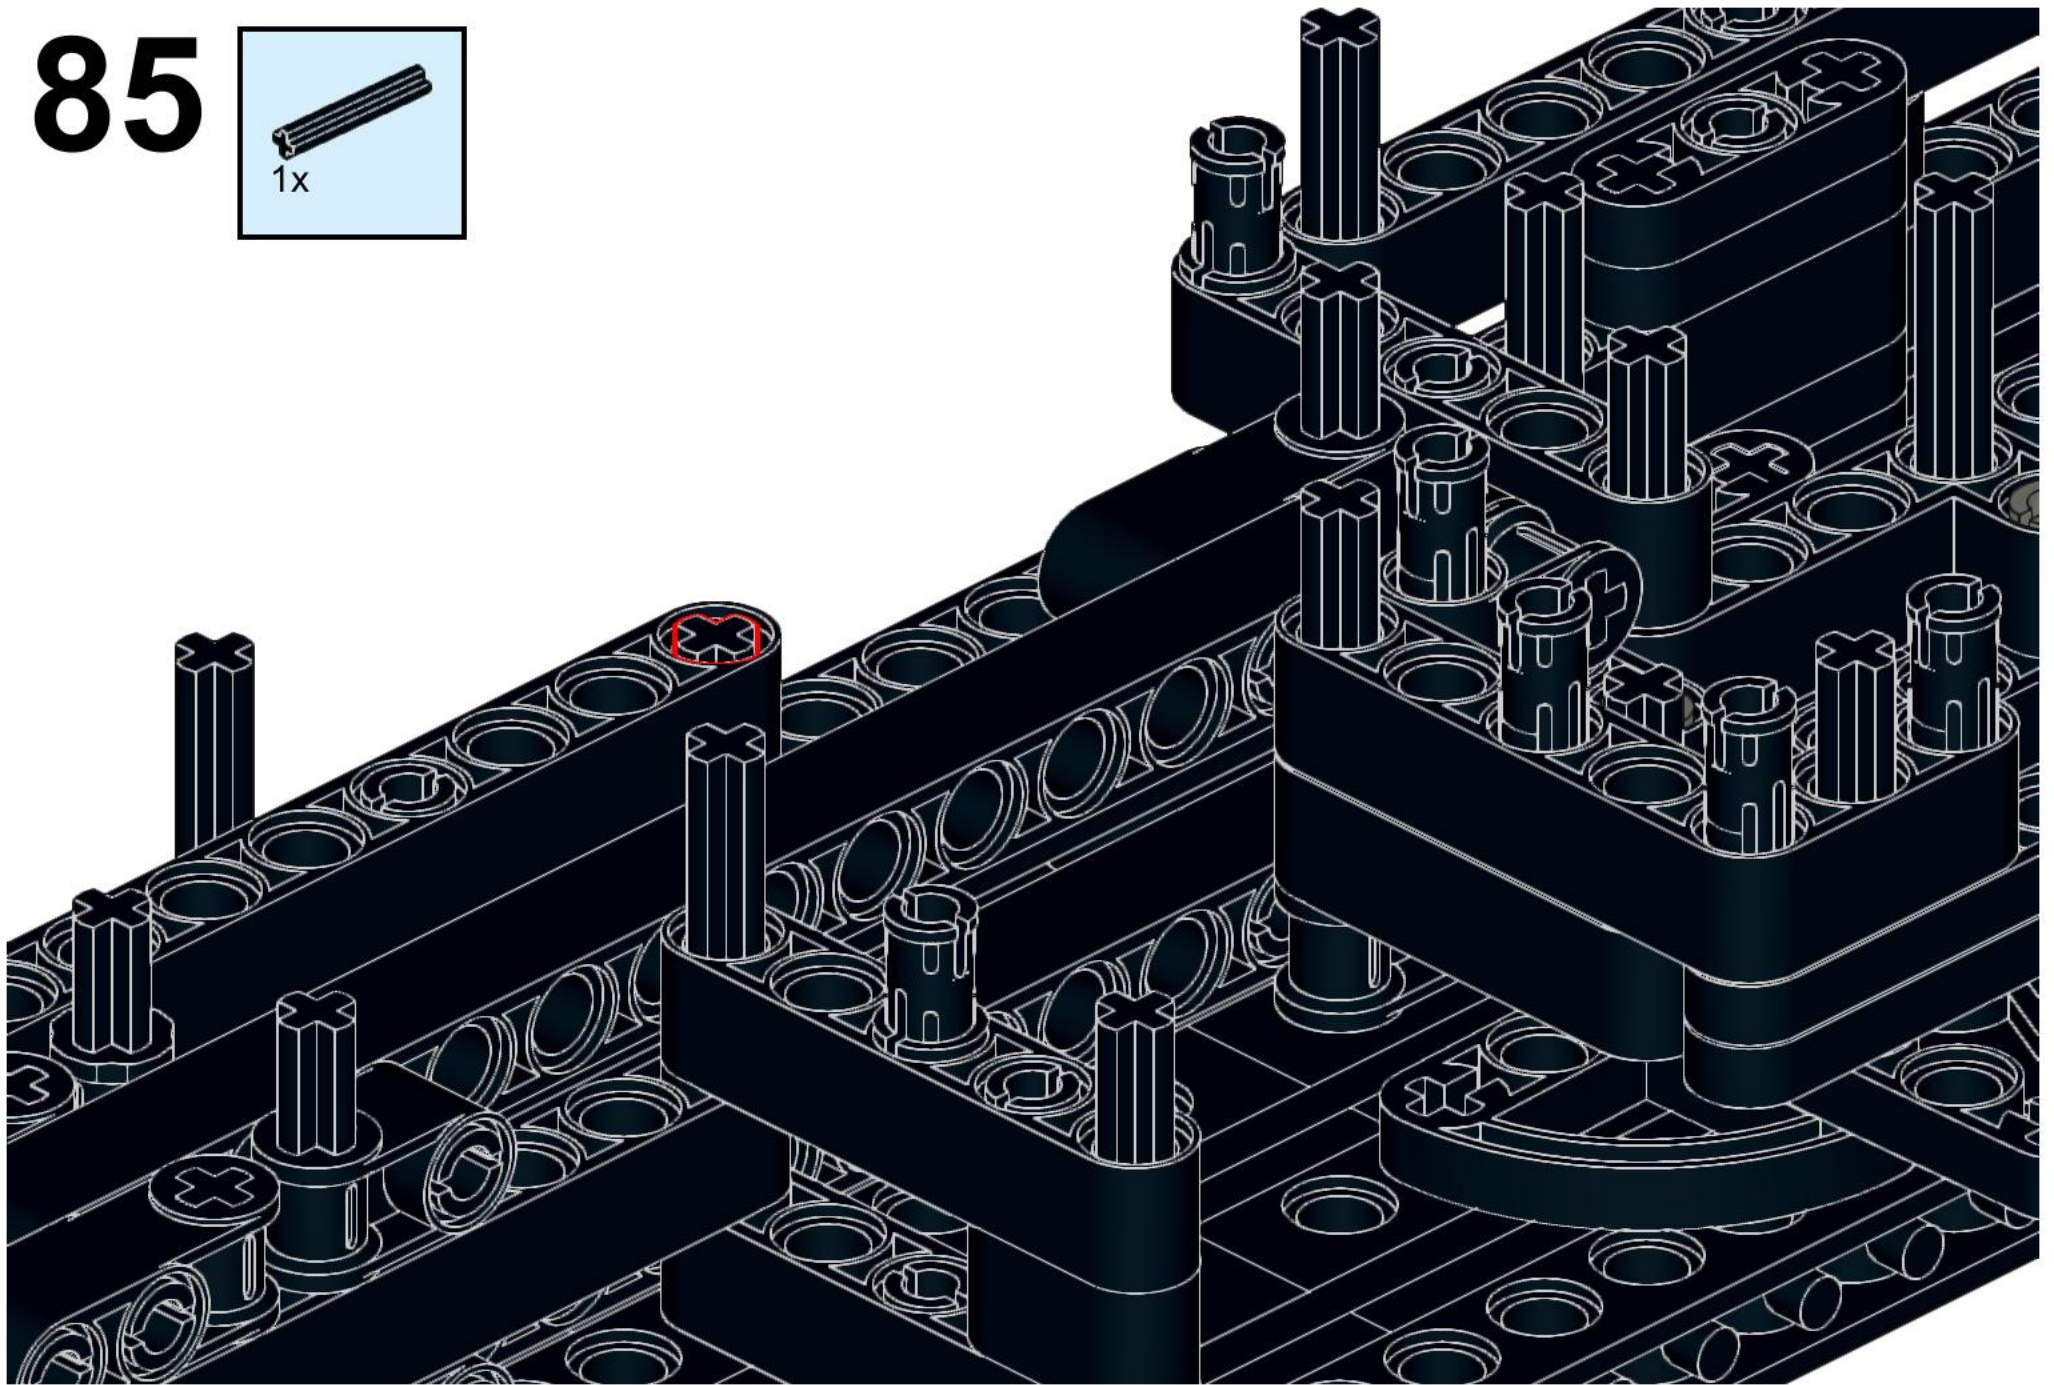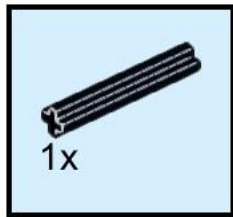



86

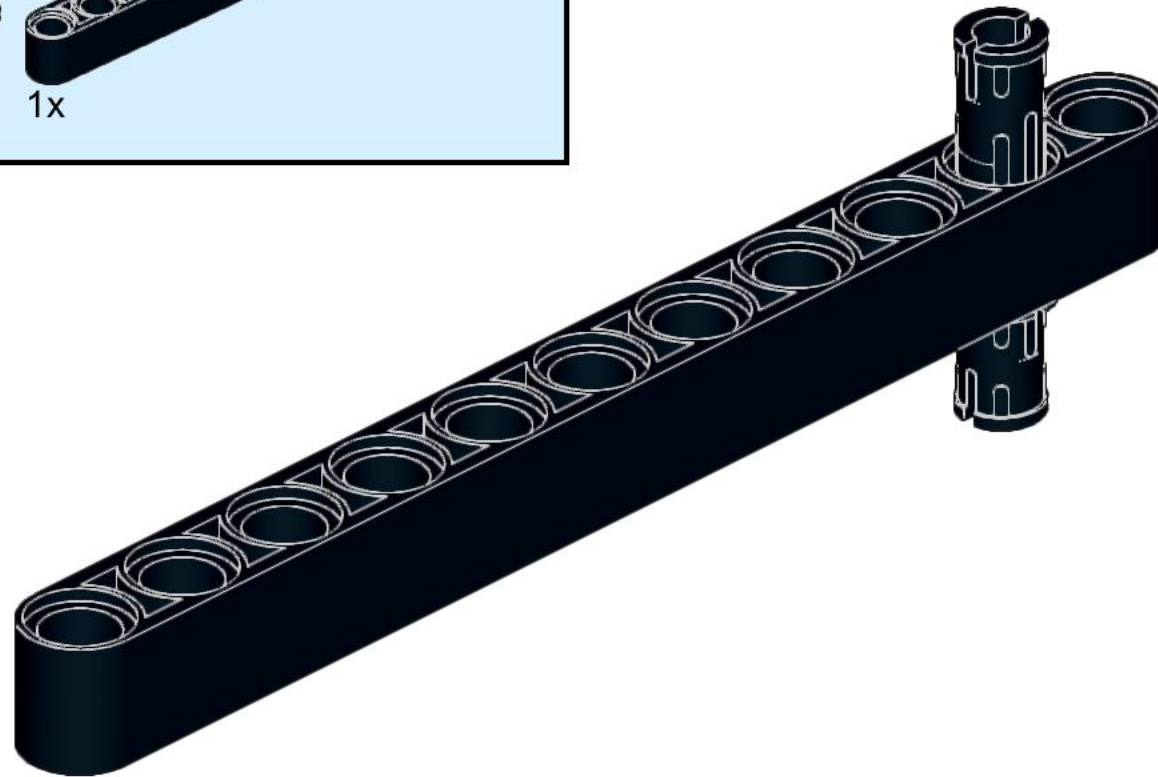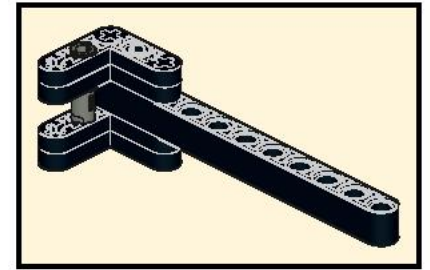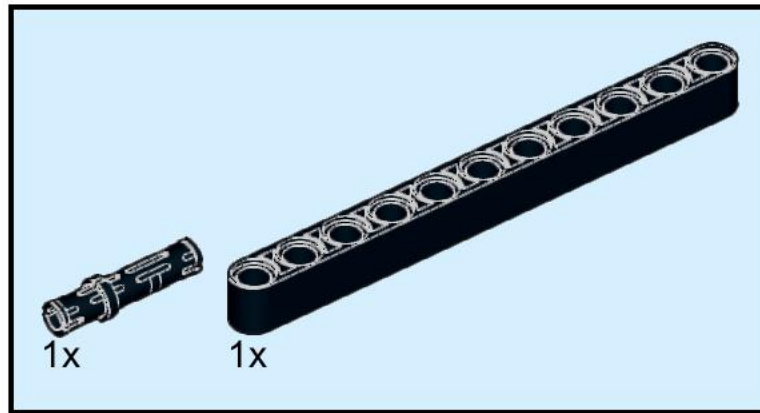


87

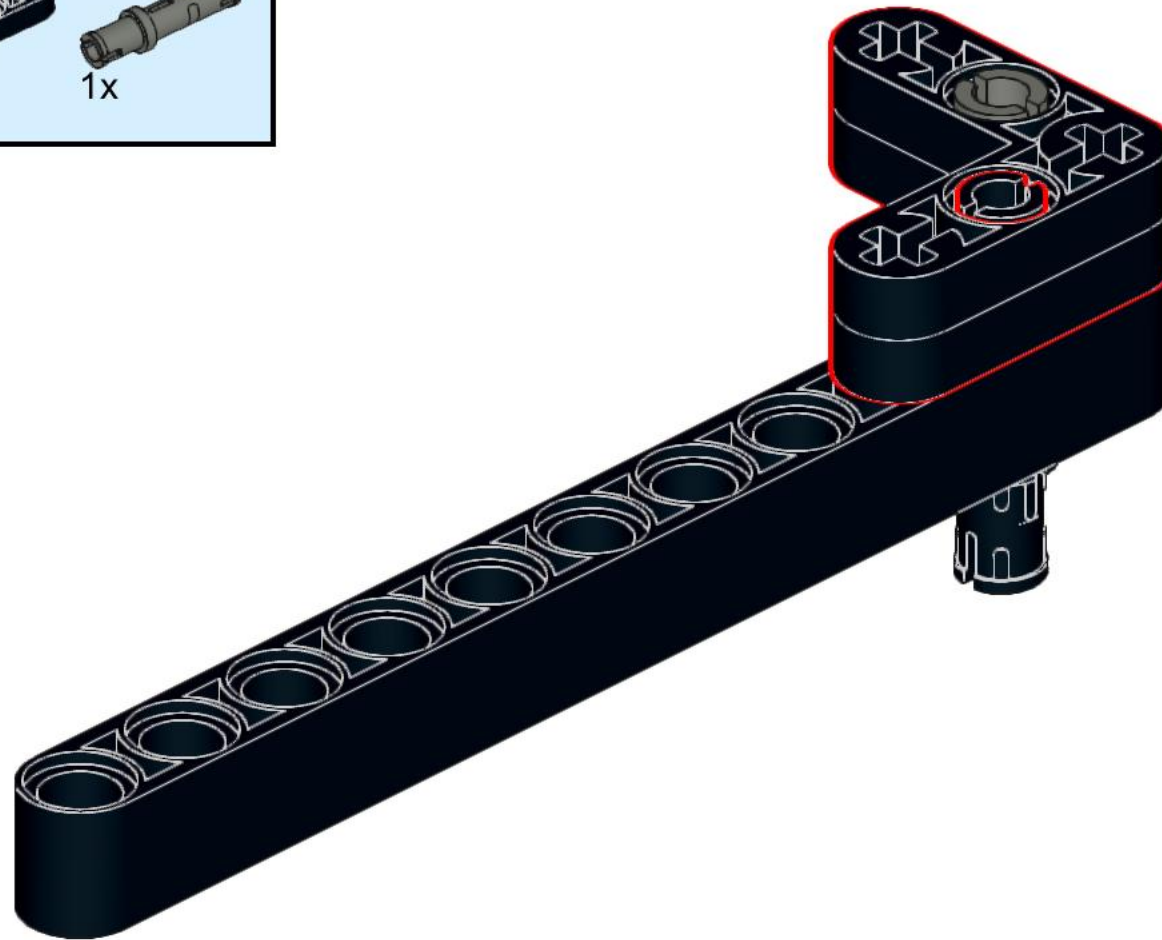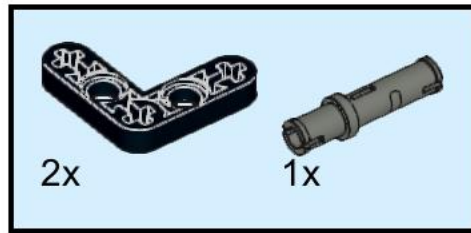



88

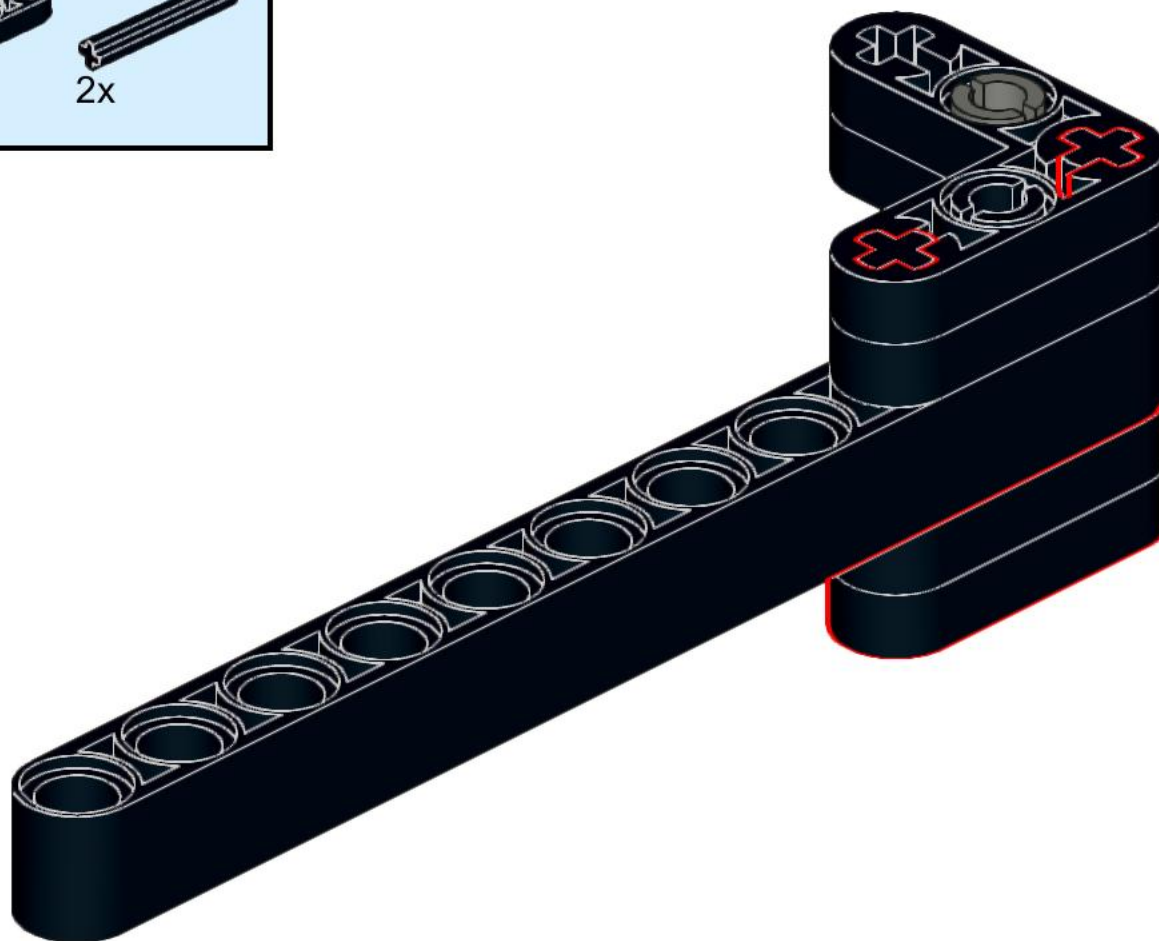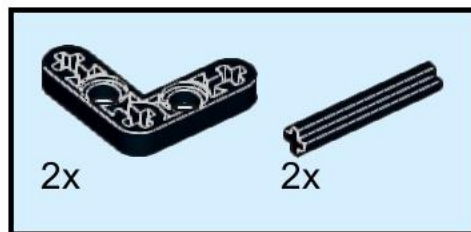



89

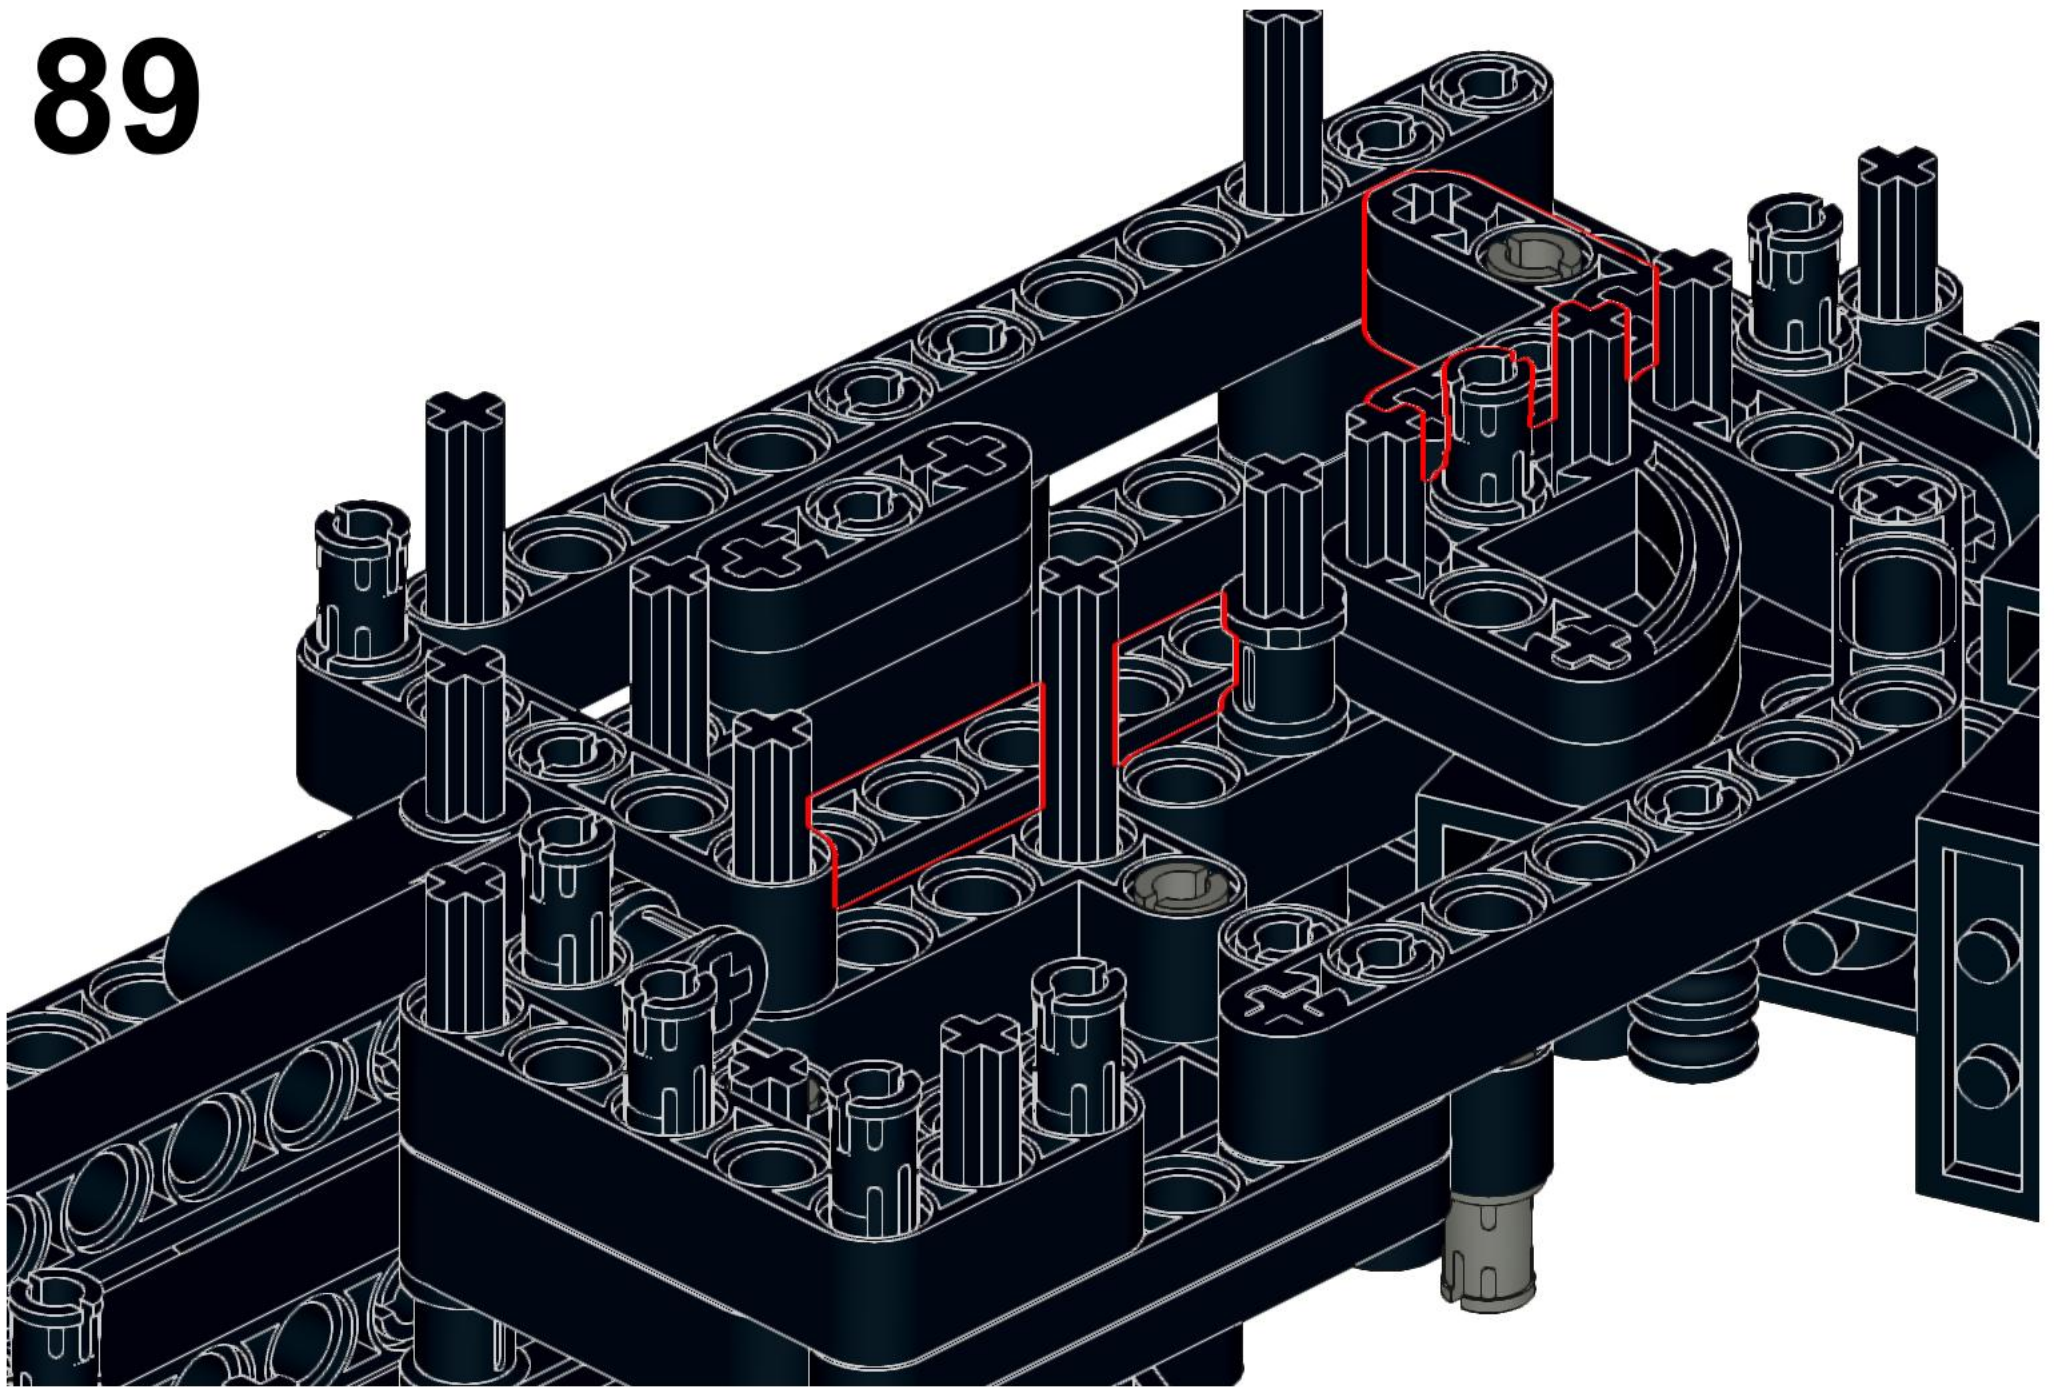



90

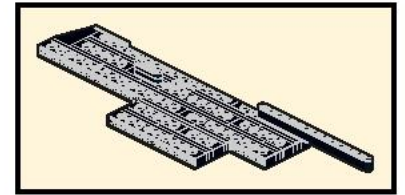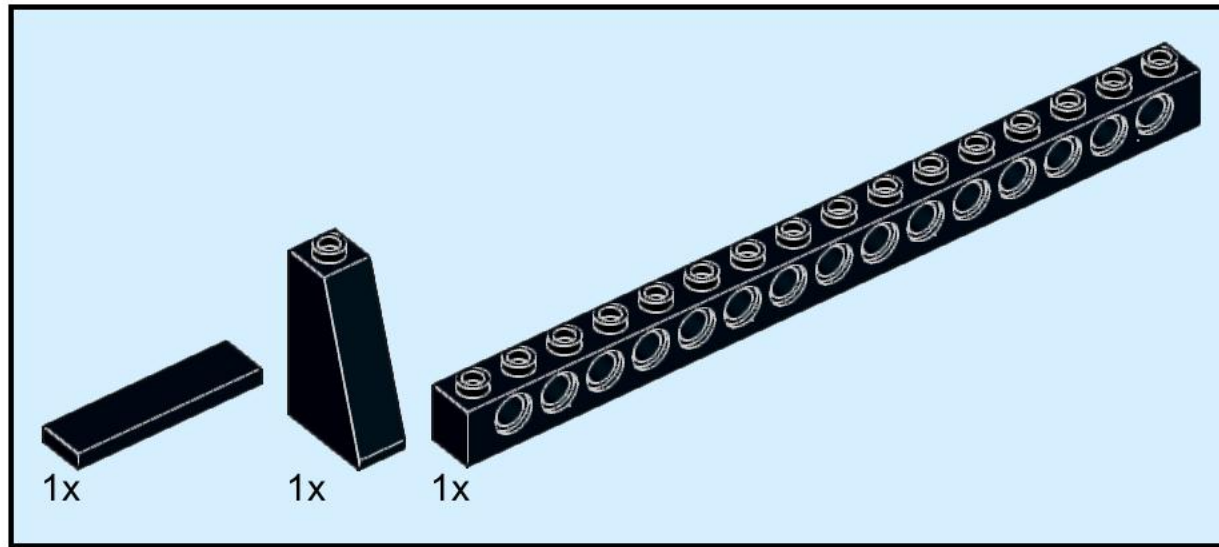



91

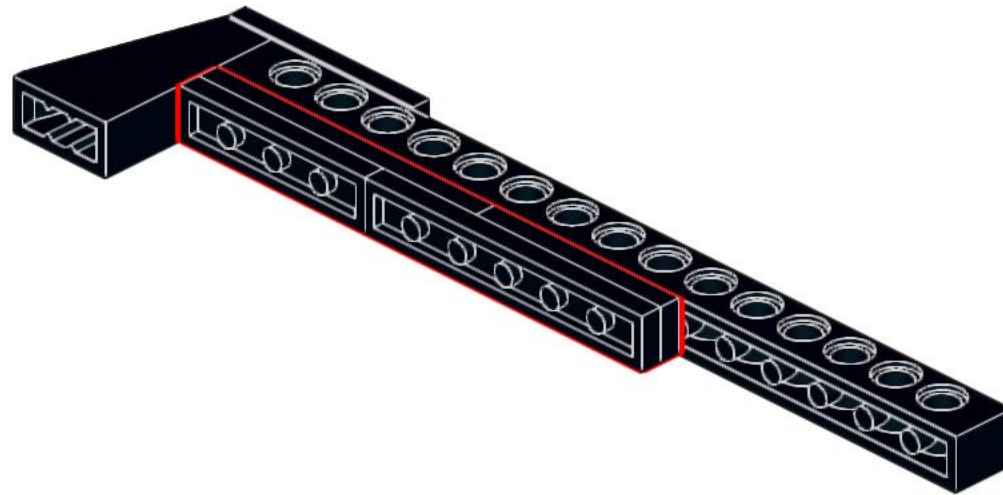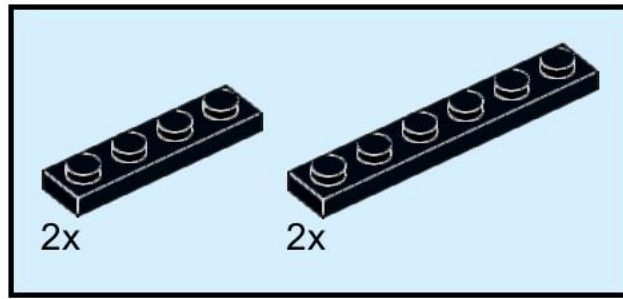



92

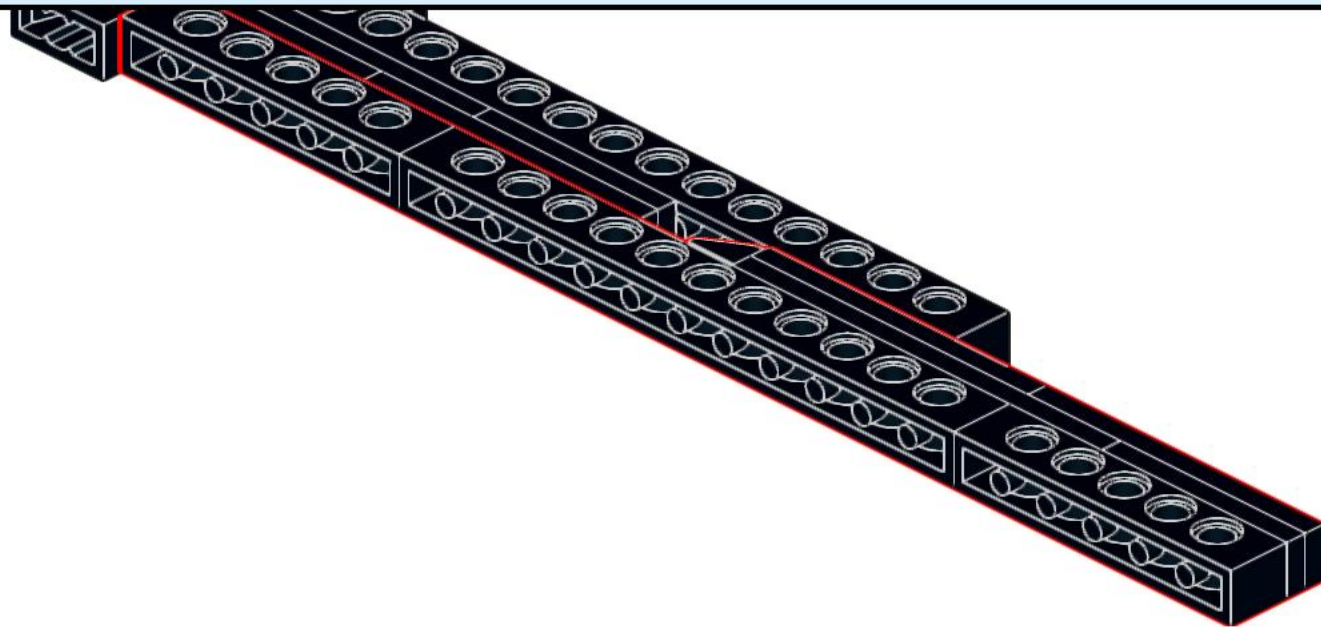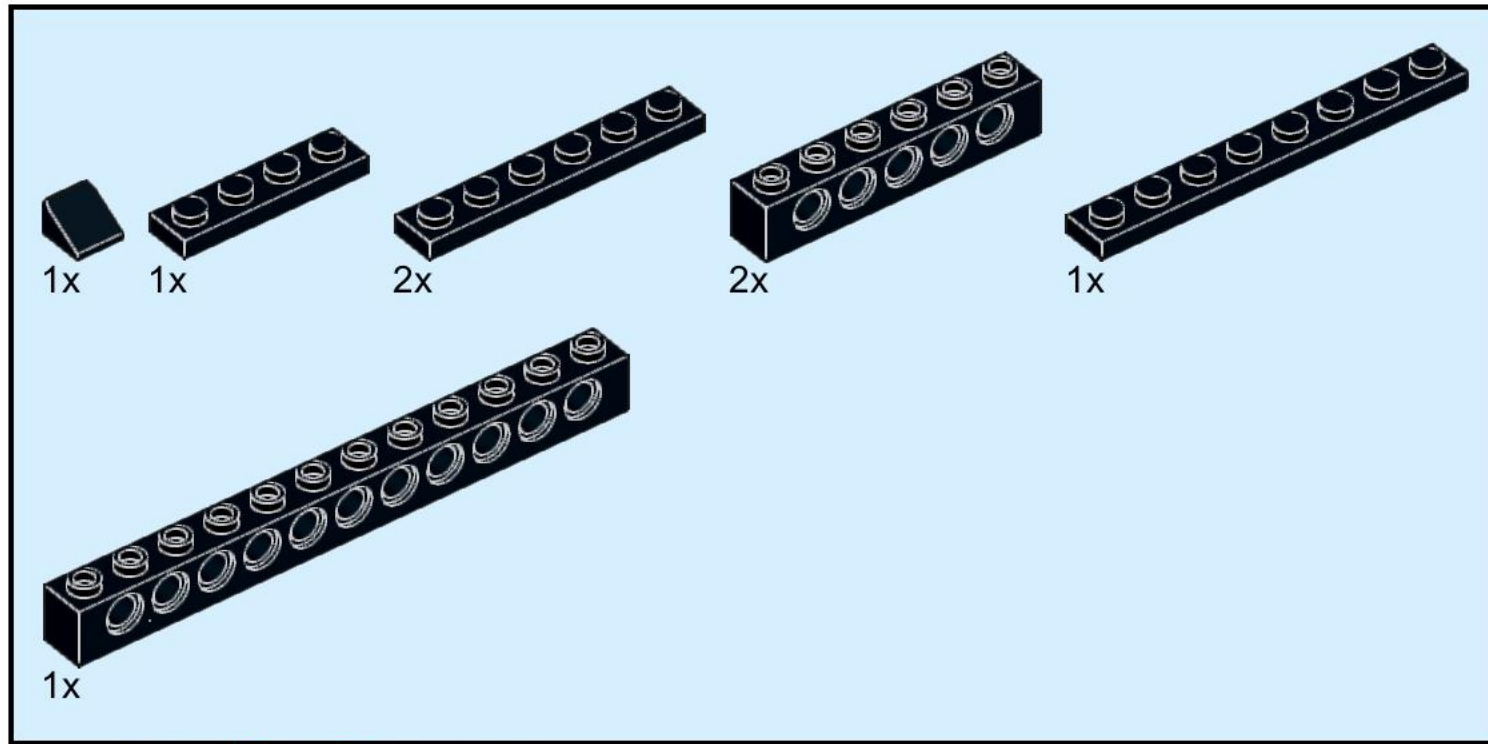



93

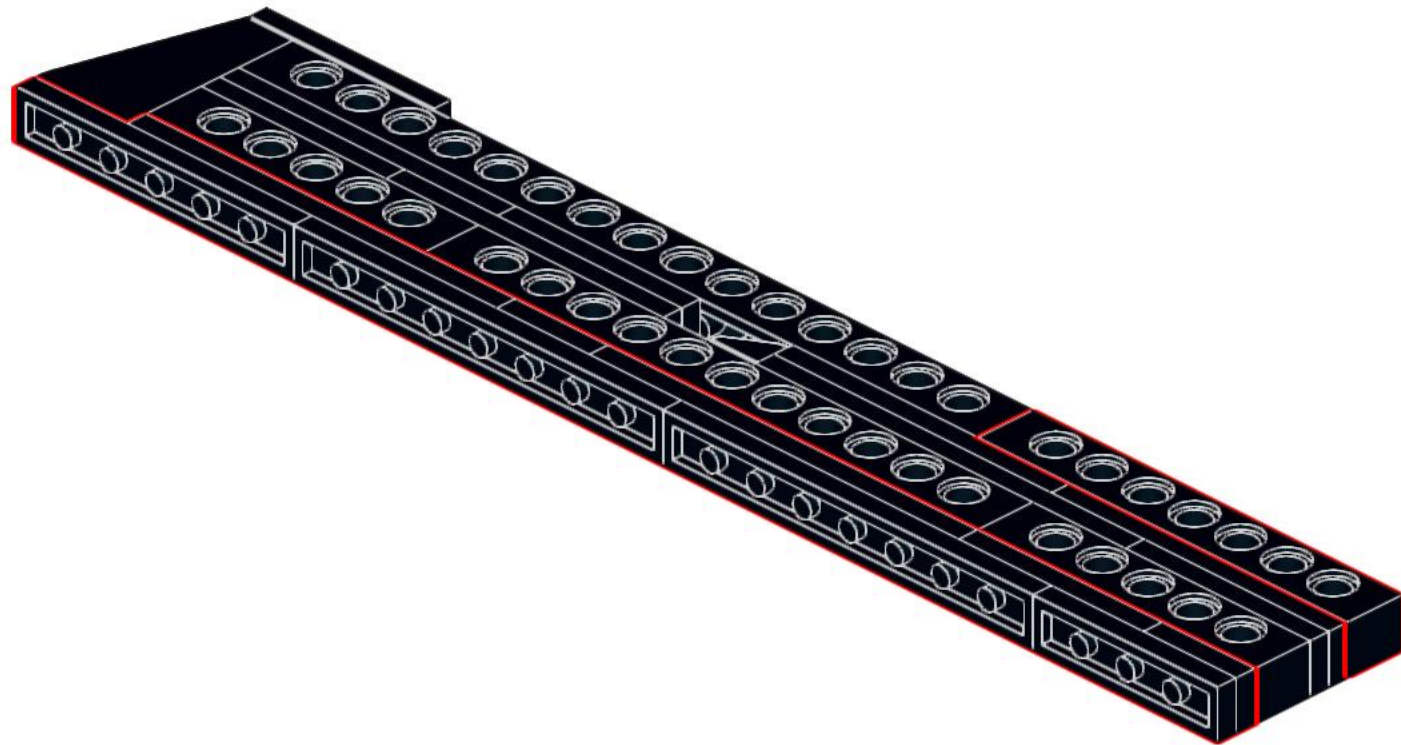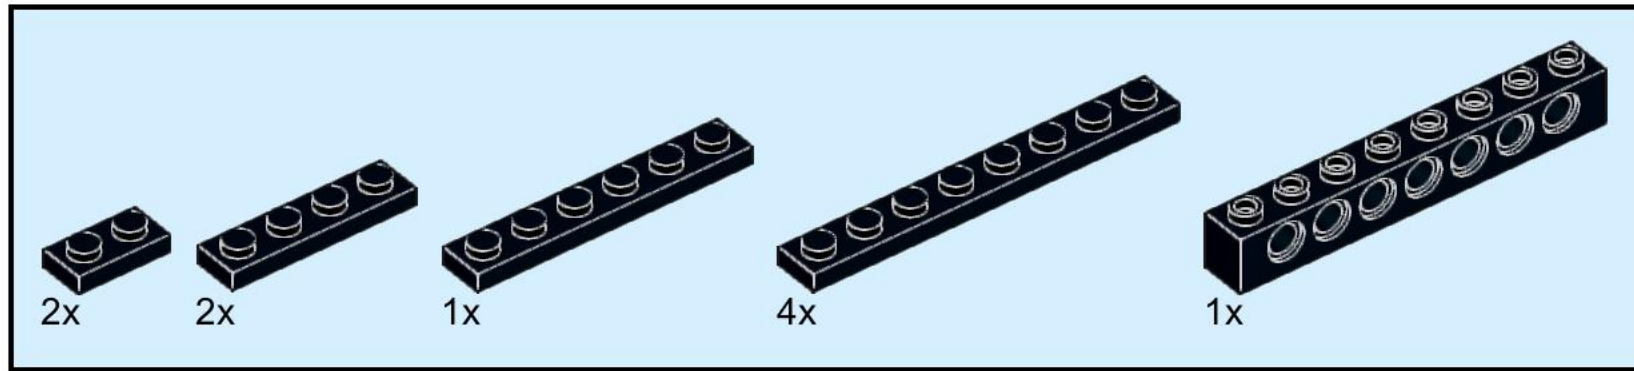



94

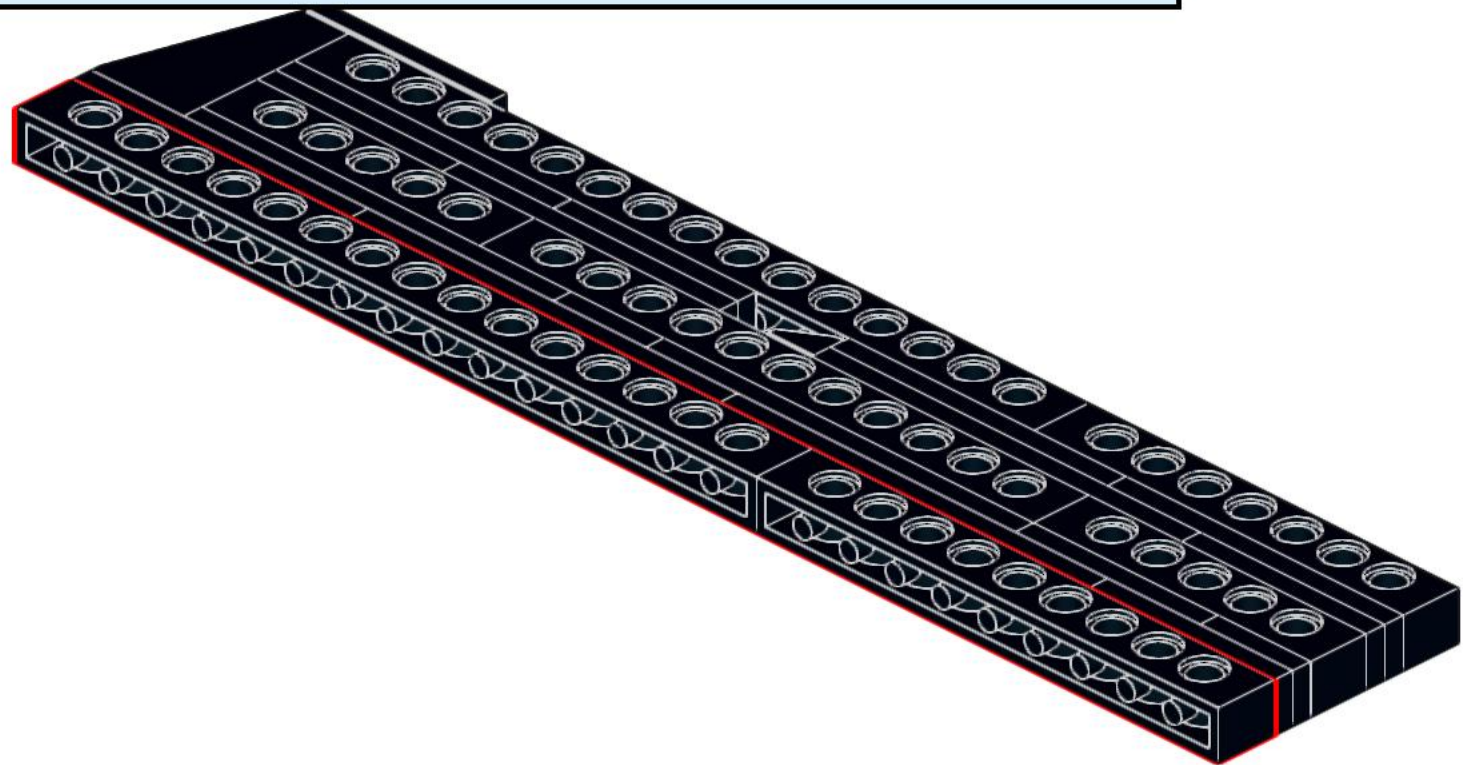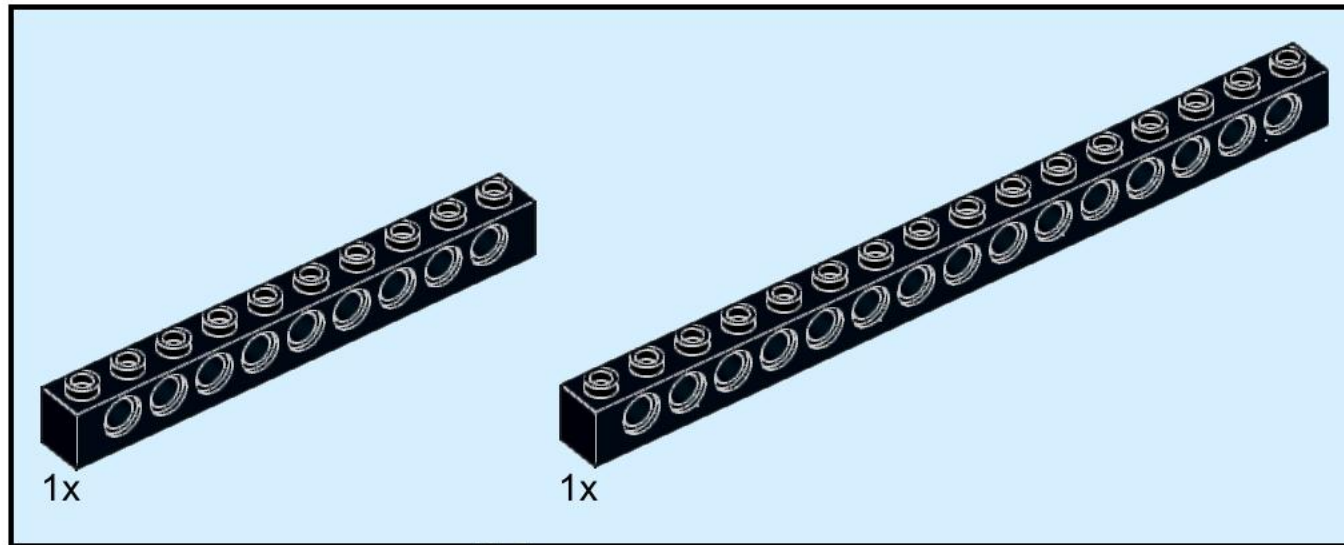



95

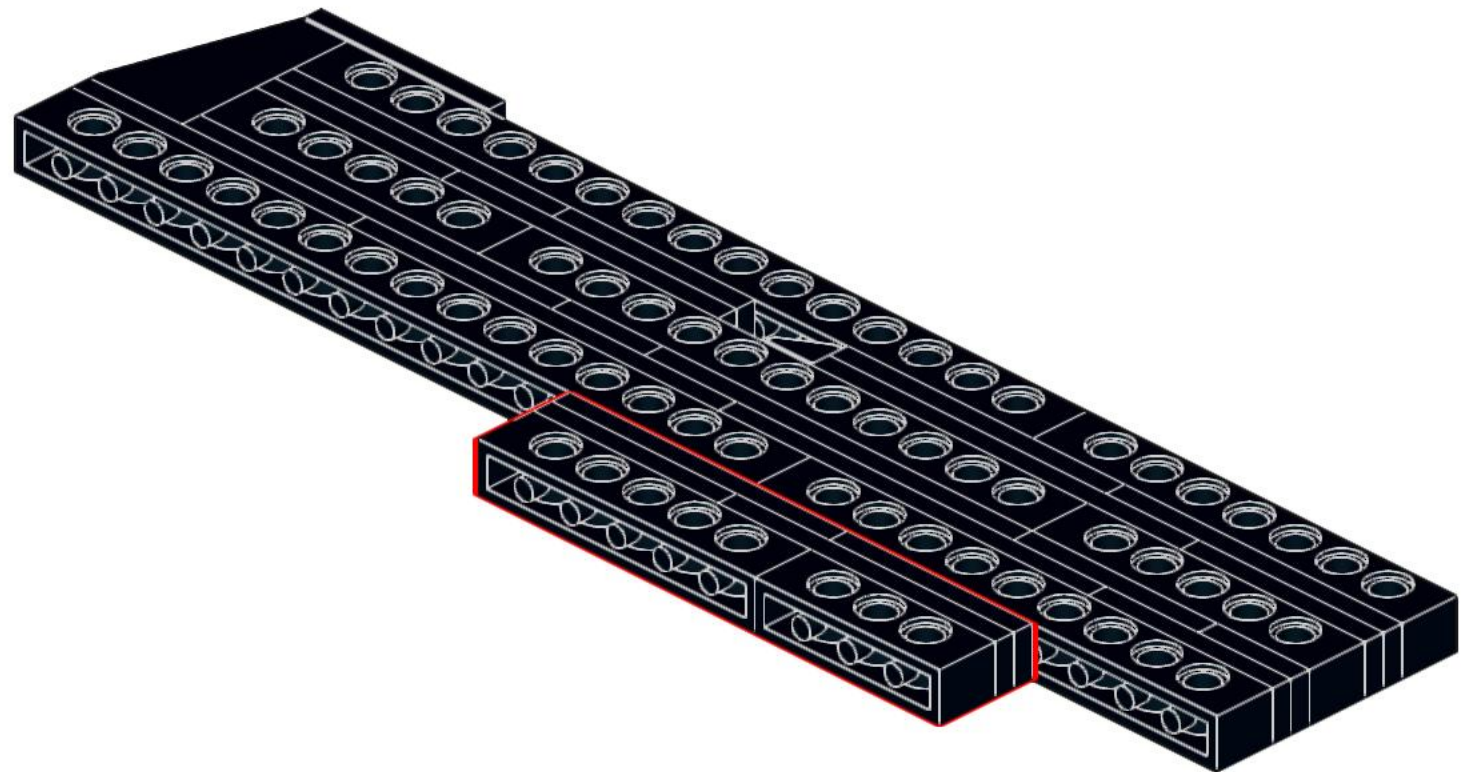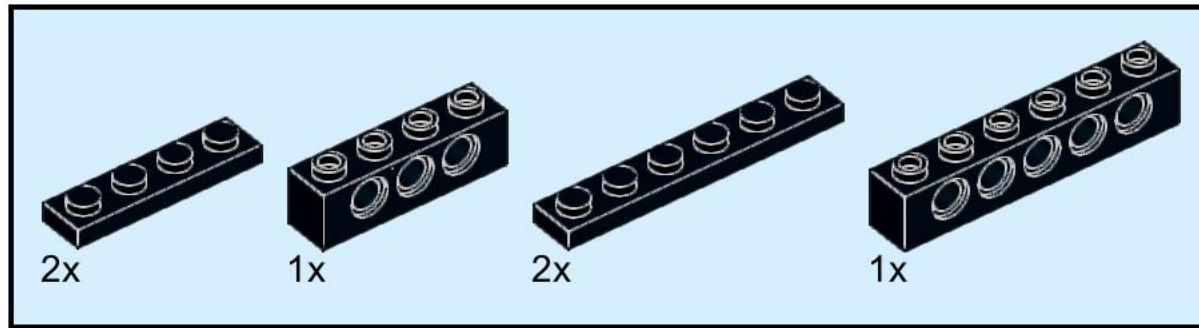



96

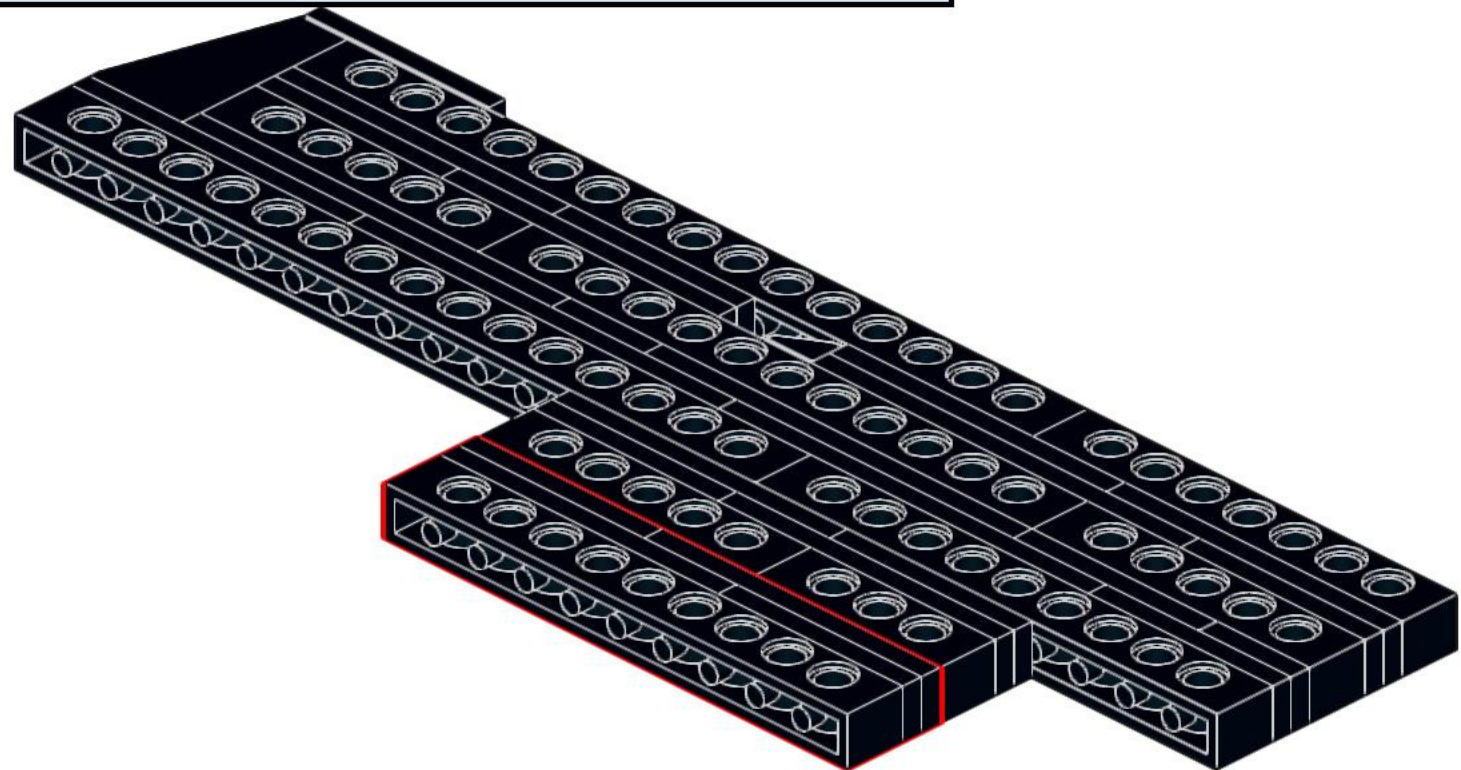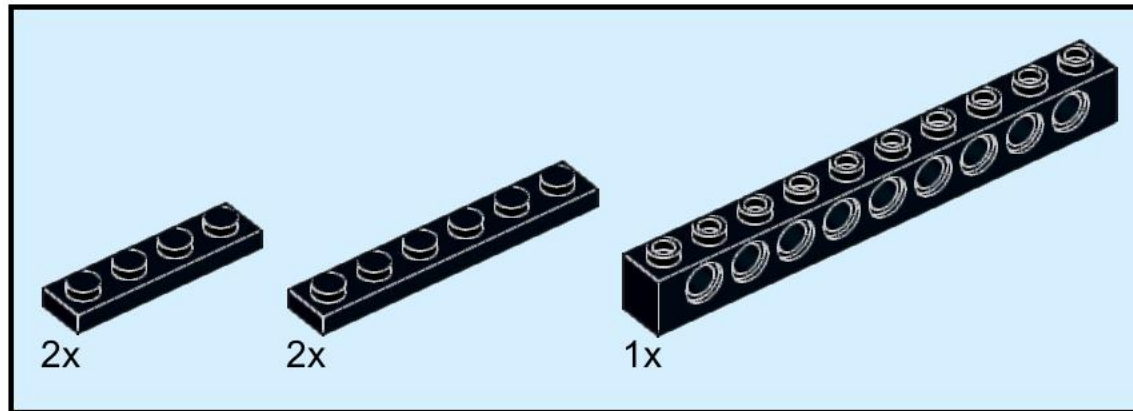


97

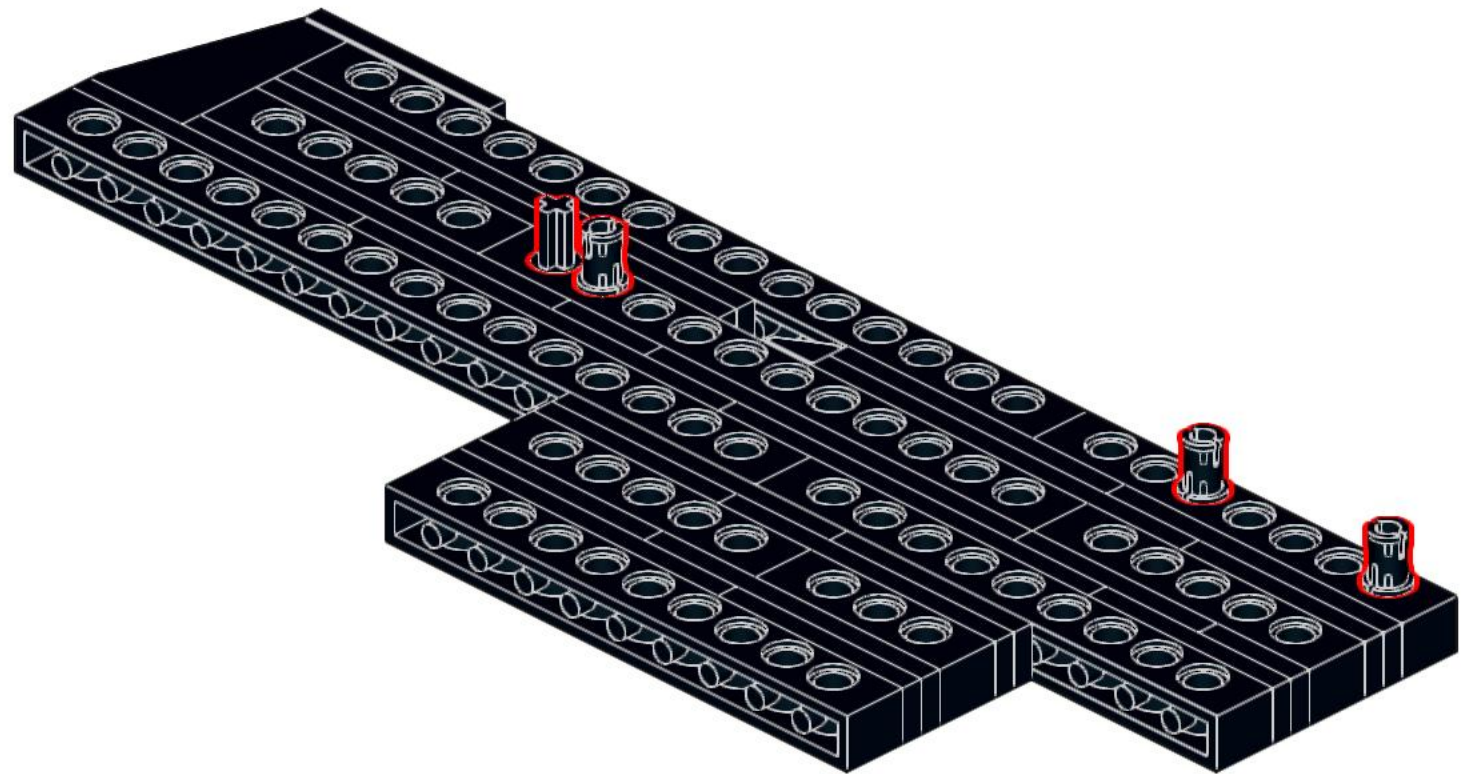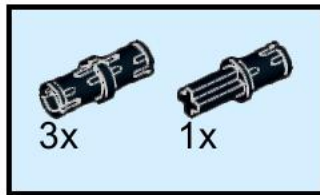



98

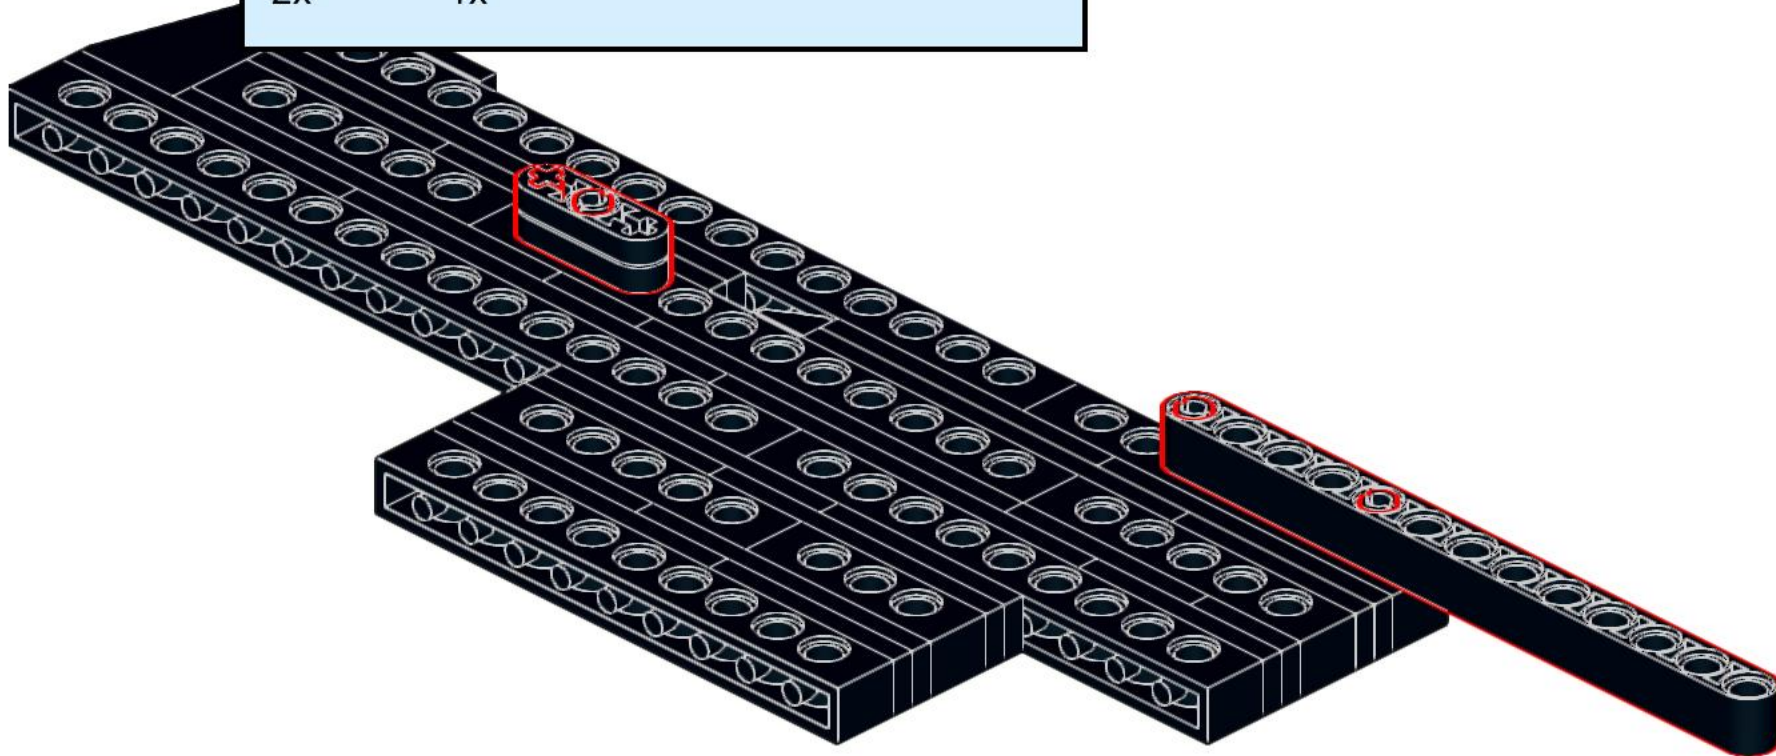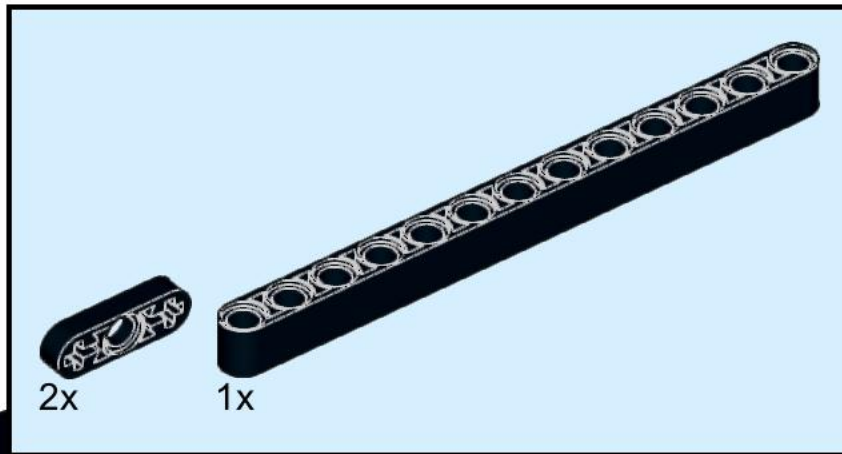



99

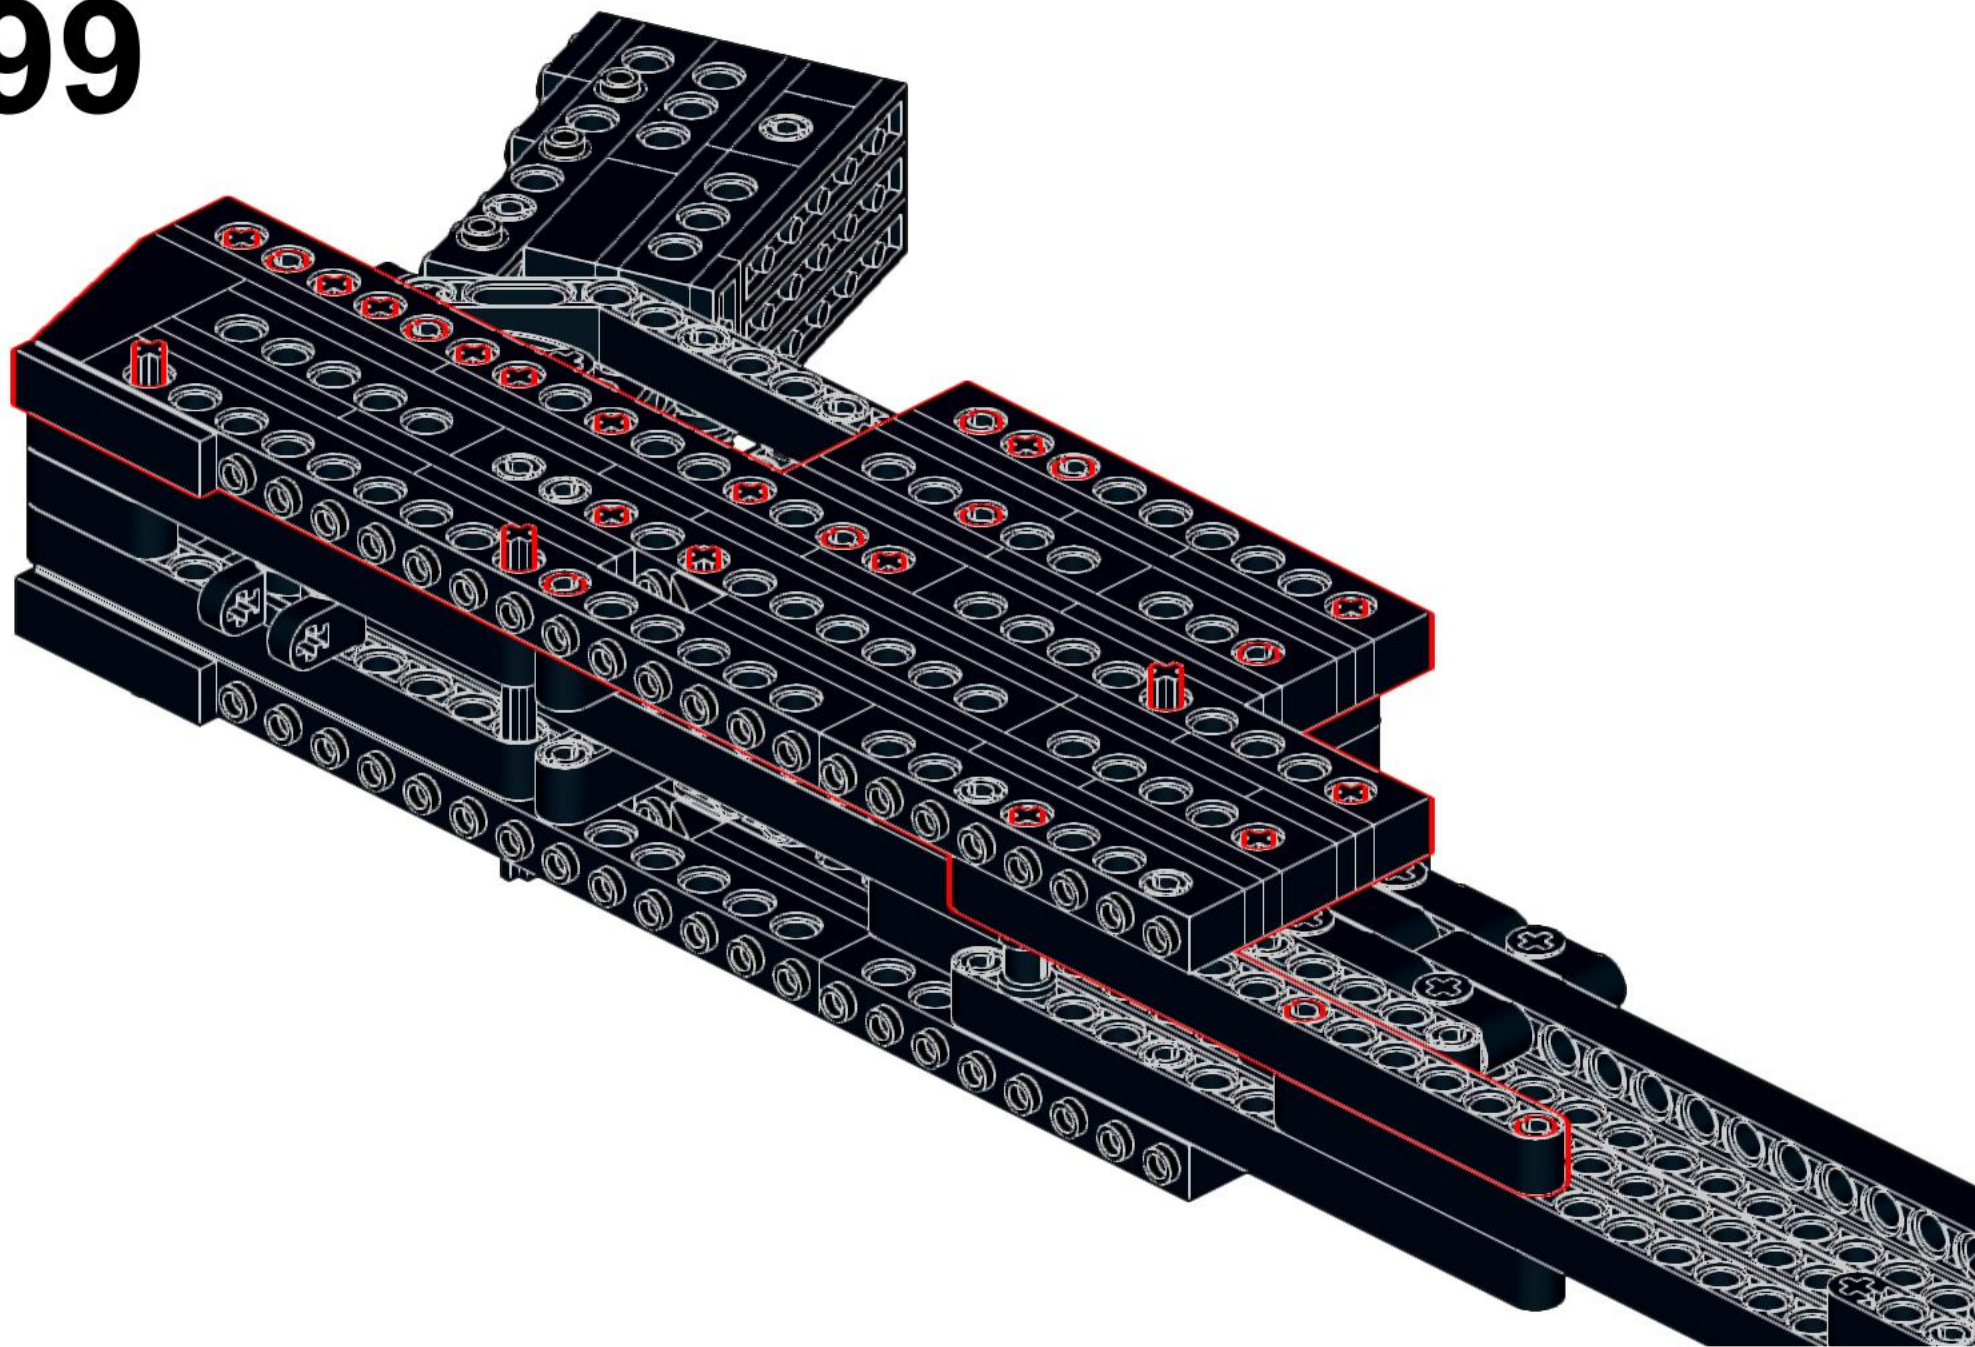



100

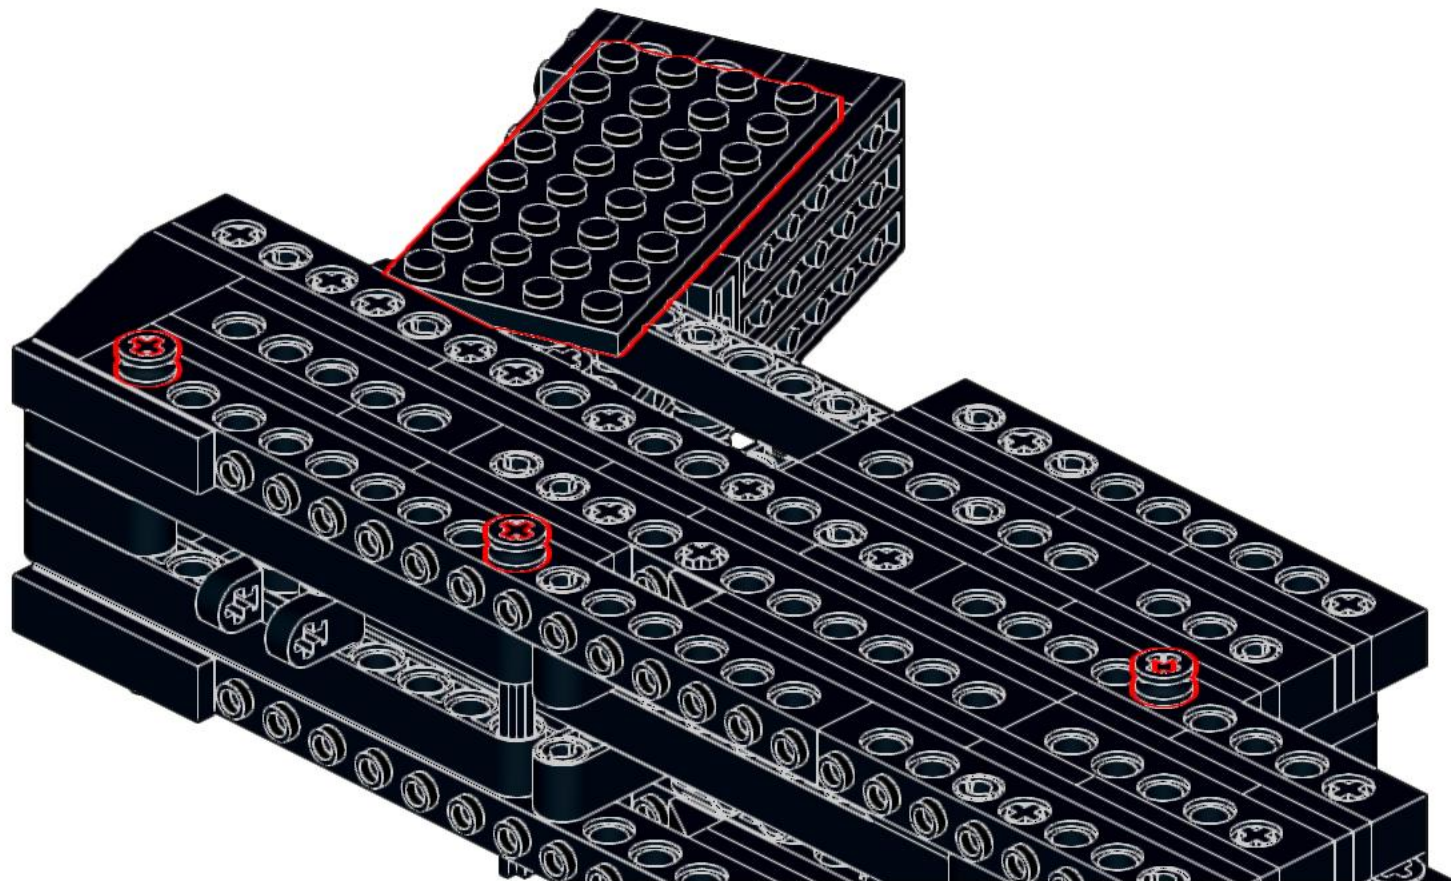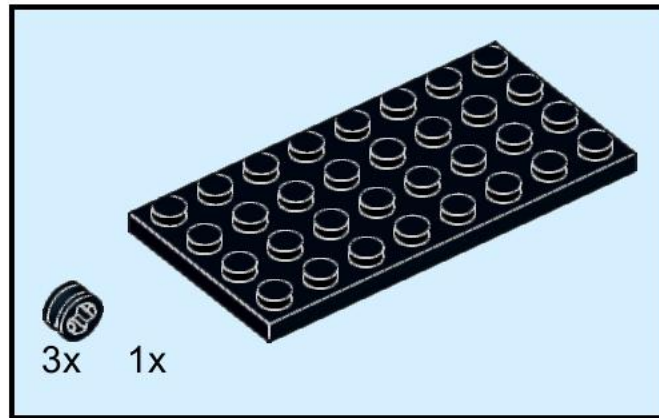



101

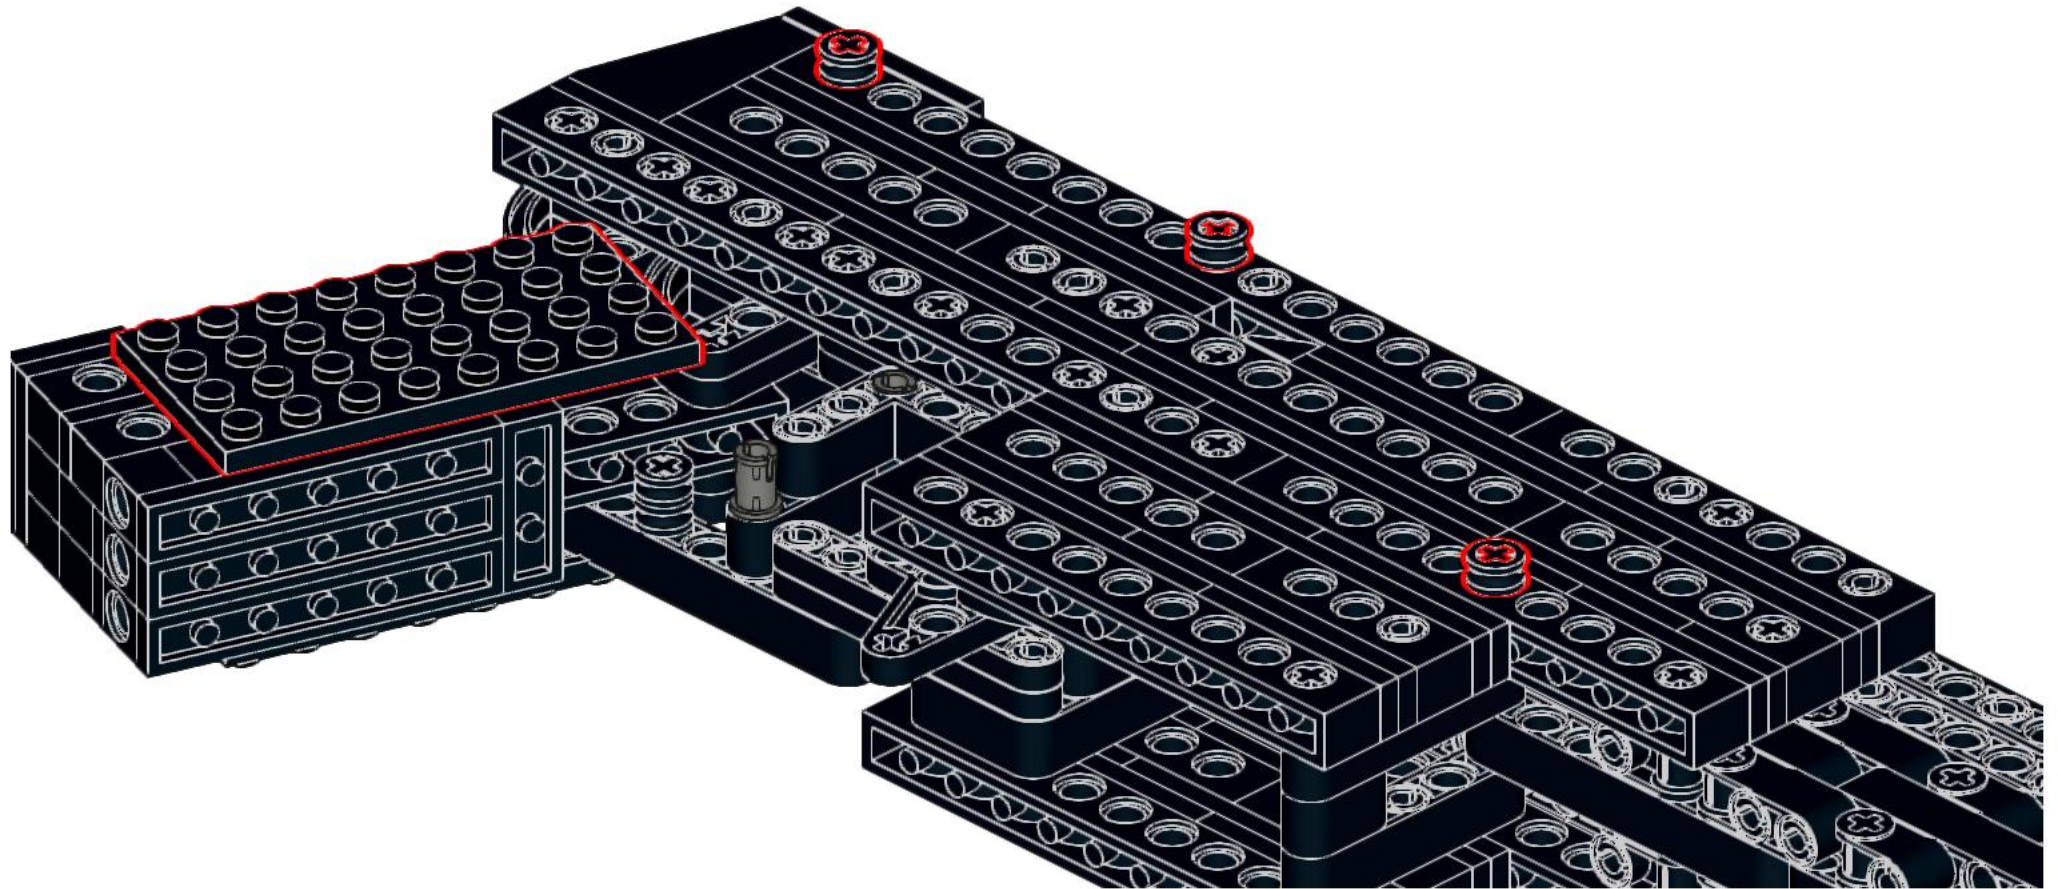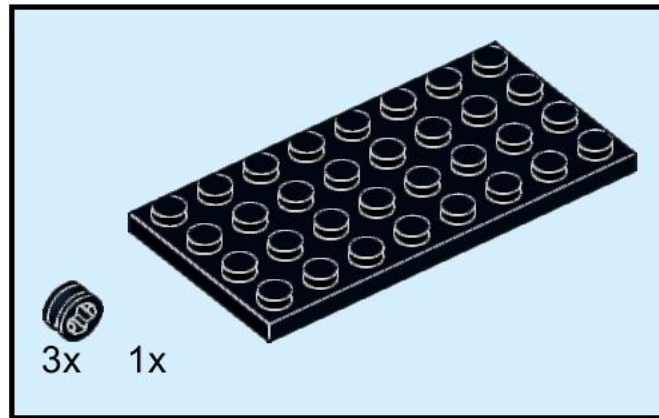


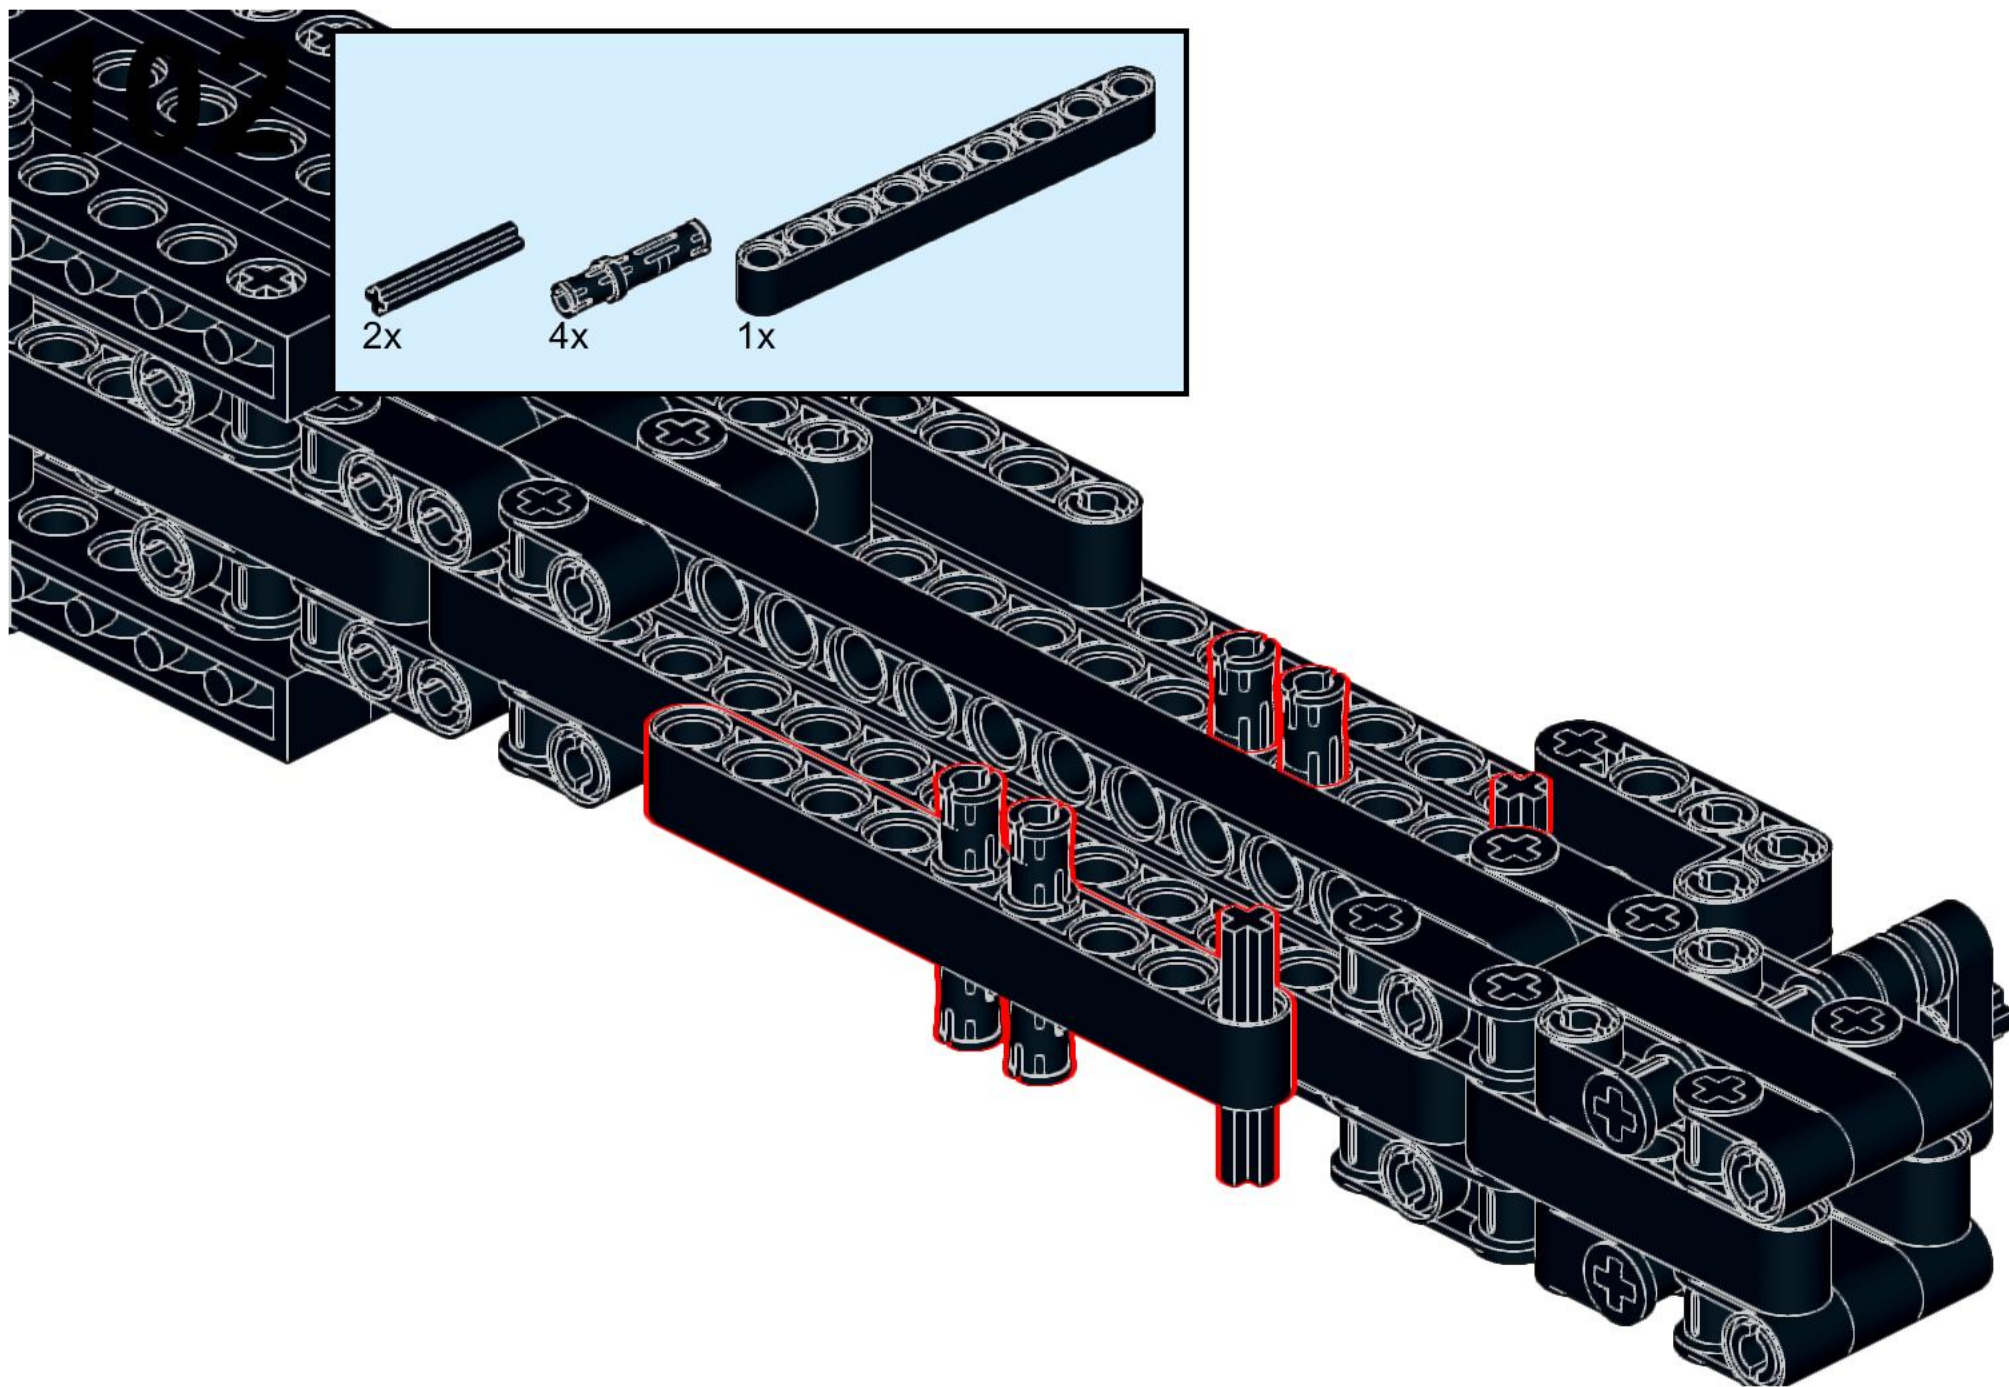

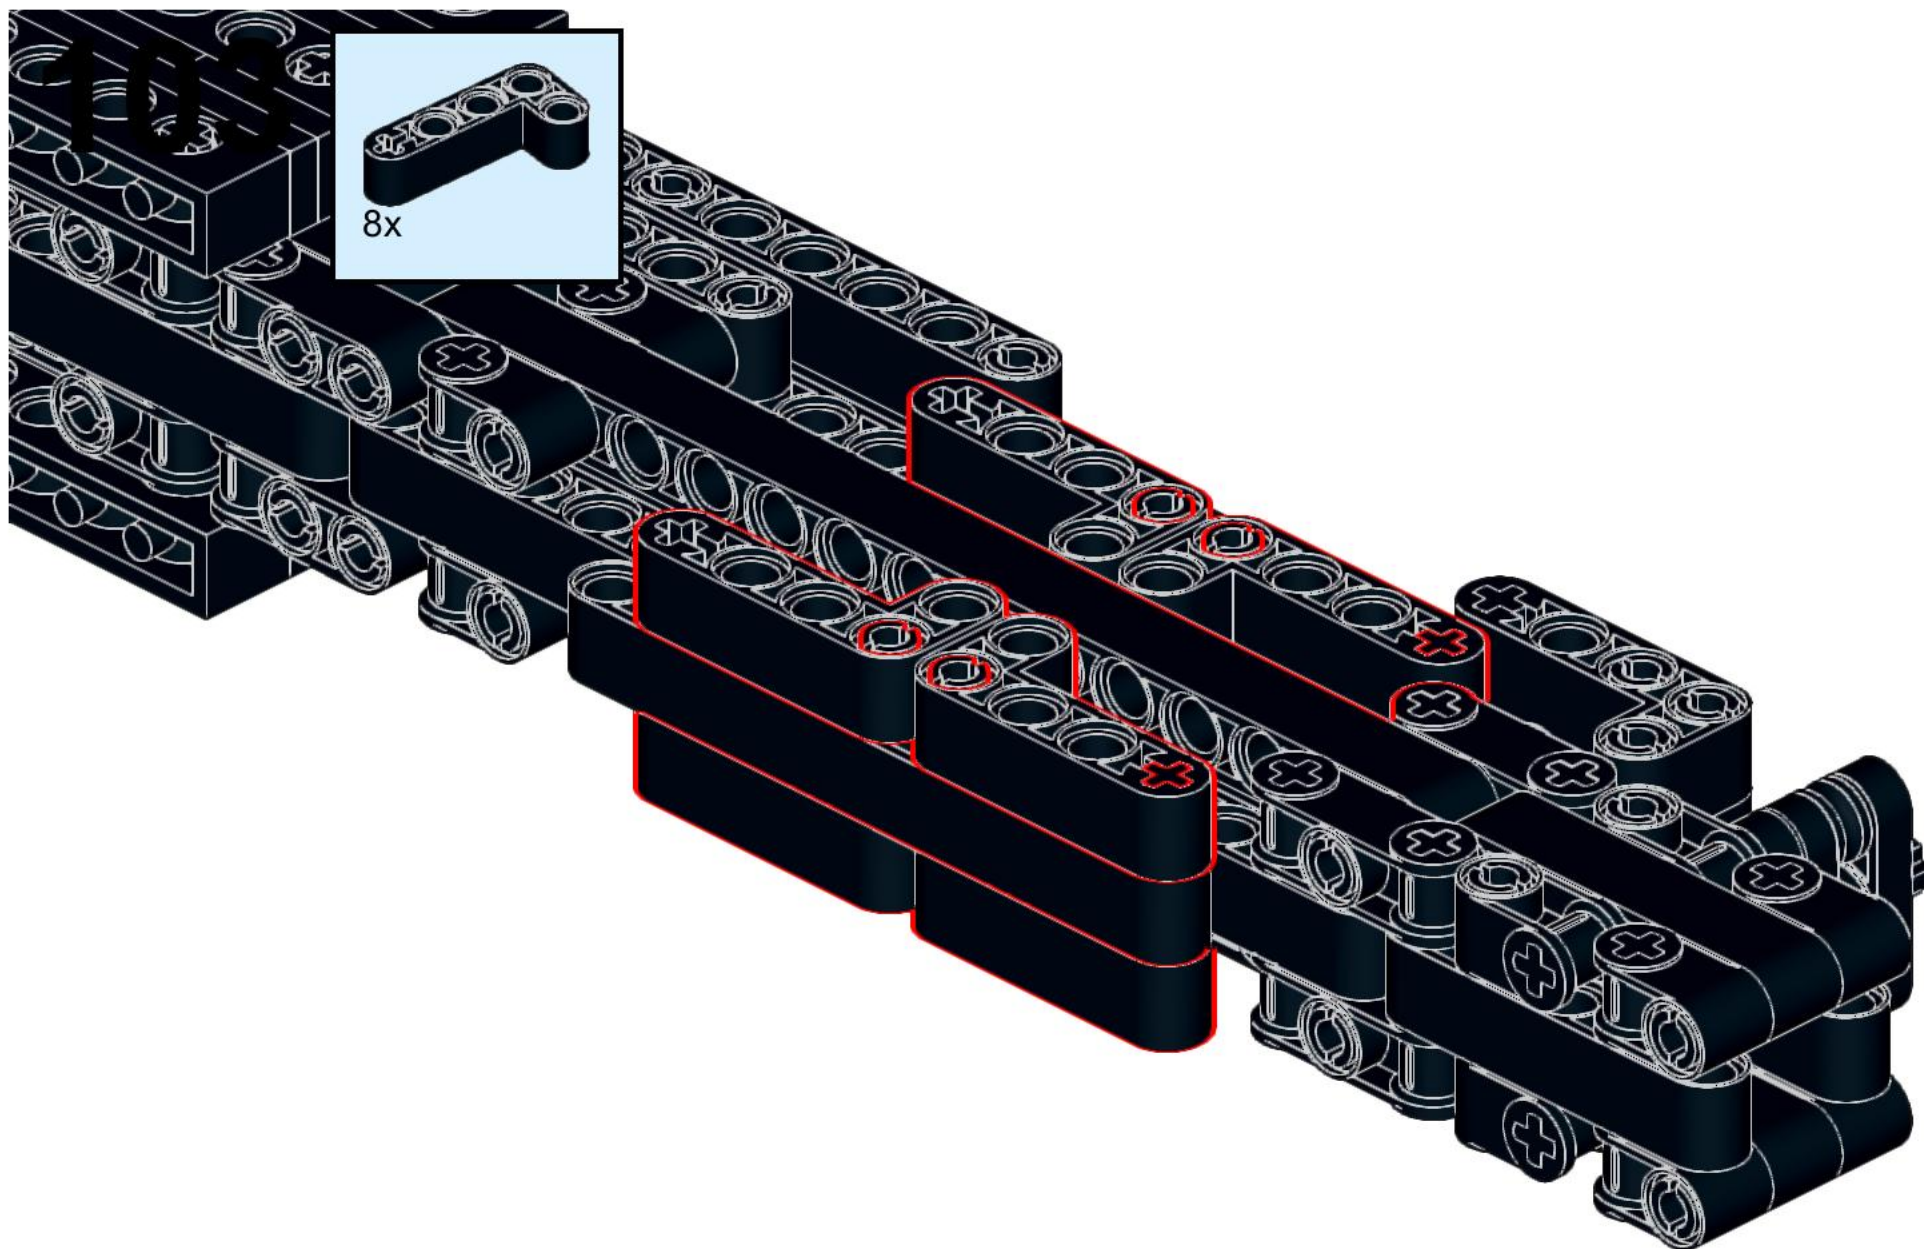


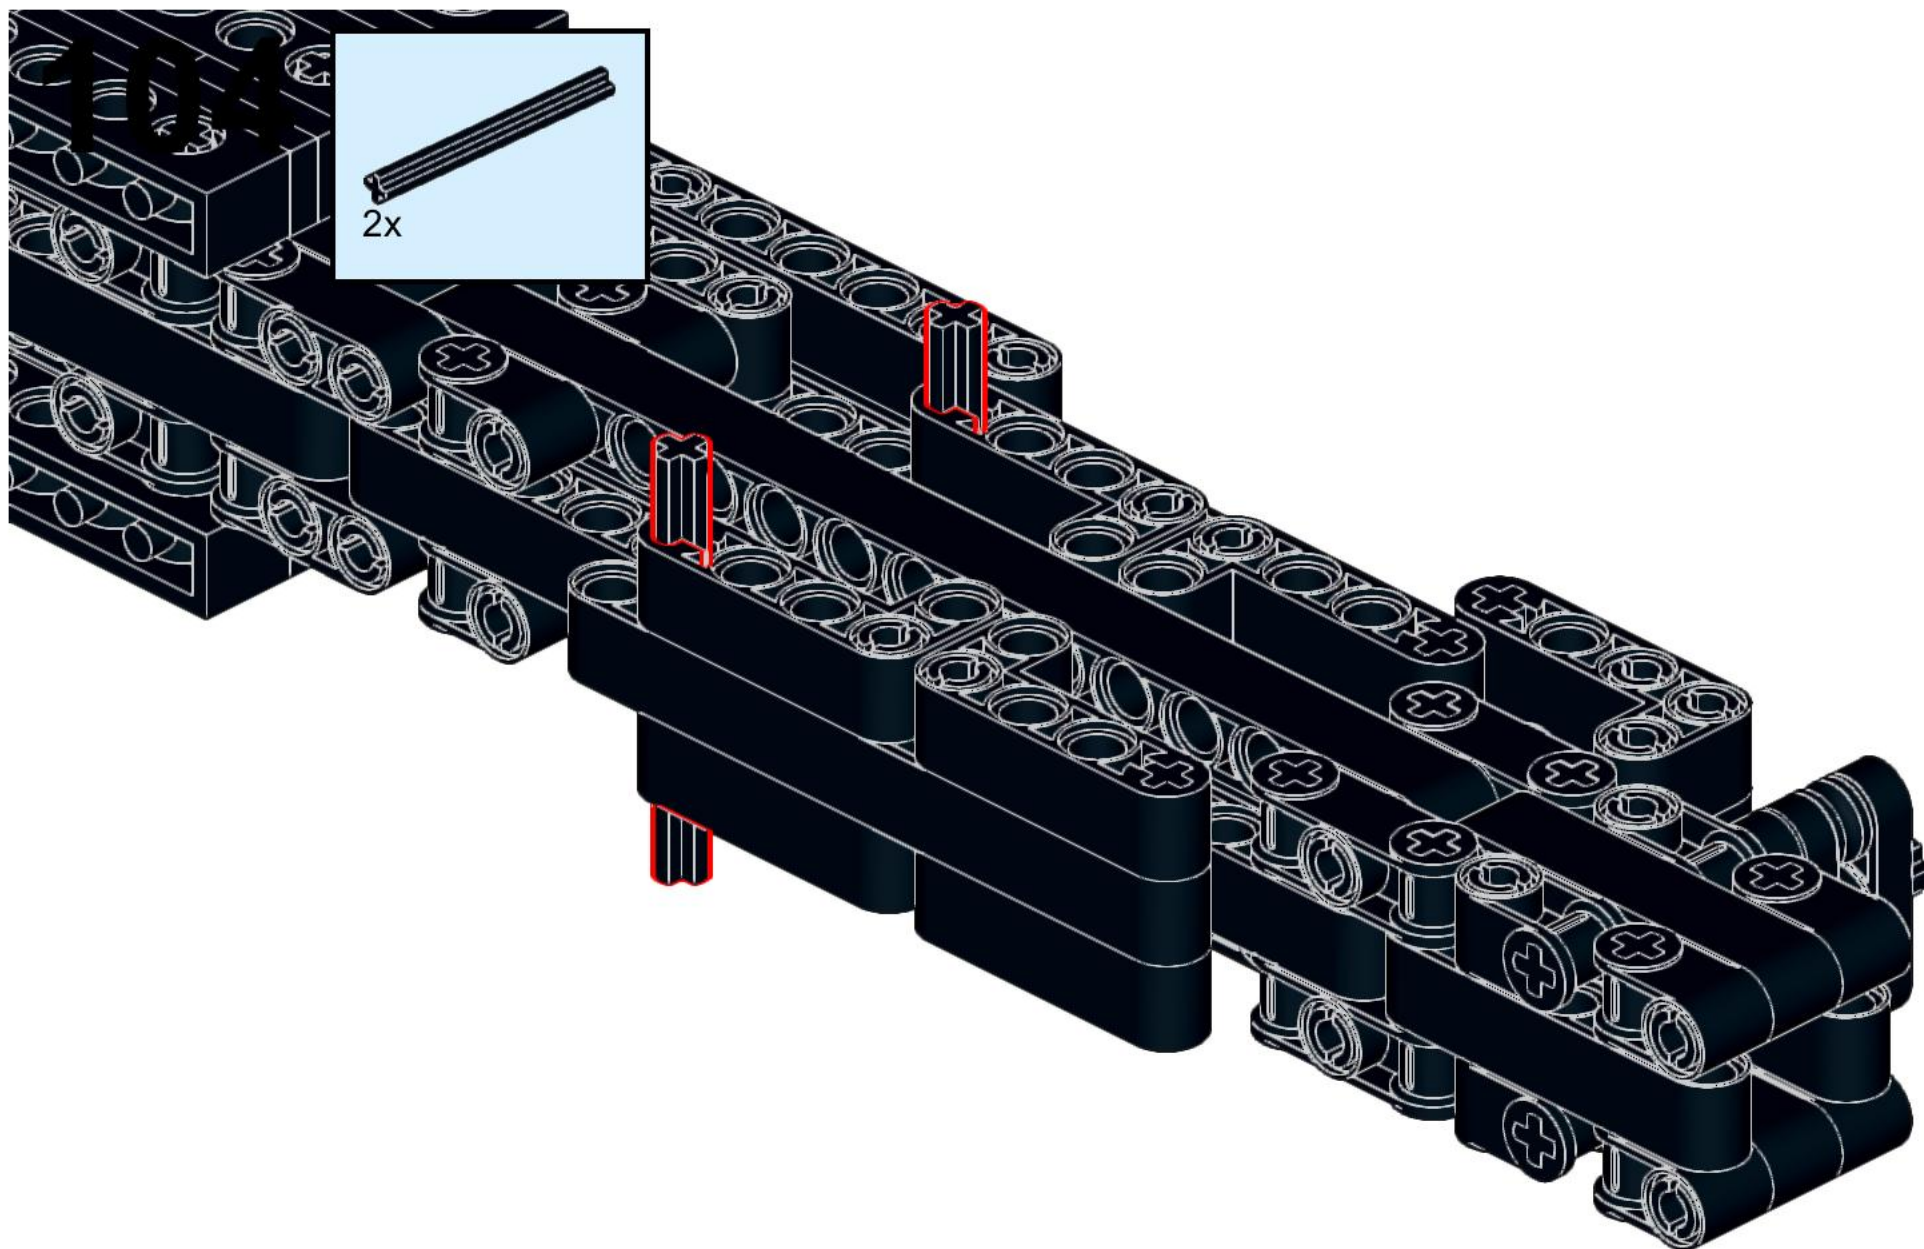


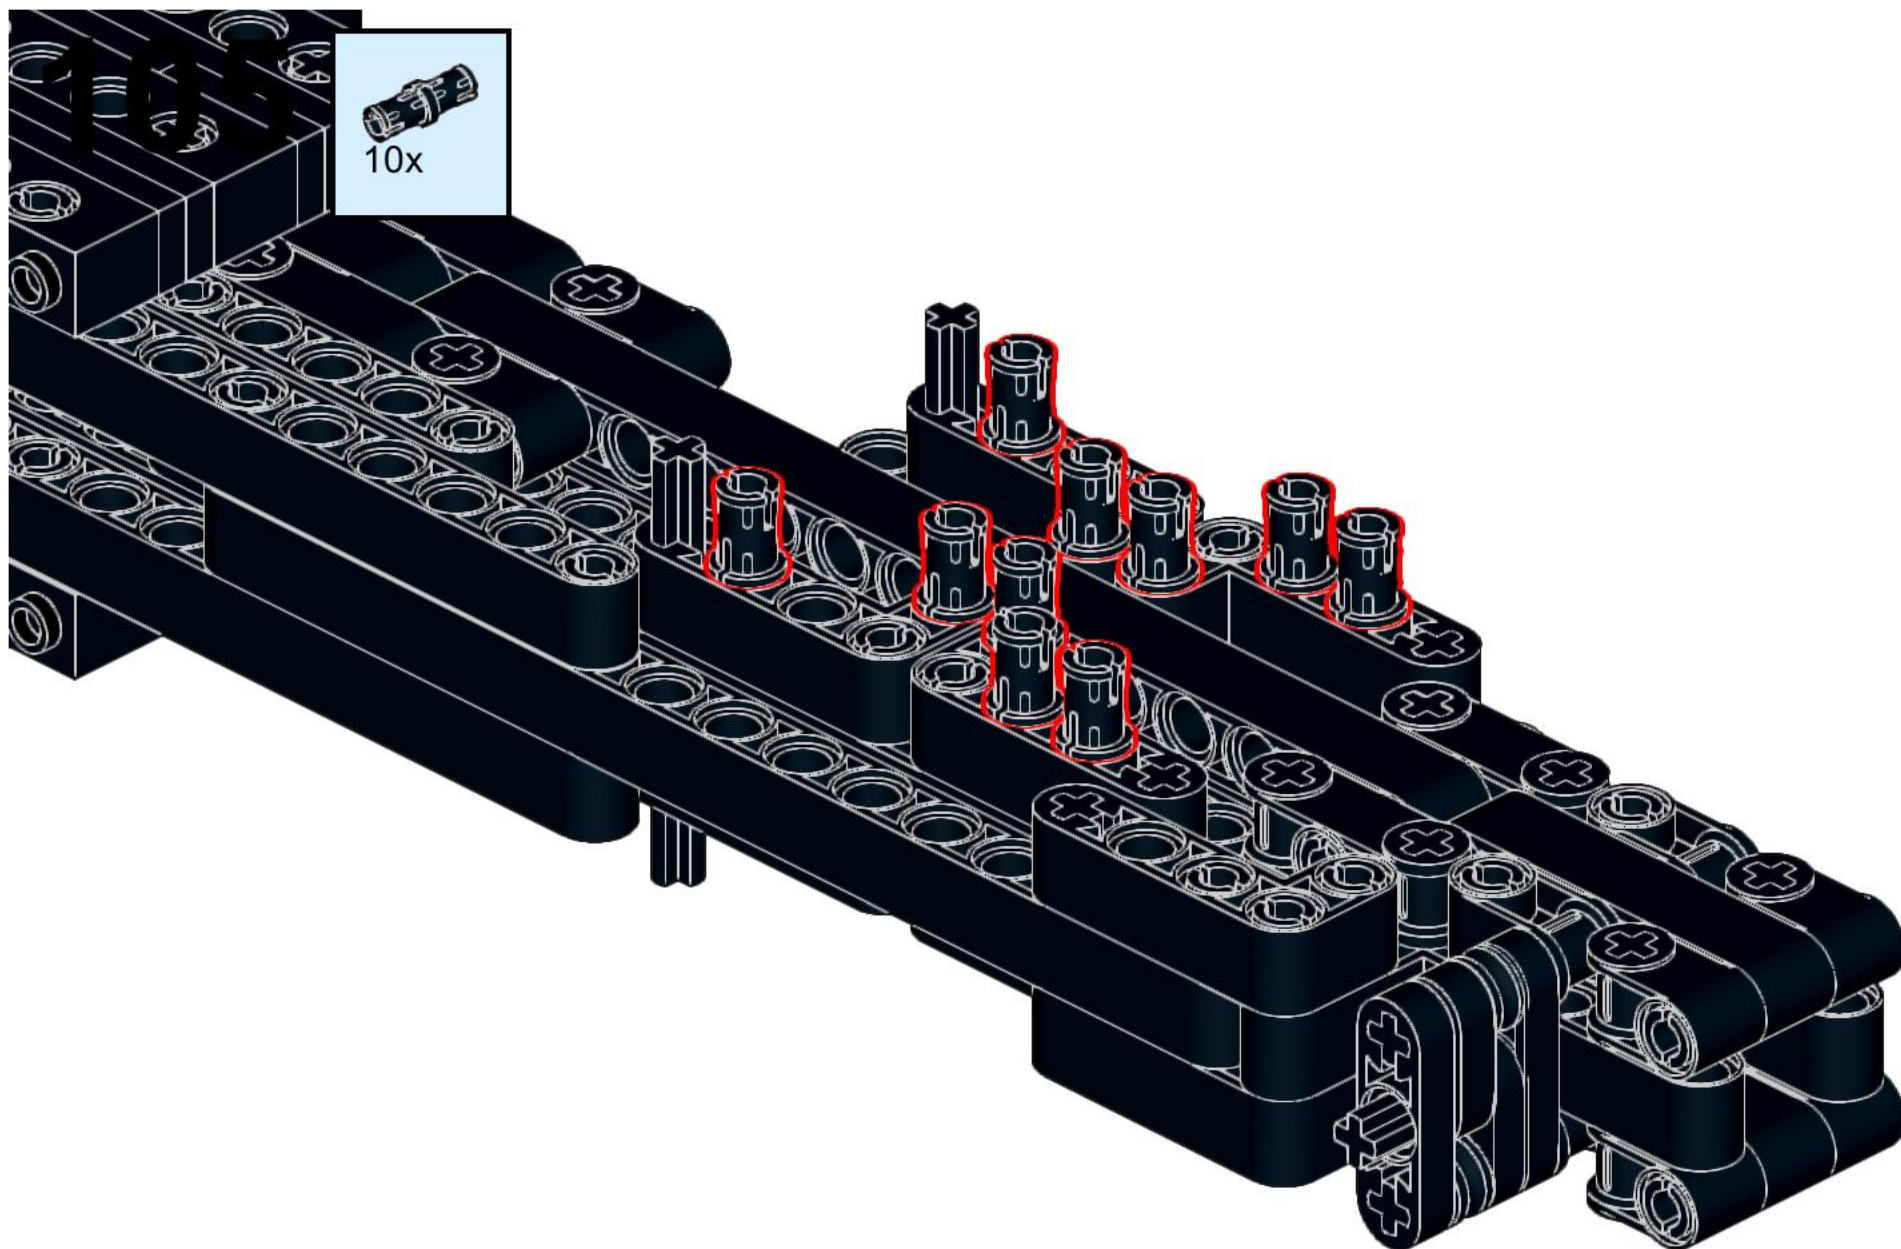


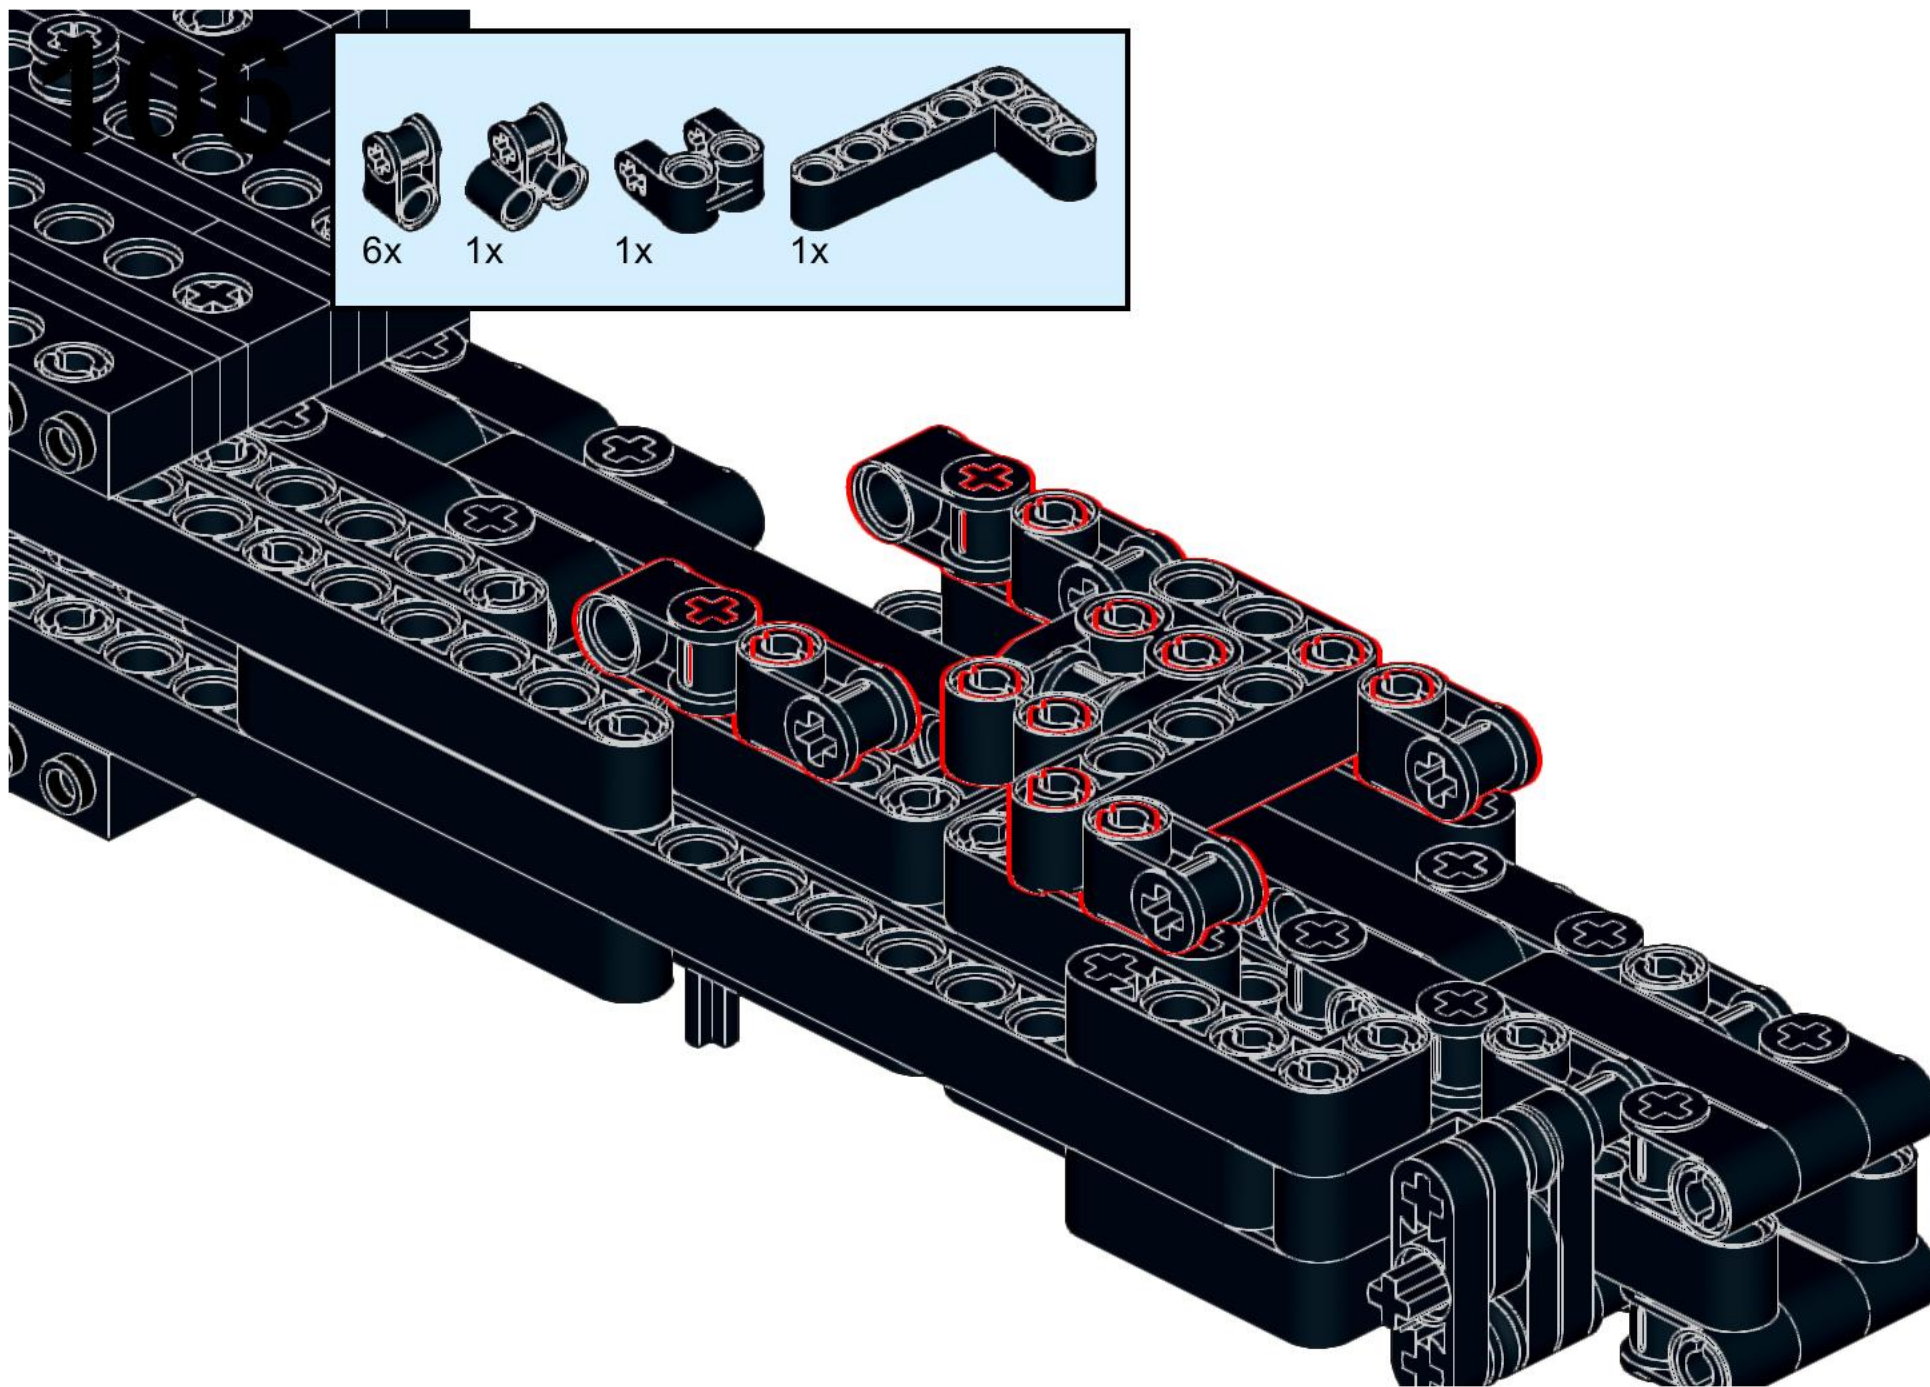


107

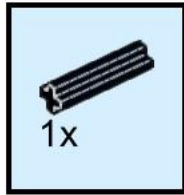



108

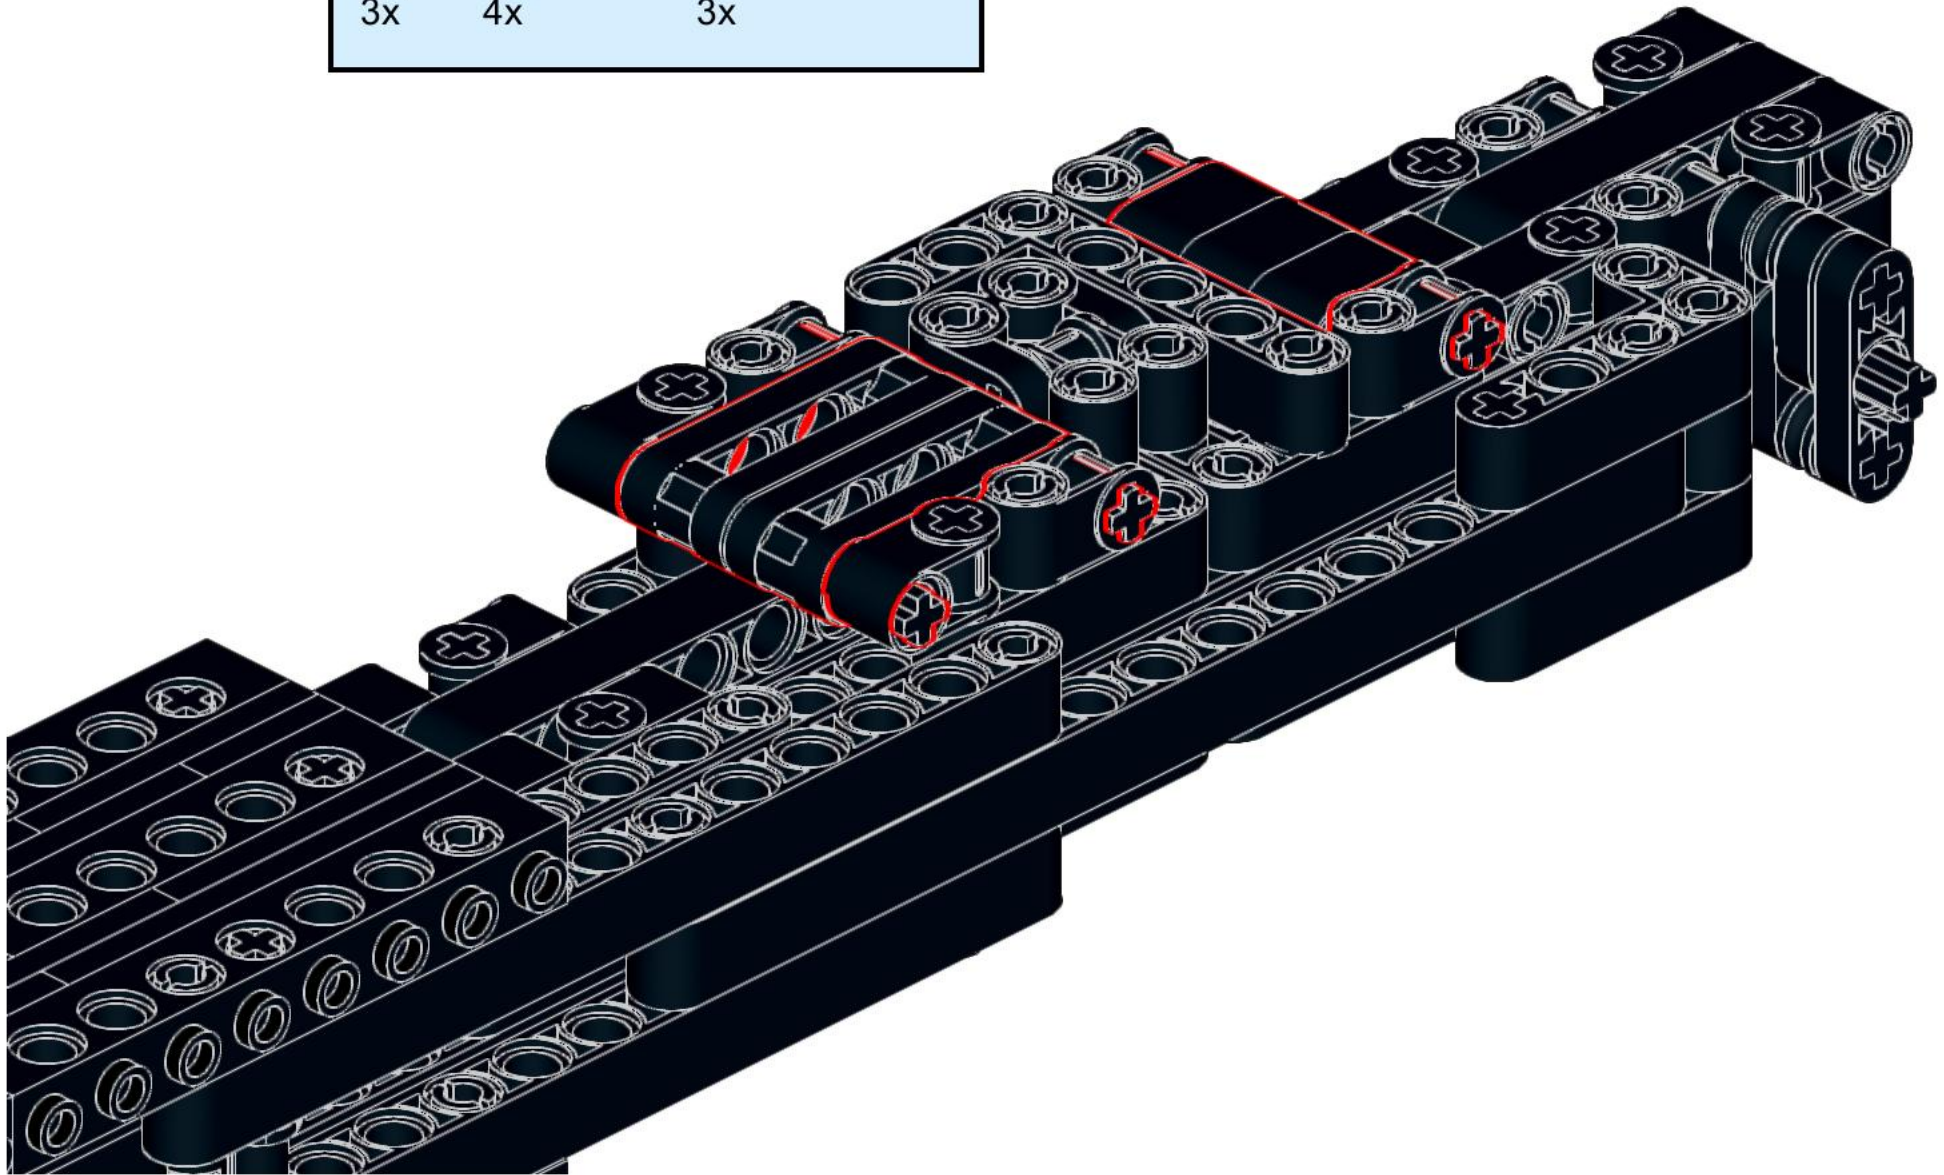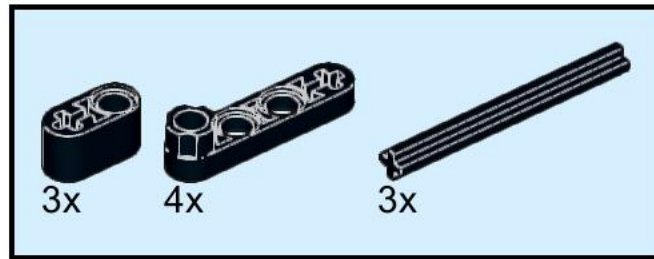



109

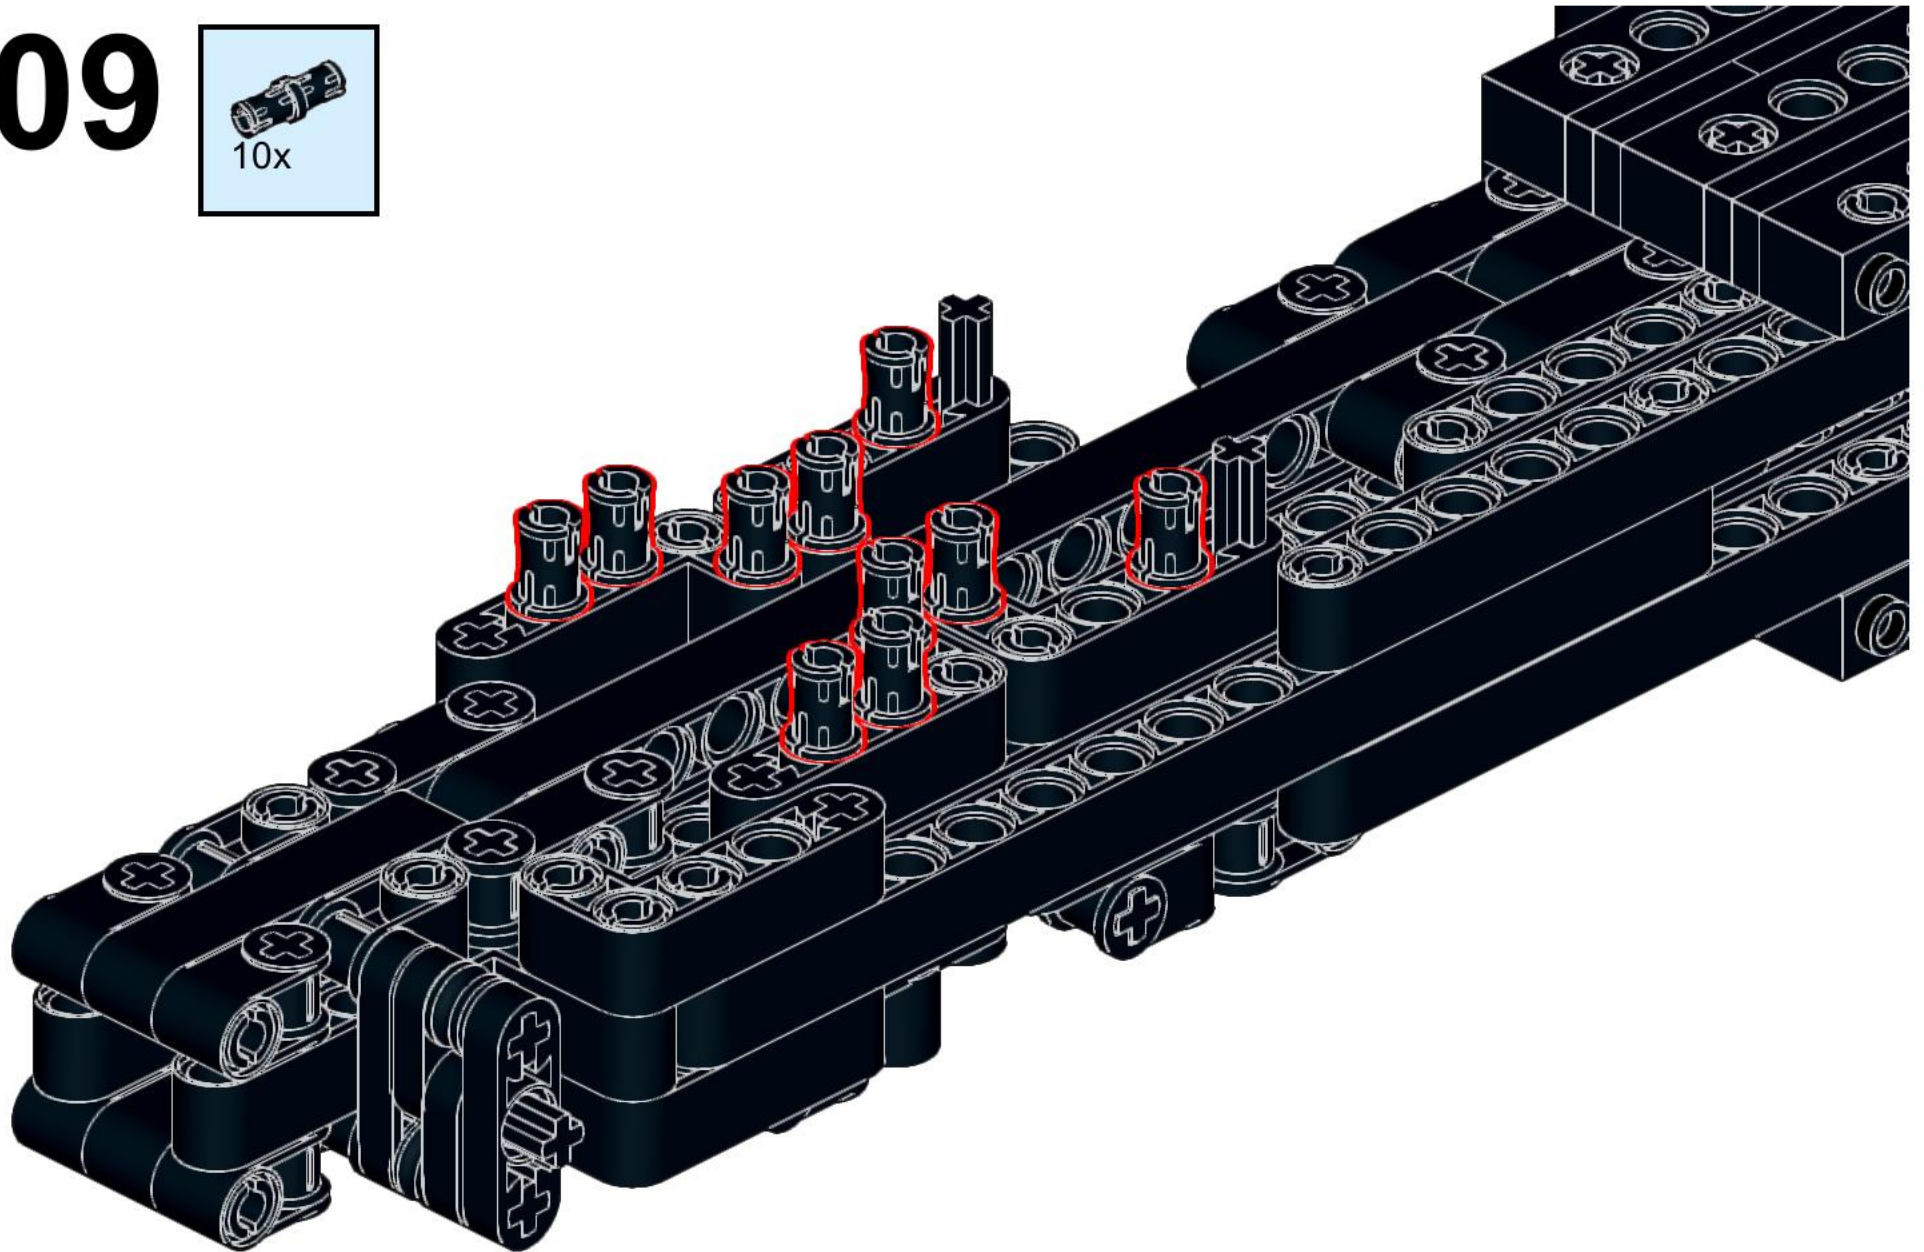



110

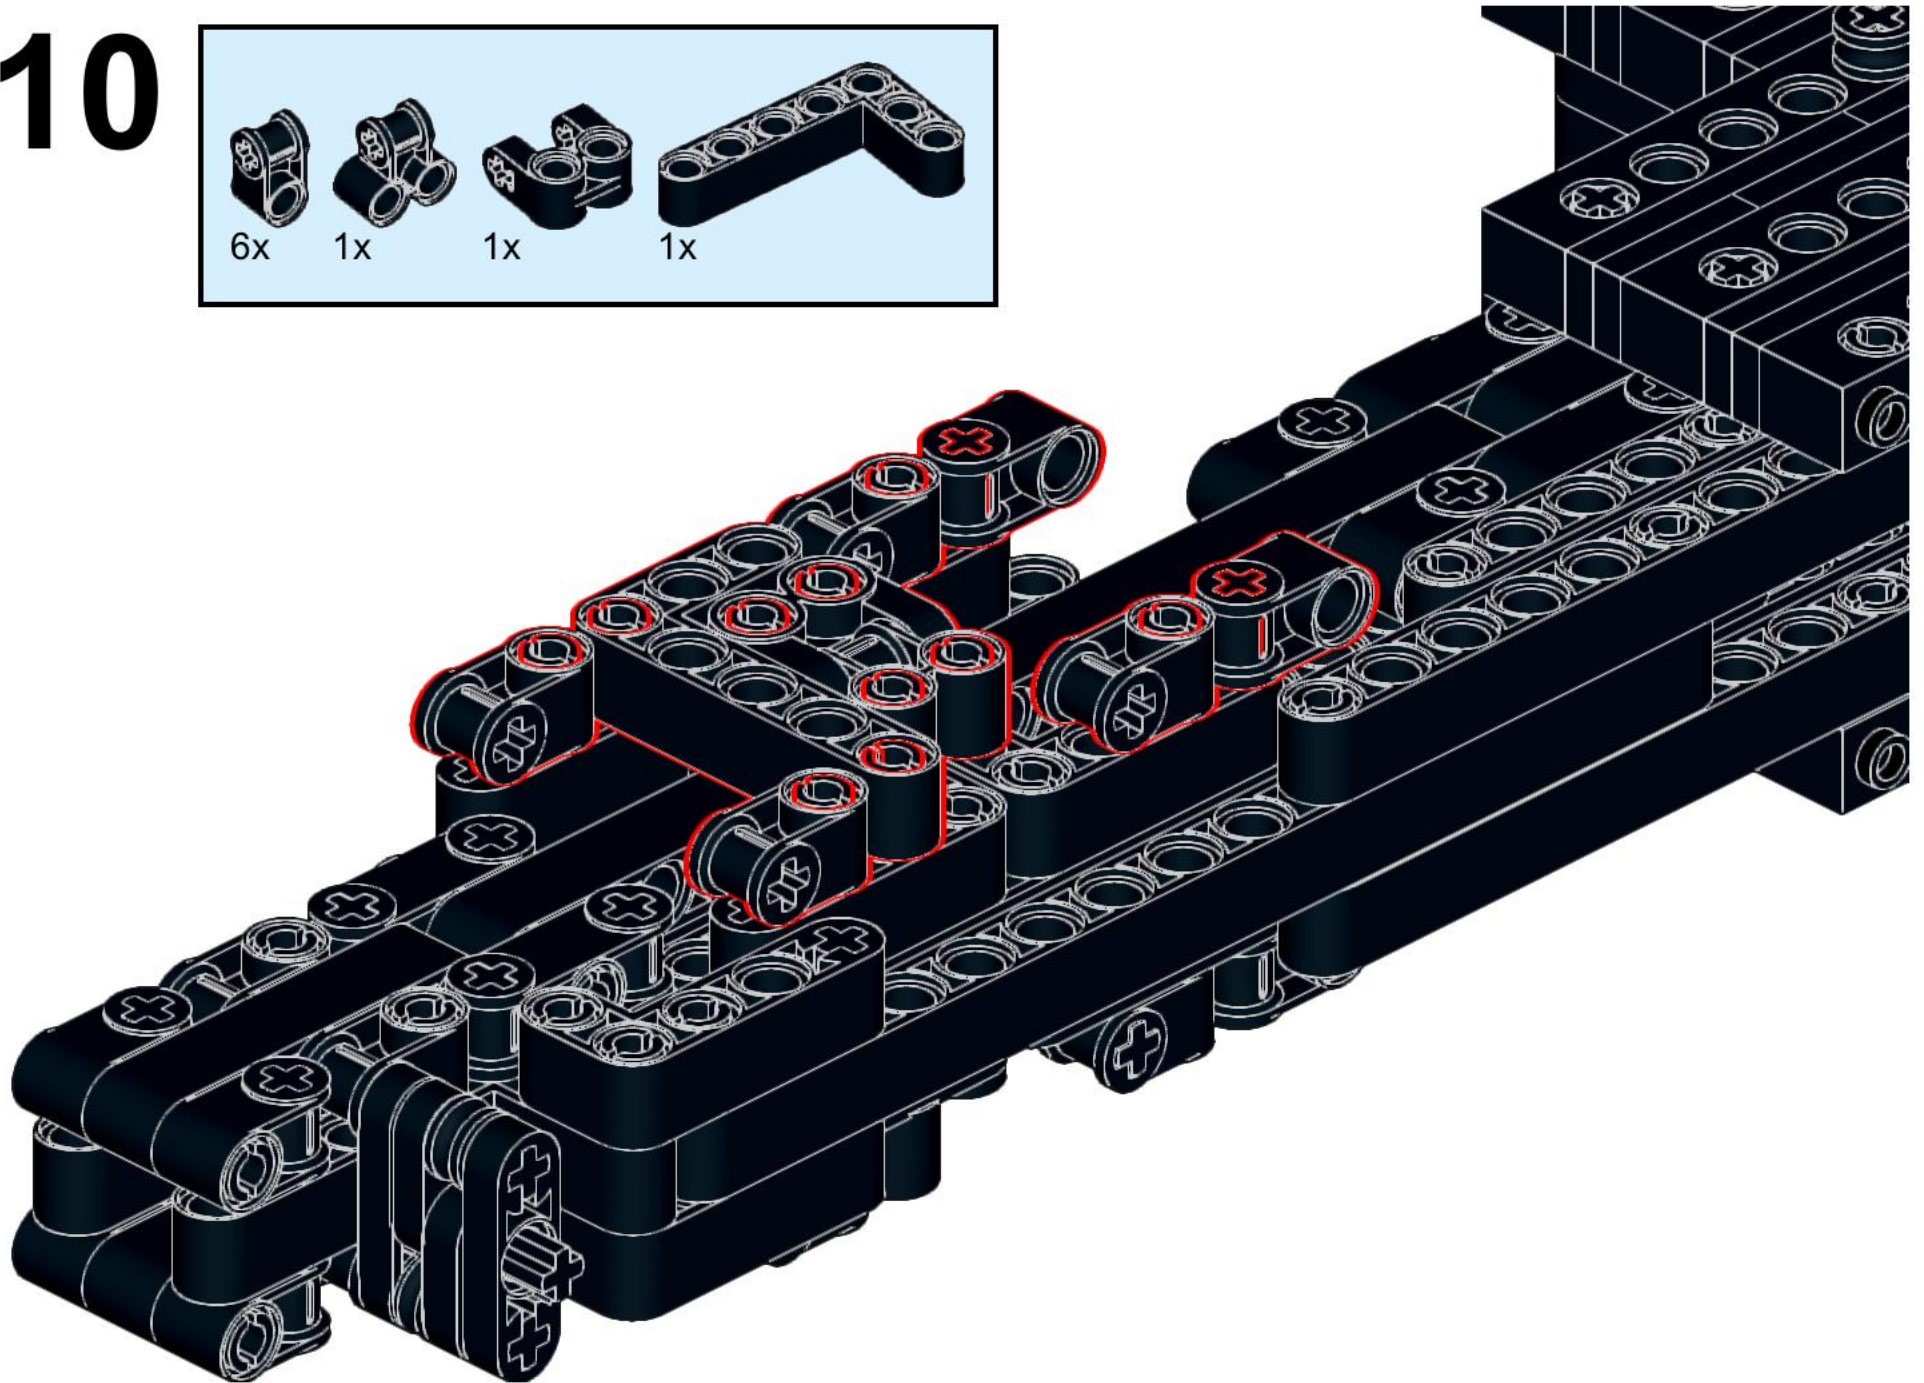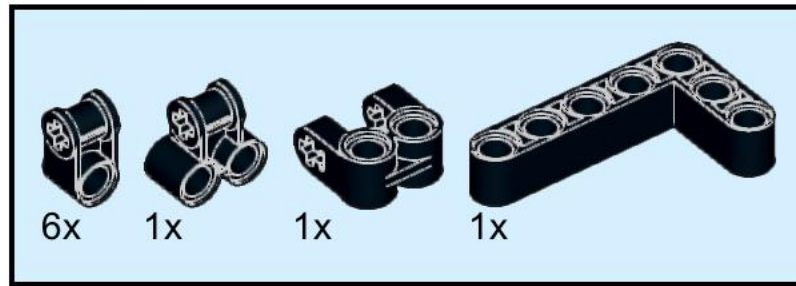


111

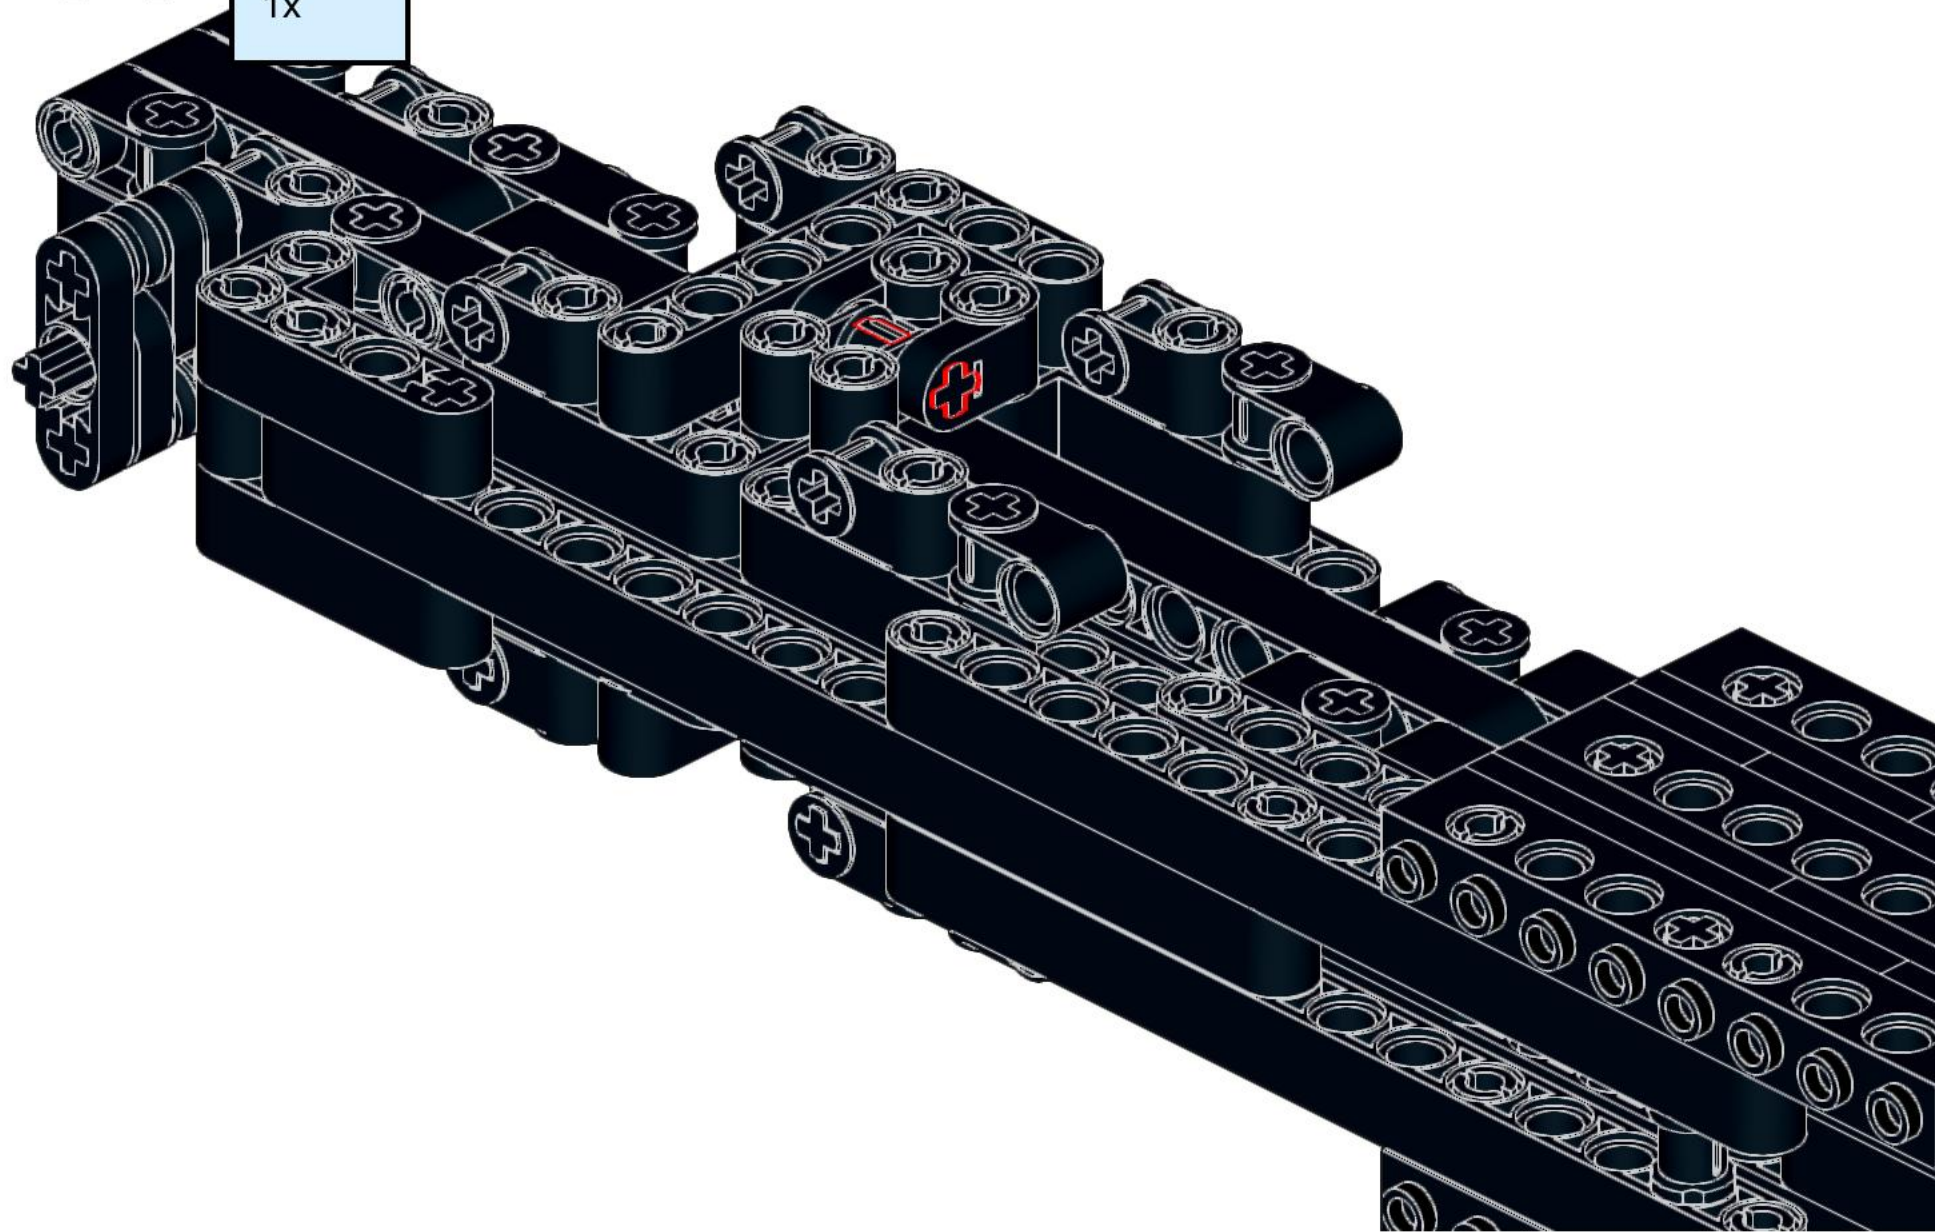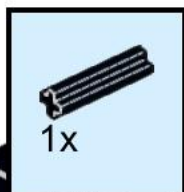



112

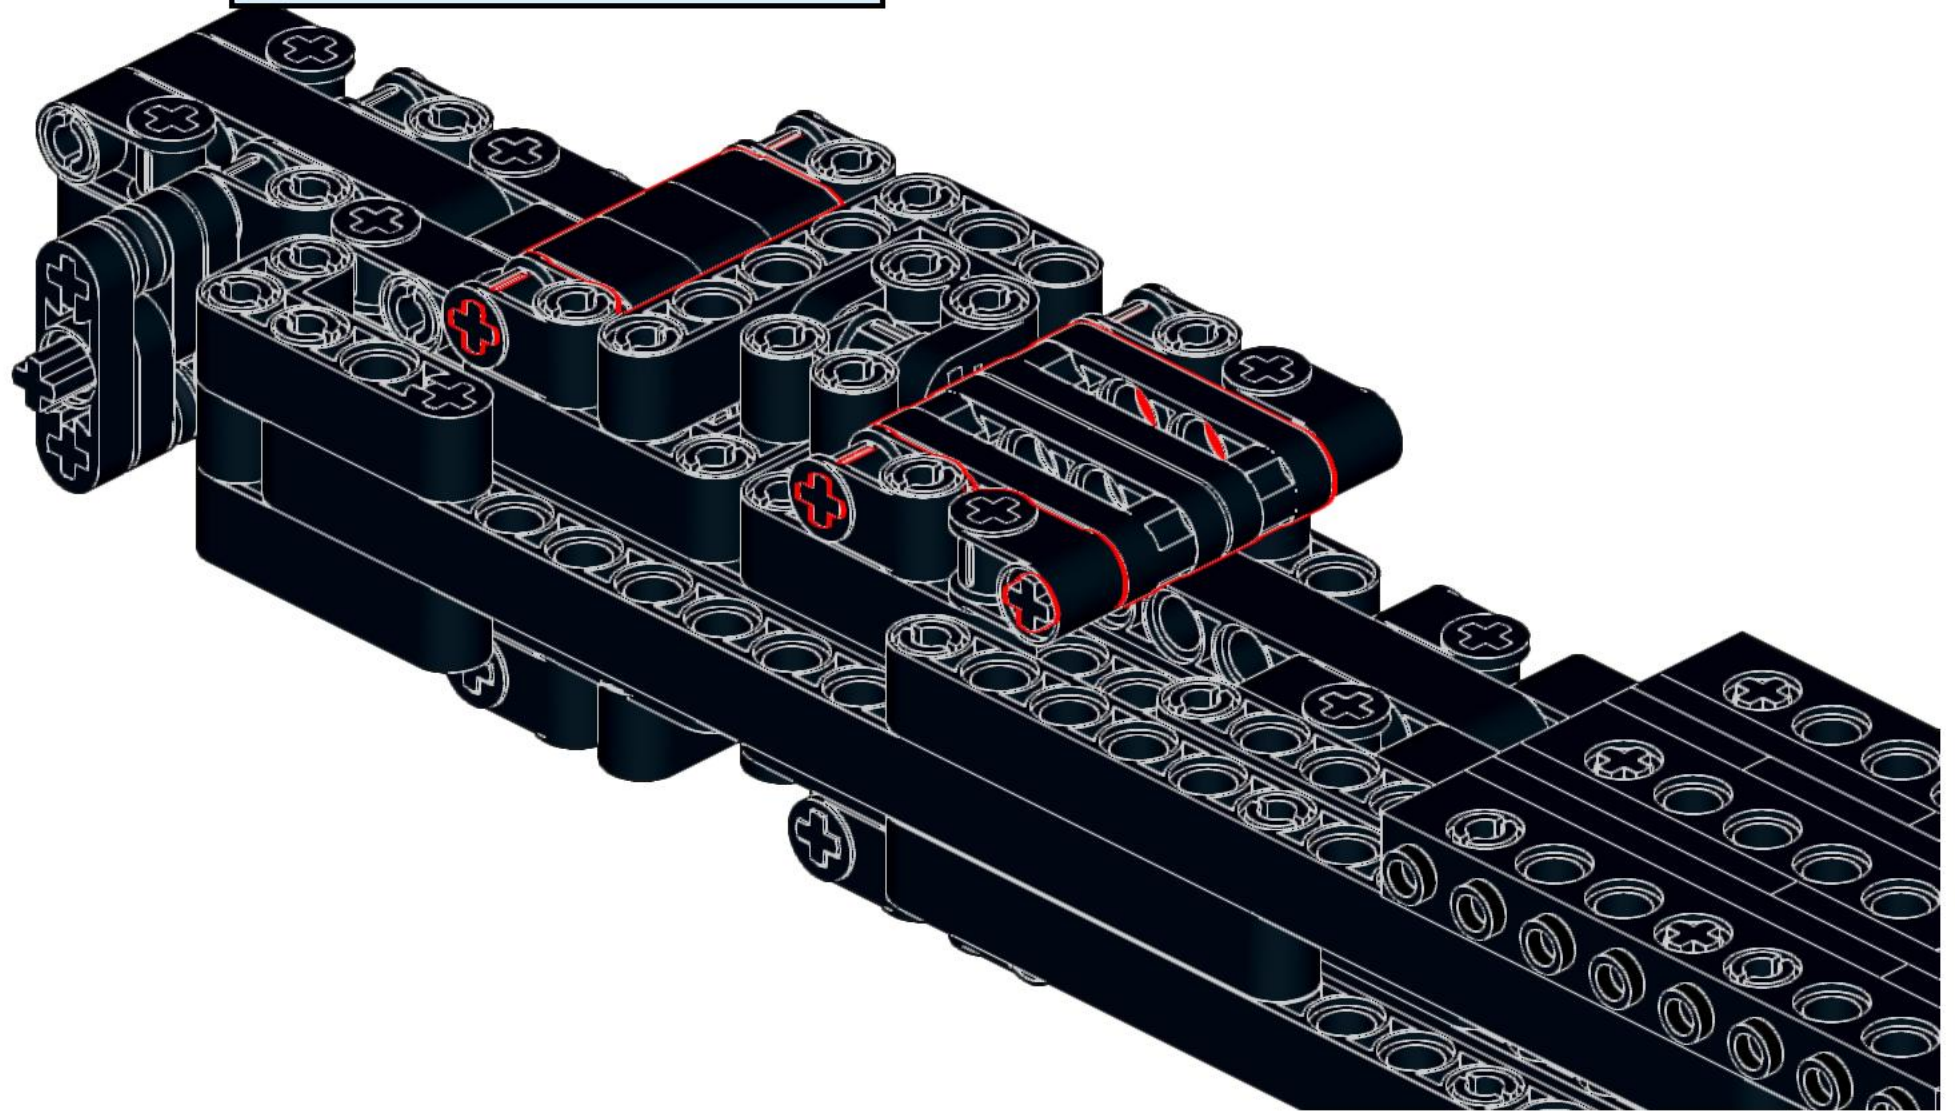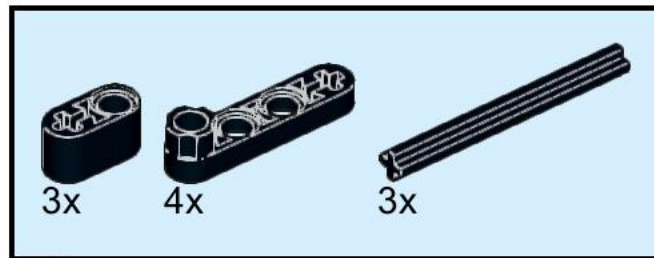

113

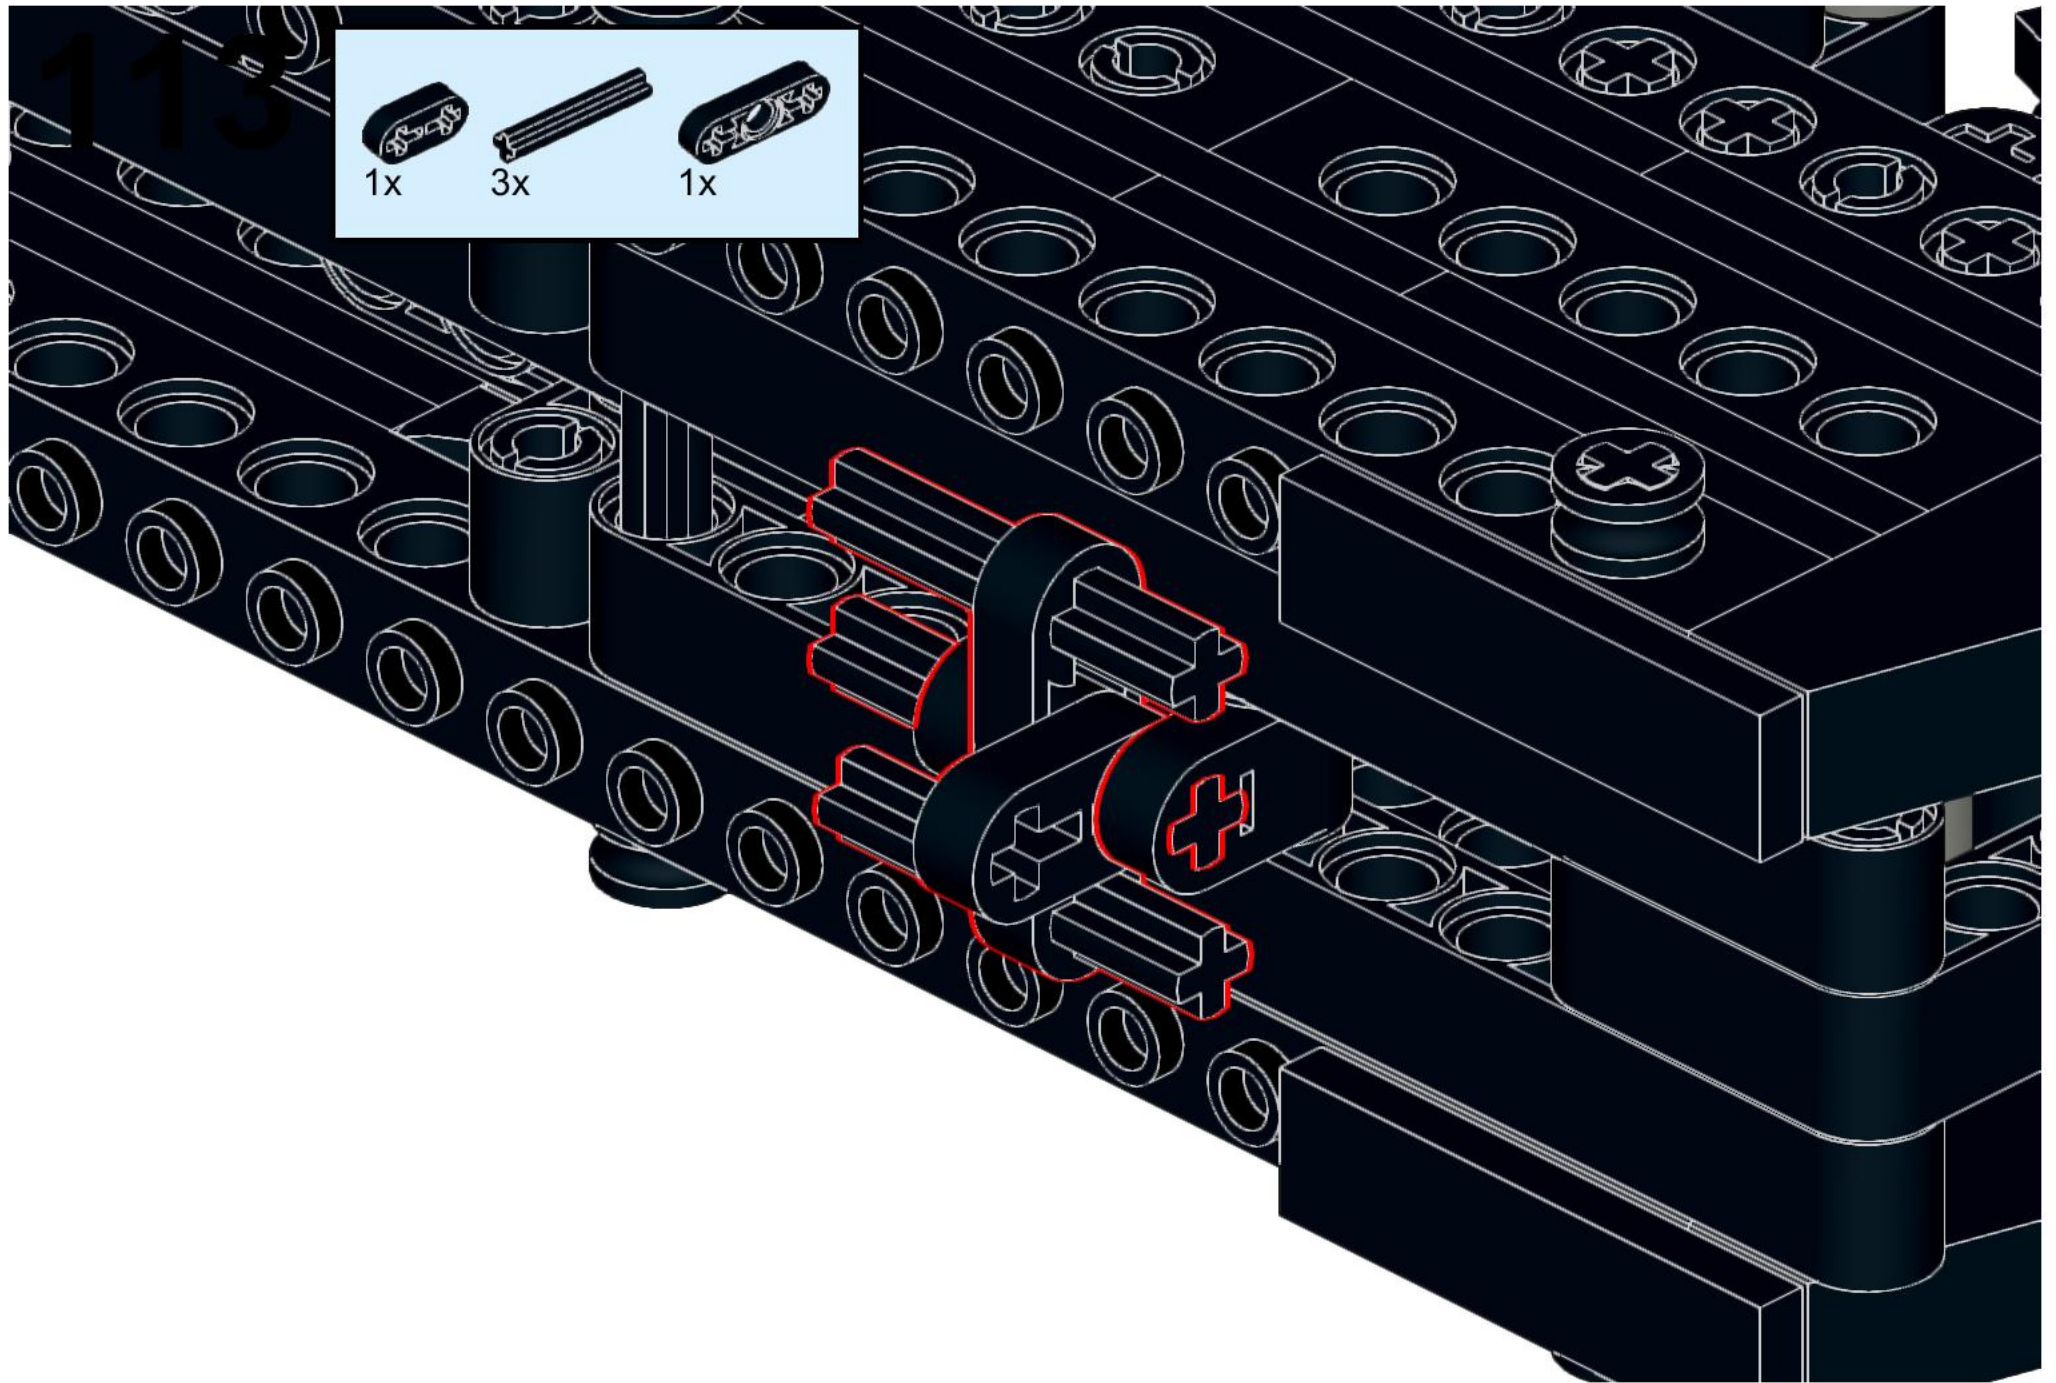

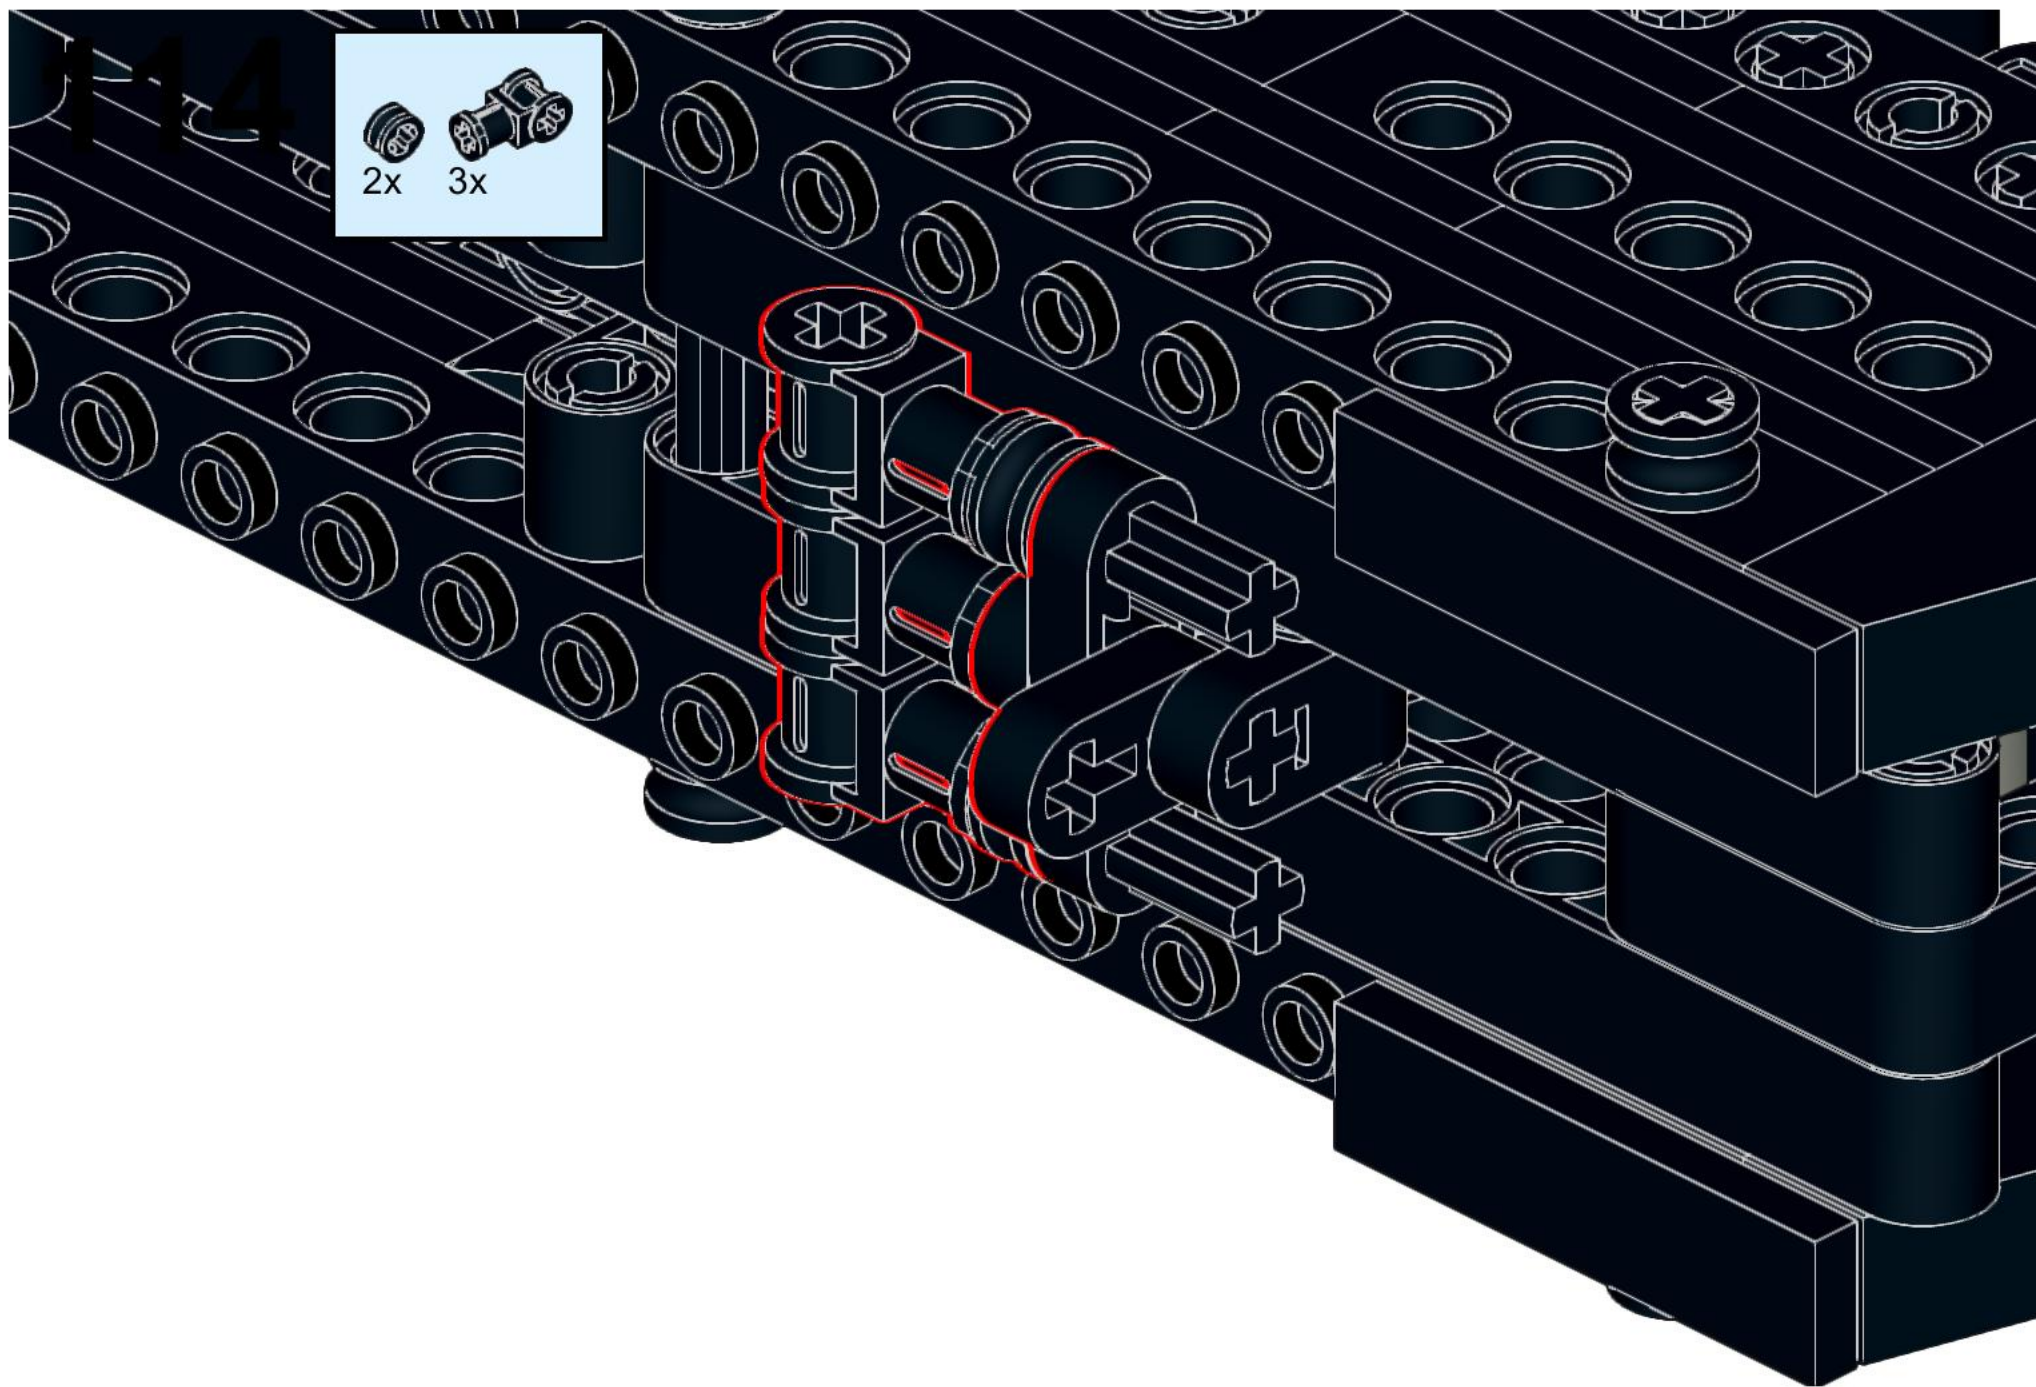

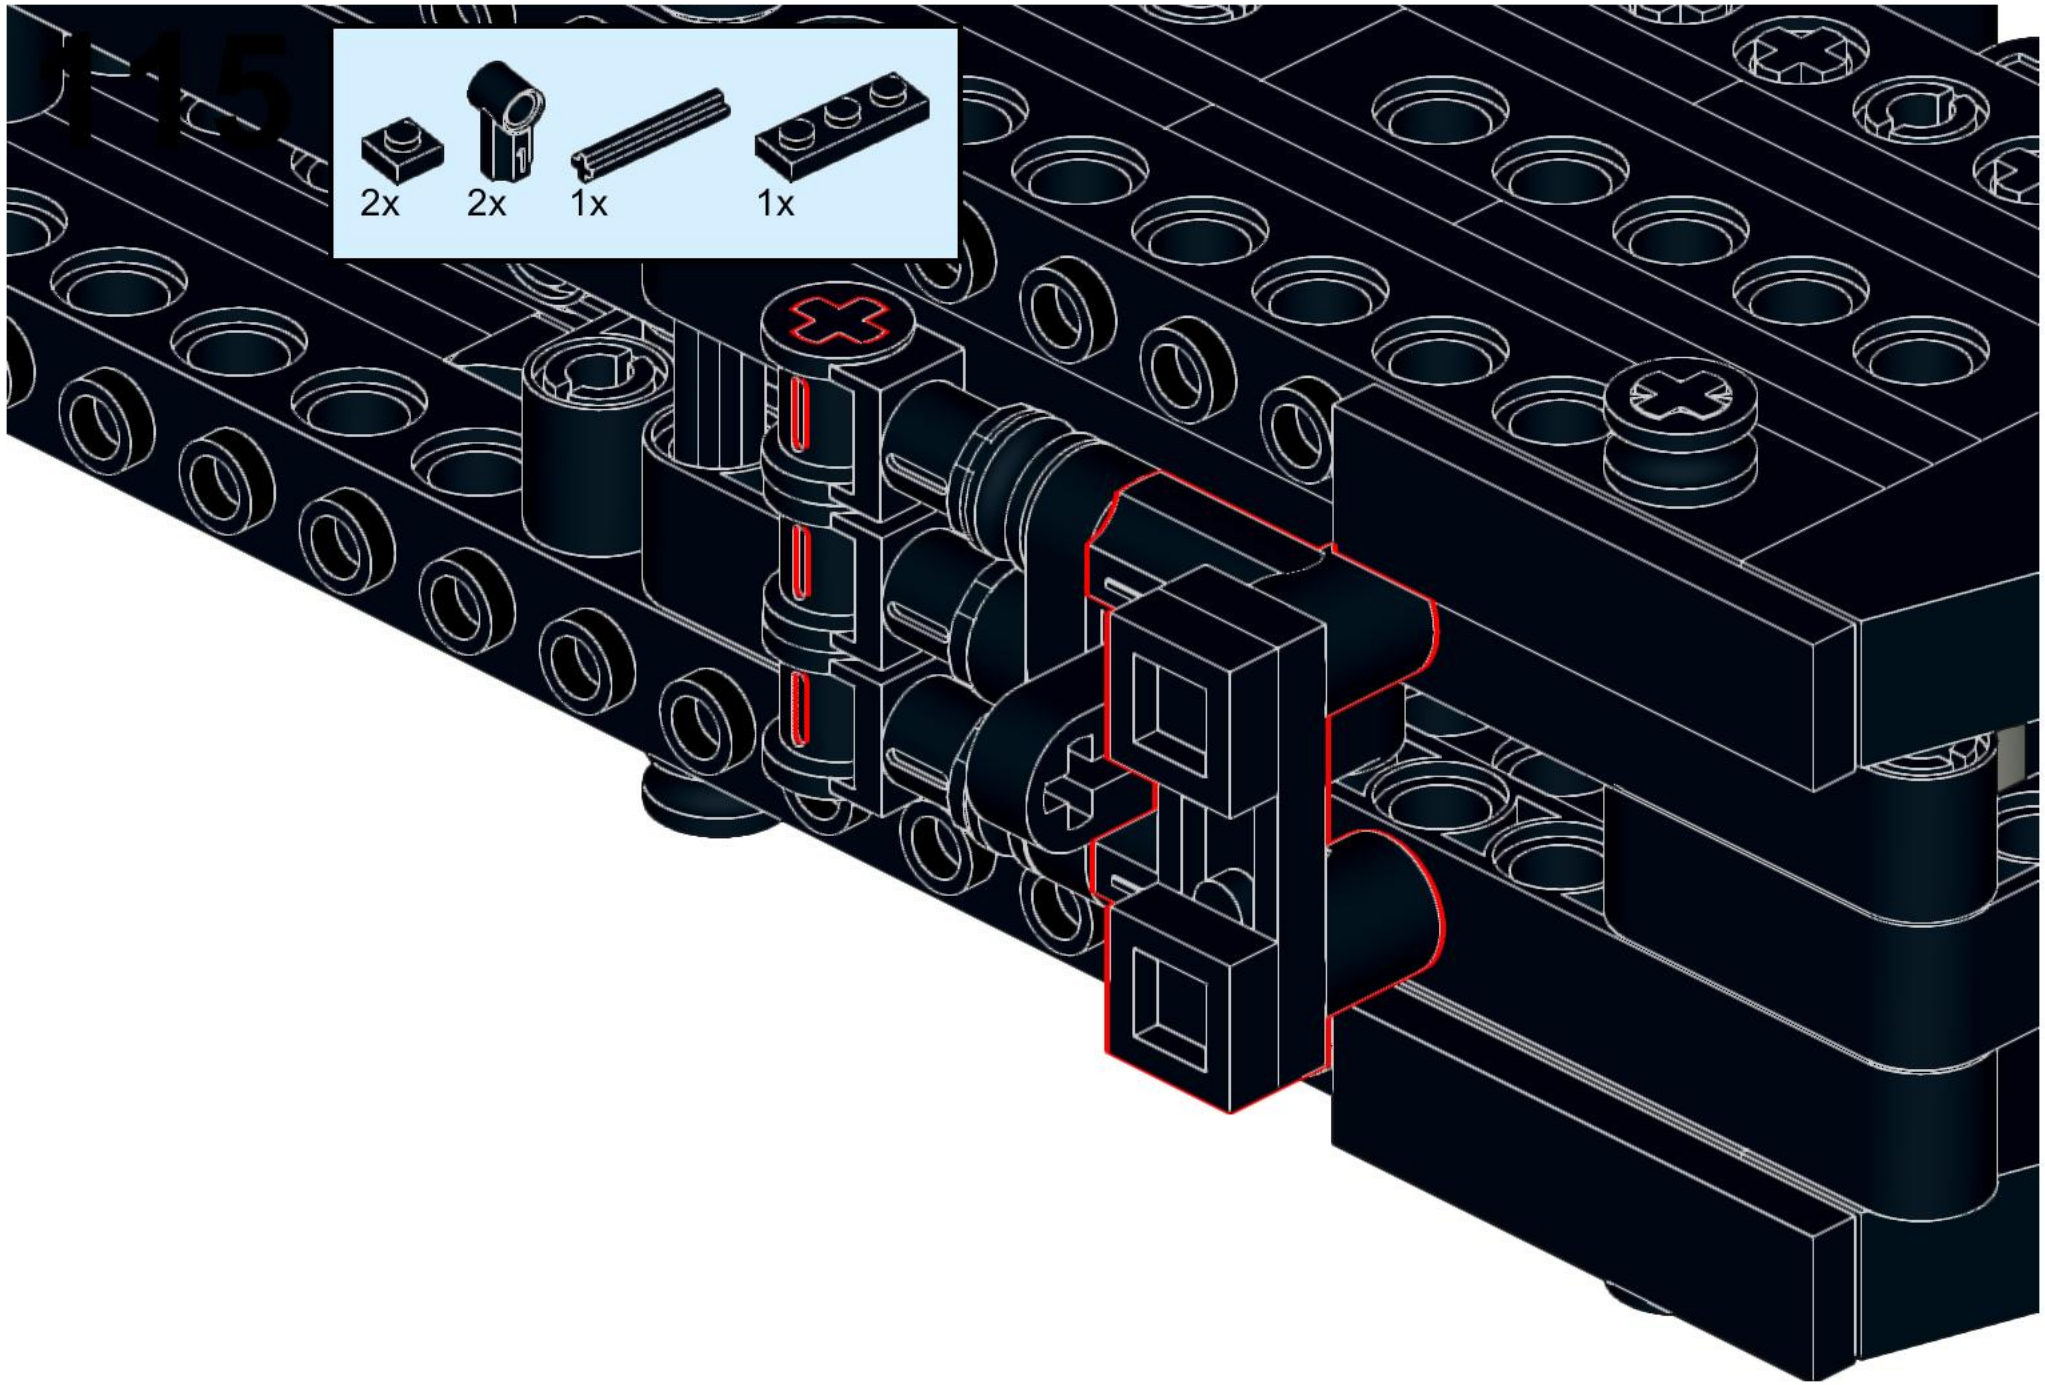

116

